



## Children's Picnic Table ASSEMBLY MANUAL

Copyright © 2011 PlayNation Play Systems, Inc.  
All Rights Reserved

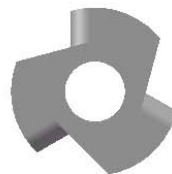
PlayNation Play Systems, Inc. • 190 Etowah Industrial Court • Canton, GA 30114 • (800) 661-7295

Latest Revision: September 8, 2011

#8 X 2"  
WOOD SCREW  
QTY: 48



5/16 X 2-1/4"  
HEX BOLT  
QTY: 12



5/16" T-NUT  
QTY: 12



5/16" WASHER  
QTY: 12

9

8

7

6

5

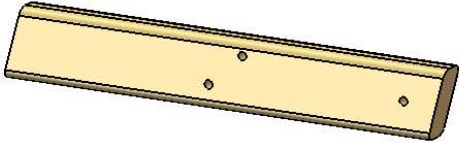
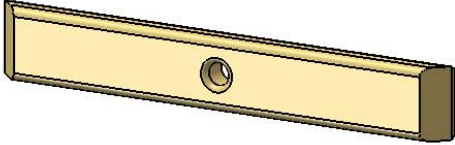
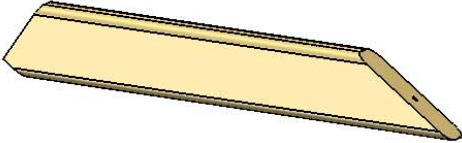
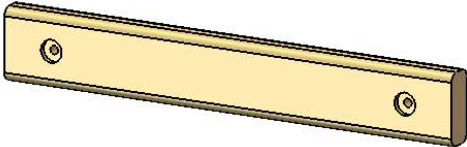
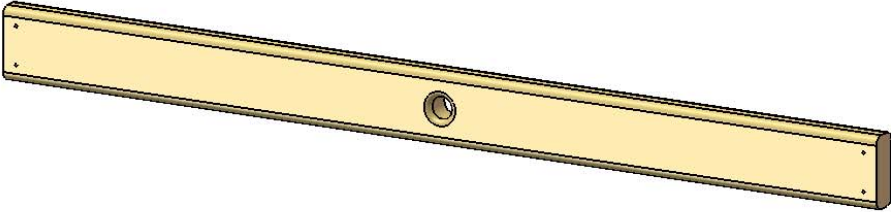
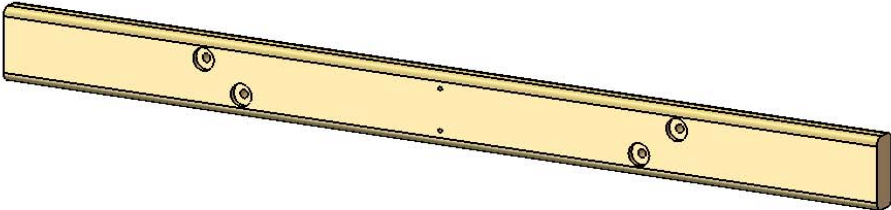
4





3

2

1

USE THE RULER TO THE RIGHT TO MEASURE YOUR BOLTS AND SCREWS. PICTURE VIEWS SHOWN ABOVE ARE 1:1 SCALE AND CAN BE USED TO MATCH BOLT AND SCREW SIZES.

PICTURE	DESCRIPTION	QTY.
	2 X 4 X 21-1/4" TABLE LEG	4
	2 X 4 X 21-1/2" TABLE STRINGER	1
	2 X 4 X 21-1/2" ANGLE SUPPORT	2
	2 X 4 X 21-1/2" TOP LEG SUPPORT	2
	2 X 4 X 42" CENTER LEG SUPPORT	1
	2 X 4 X 42" SEAT SUPPORT	2

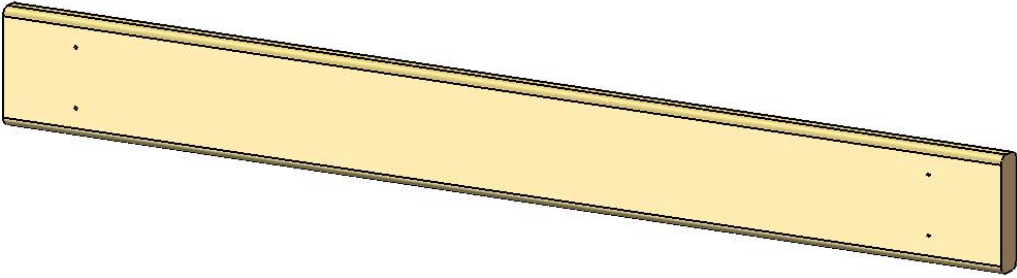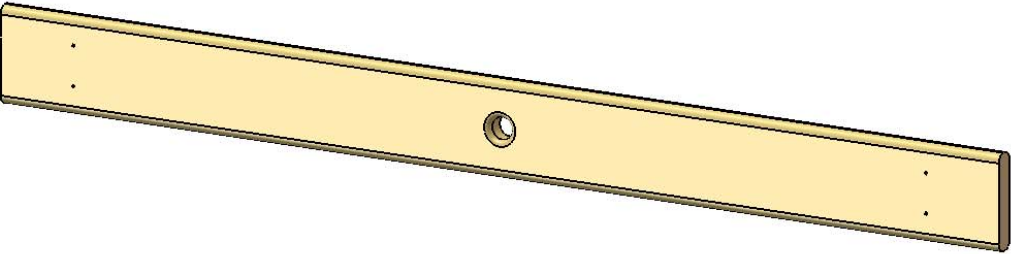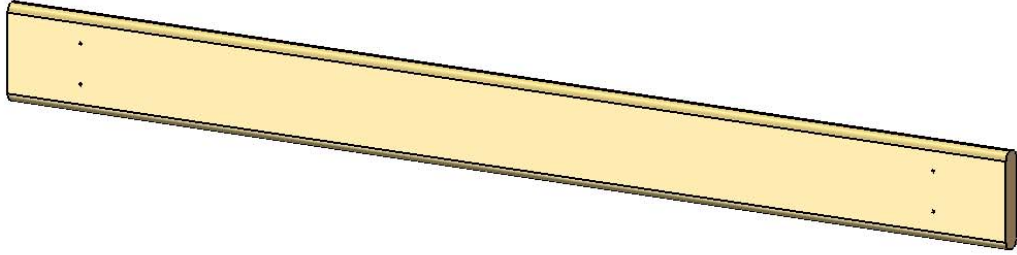PICTURE	DESCRIPTION	QTY.
	2 X 6 X 48" TABLE SEAT	2
	5/4 X 4 X 48" CENTER TABLE TOP	1
	5/4 X 4 X 48" TABLE TOP	4
	UMBRELLA ASSEMBLY	1

## STEP 1: LEG ASSEMBLY

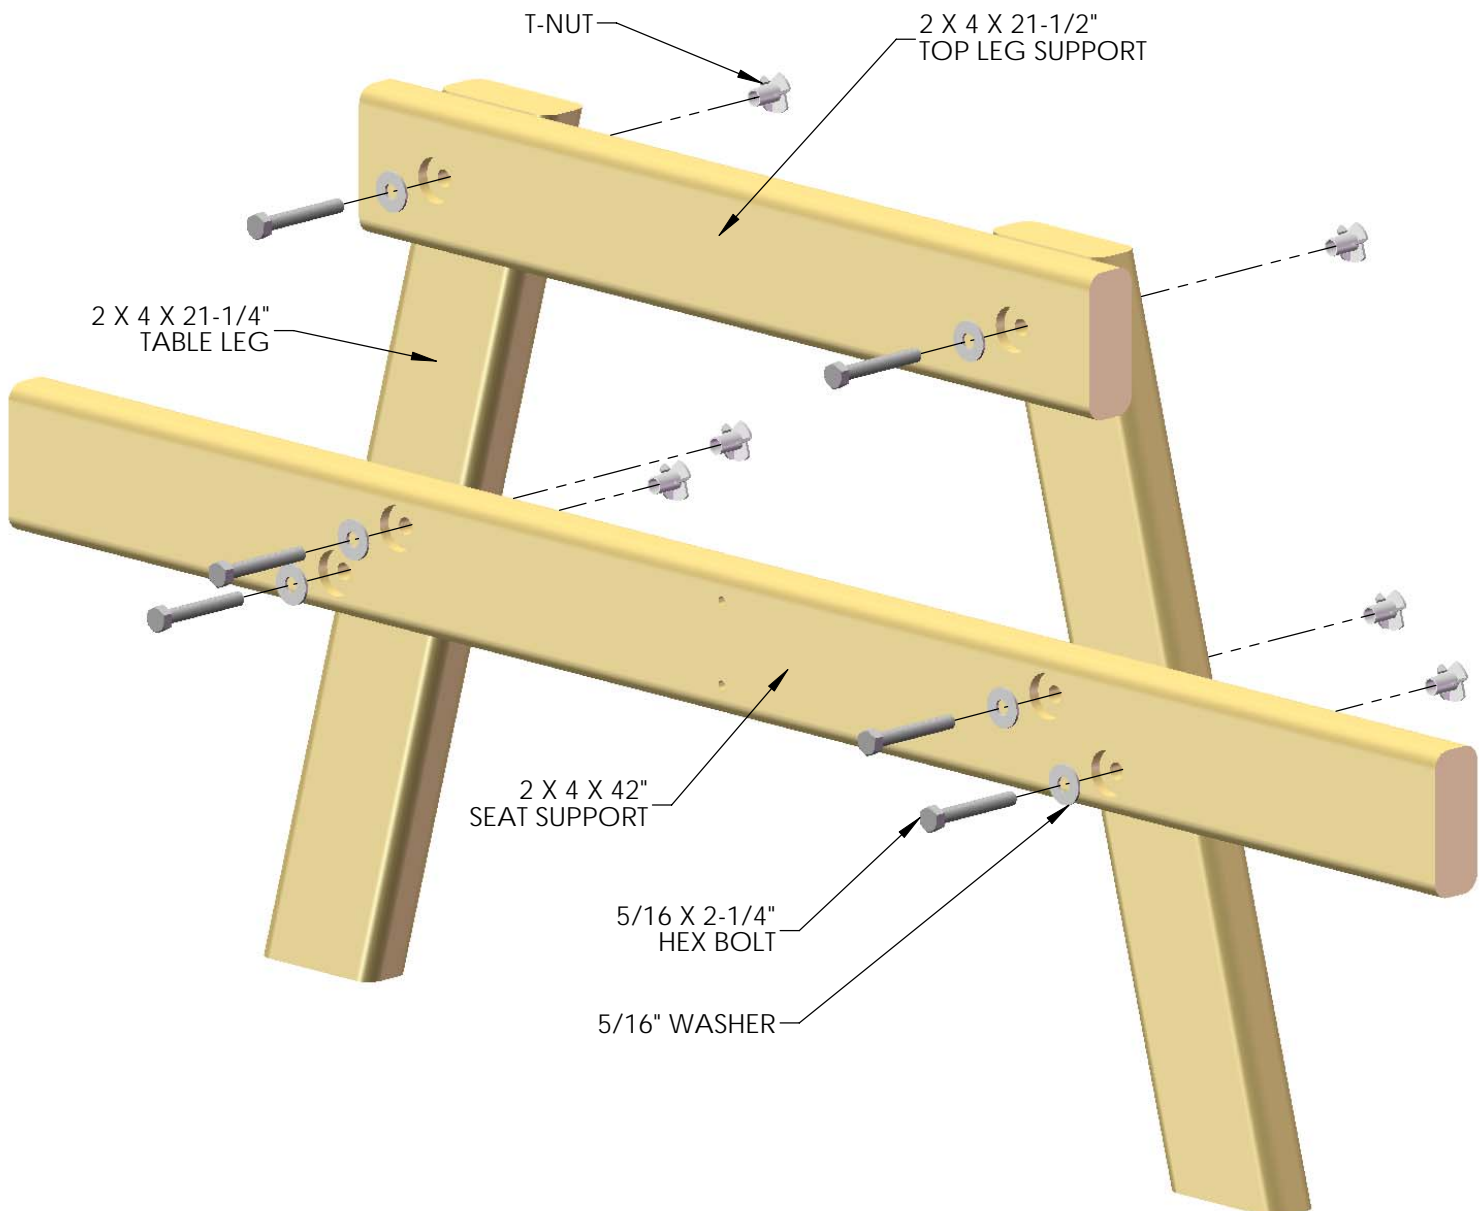
1: FIND TWO 2 X 4 X 21-1/4" TABLE LEGS. NOTE THE HOLE PATTERN ON THE LEGS AND POSITION THEM SO THAT THE END WITH ONE HOLE WILL BE AT THE TOP. THE ORIENTATION OF THE LEGS SHOULD LOOK LIKE THE SIDES OF THE LETTER "A".

2: DETERMINE WHICH SIDE WILL BE FACING THE INSIDE OF THE TABLE AND PLACE A T-NUT IN EACH OF THE HOLES. SET THE T-NUTS WITH A HAMMER UNTIL THEY ARE FLUSH/ALMOST FLUSH WITH THE FACE OF THE BOARD.

3: FIND A 2 X 4 X 21-1/2" TOP LEG SUPPORT BOARD AND LINE UP THE HOLES WITH THE HOLES AT THE TOP OF THE TABLE LEGS AND FASTEN WITH 5/16 X 2-1/4" HEX BOLTS AND 5/16" WASHERS.

4: FIND A 2 X 4 X 42" SEAT SUPPORT AND LINE UP THE HOLES IN THE SEAT SUPPORT WITH THE HOLES IN THE TABLE LEGS. FASTEN THE SEAT SUPPORT TO THE TABLE LEGS WITH 5/16 X 2-1/4" HEX BOLTS AND 5/16" WASHERS.


5: REPEAT THIS PROCESS TO CREATE ANOTHER SET OF LEGS FOR THE OTHER SIDE OF THE TABLE.



## STEP 2: CENTER LEG SUPPORT


1: FIND THE 2 X 4 X 42" CENTER LEG SUPPORT. TAKE NOTE OF THE TWO HOLES DRILLED IN EACH END OF THE BOARD.

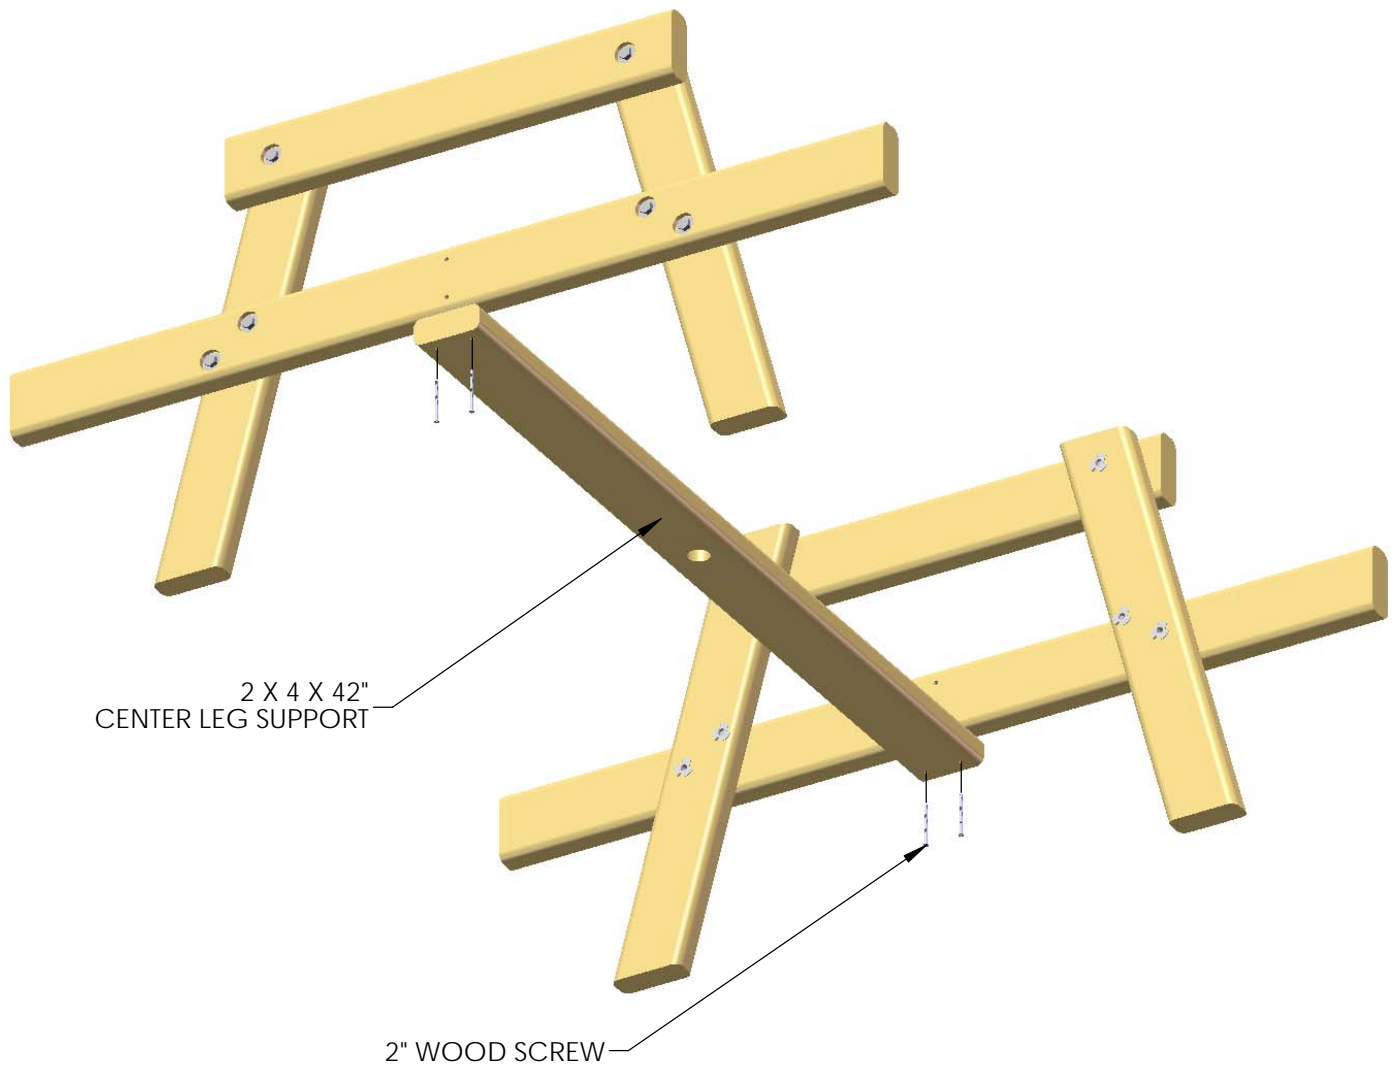2: CENTER THE BOARD UNDERNEATH THE SEAT SUPPORTS OF THE LEG ASSEMBLIES CREATED IN THE PREVIOUS STEP AND ATTACH WITH 2" WOOD SCREWS IN THE PRE-DRILLED HOLES.



## STEP 3: TABLE TOP

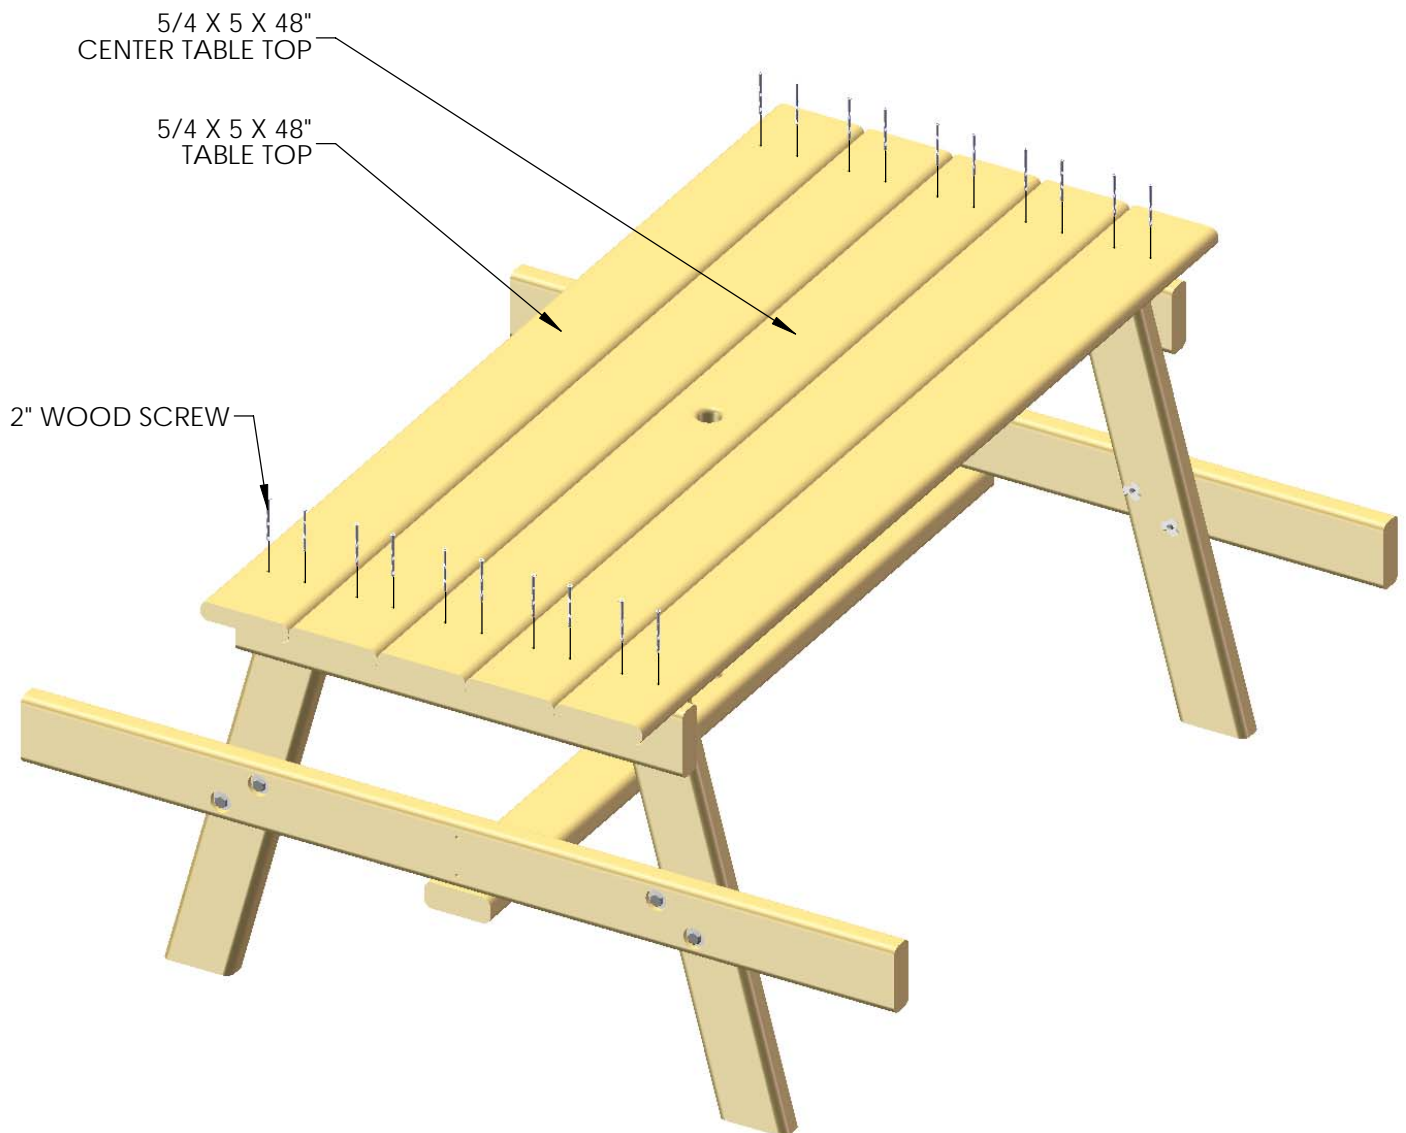
- 1: FIND ONE 5/4 X 5 X 48" CENTER TABLE TOP BOARD AND FOUR 5/4 X 5 X 48" TABLE TOP BOARDS. THE CENTER BOARD WILL HAVE A HOLE DRILLED ON-CENTER IN THE MIDDLE OF THE BOARD, AND ALL OF THE BOARDS WILL HAVE PRE-DRILLED HOLES IN EACH END.
- 2: CENTER THE CENTER TABLE TOP BOARD ON THE TOP LEG SUPPORTS AND ATTACH WITH 2" WOOD SCREWS IN THE PRE-DRILLED HOLES.
- 3: PLACE THE FOUR TABLE TOP BOARDS ON TOP OF THE TOP LEG SUPPORTS AND SPACE THEM EVENLY SO THAT THE BOARDS AT THE END OF THE TABLE TOP ARE FLUSH TO THE ENDS OF THE TOP LEG SUPPORT AND ATTACH WITH 2" WOOD SCREWS IN THE PRE-DRILLED HOLES.





## STEP 4: TABLE STRINGER

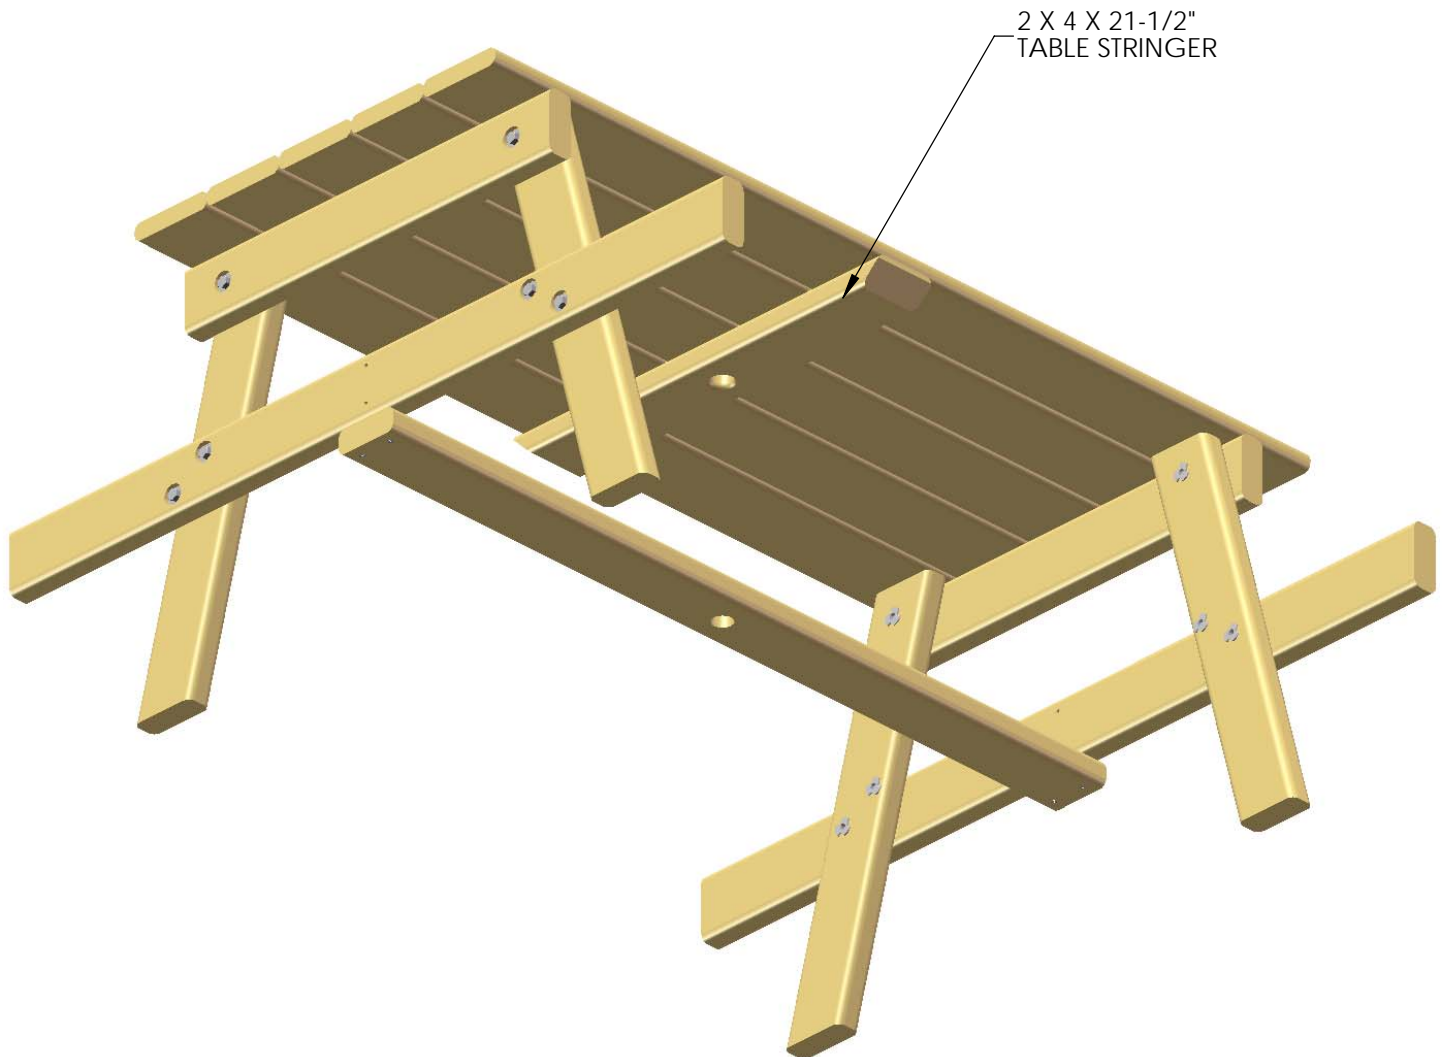
- 1: FIND THE 2 X 4 X 21-1/2" TABLE STRINGER. NOTE THE ANGLED ENDS OF THE BOARD, AND THE HOLE IN THE CENTER.
- 2: POSITION THE TABLE STRINGER SO THAT THE HOLE IN THE CENTER OF THE BOARD LINES UP WITH THE HOLE IN THE CENTER OF THE PICNIC TABLE, AND THE ANGLED ENDS ARE FACING DOWN.
- 3: FROM THE TABLE TOP, ATTACH THE TABLE STRINGER WITH TWO 2" WOOD SCREWS PER BOARD.





## STEP 5: ANGLE SUPPORTS

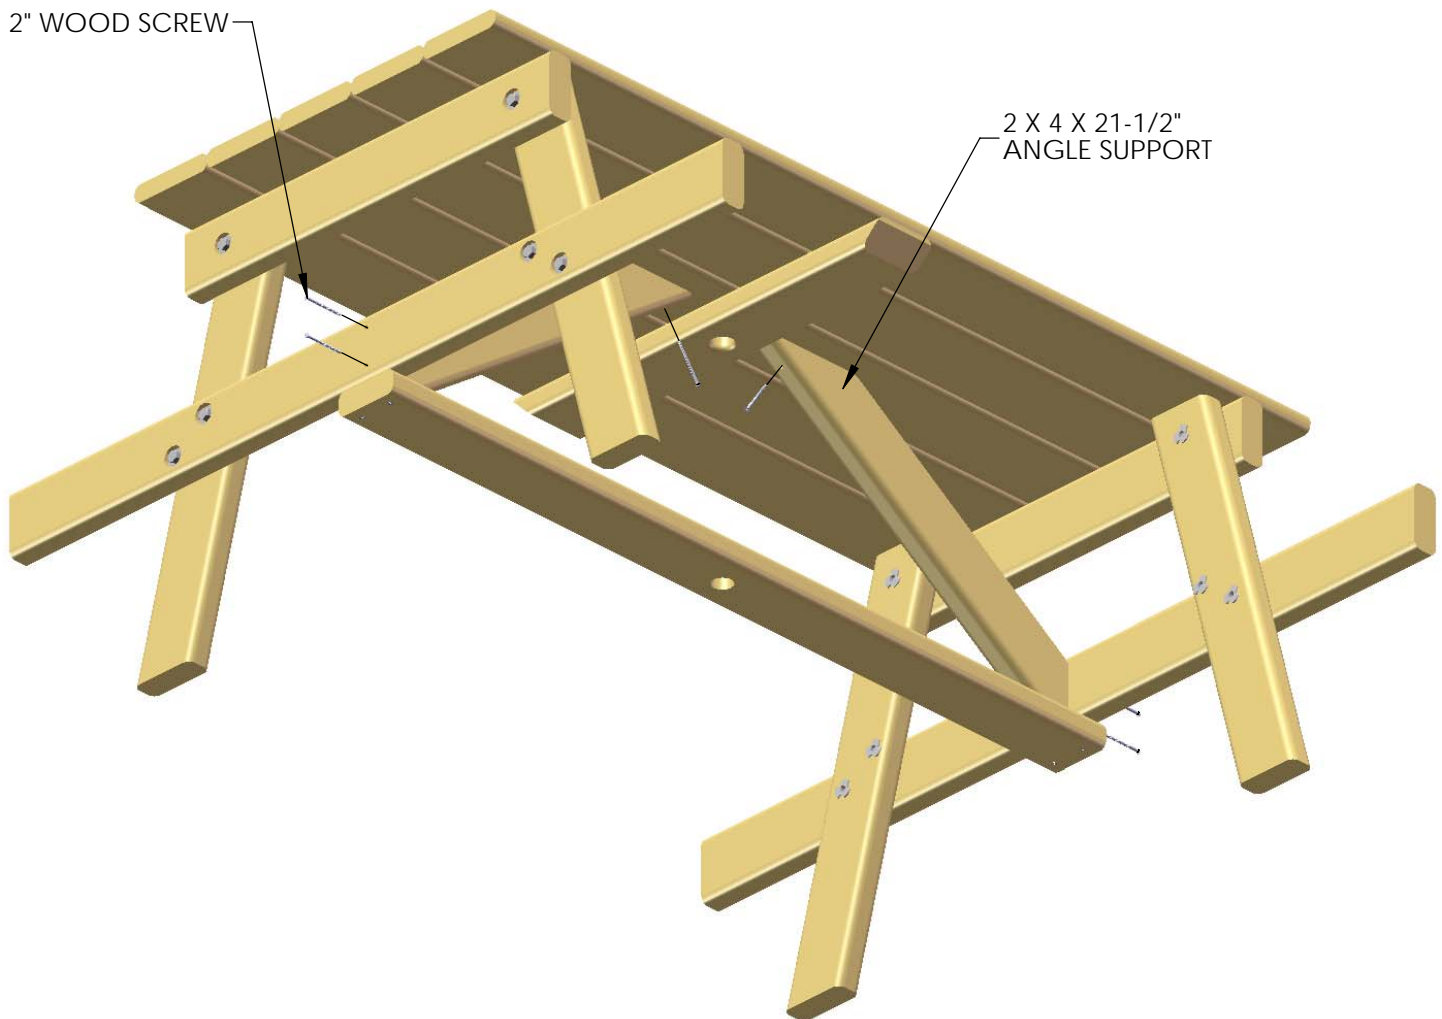
- 1: FIND THE TWO 2 X 4 X 21-1/2" ANGLE SUPPORTS. NOTE THE ANGLED ENDS OF THE BOARDS.
- 2: POSITION THE ANGLE SUPPORTS SO THAT THE LONG ANGLED END OF THE BOARD IS RESTING AGAINST THE BOTTOM OF THE TABLE, AND THE SHORT END IS RESTING ON THE CENTER LEG SUPPORT. THE OTHER ANGLED END WILL REST AGAINST THE SEAT SUPPORT, CENTERED ON THE TWO PRE-DRILLED HOLES IN THE SEAT SUPPORT.
- 3: USE 2" WOOD SCREWS IN THE PRE-DRILLED HOLES ON THE LONG ANGLED END OF THE BOARD, AND THE SEAT SUPPORT.



## STEP 6: SEATS

1: FIND THE 2 X 6 X 48" TABLE SEATS. NOTE THE PRE-DRILLED HOLES ON EACH END.

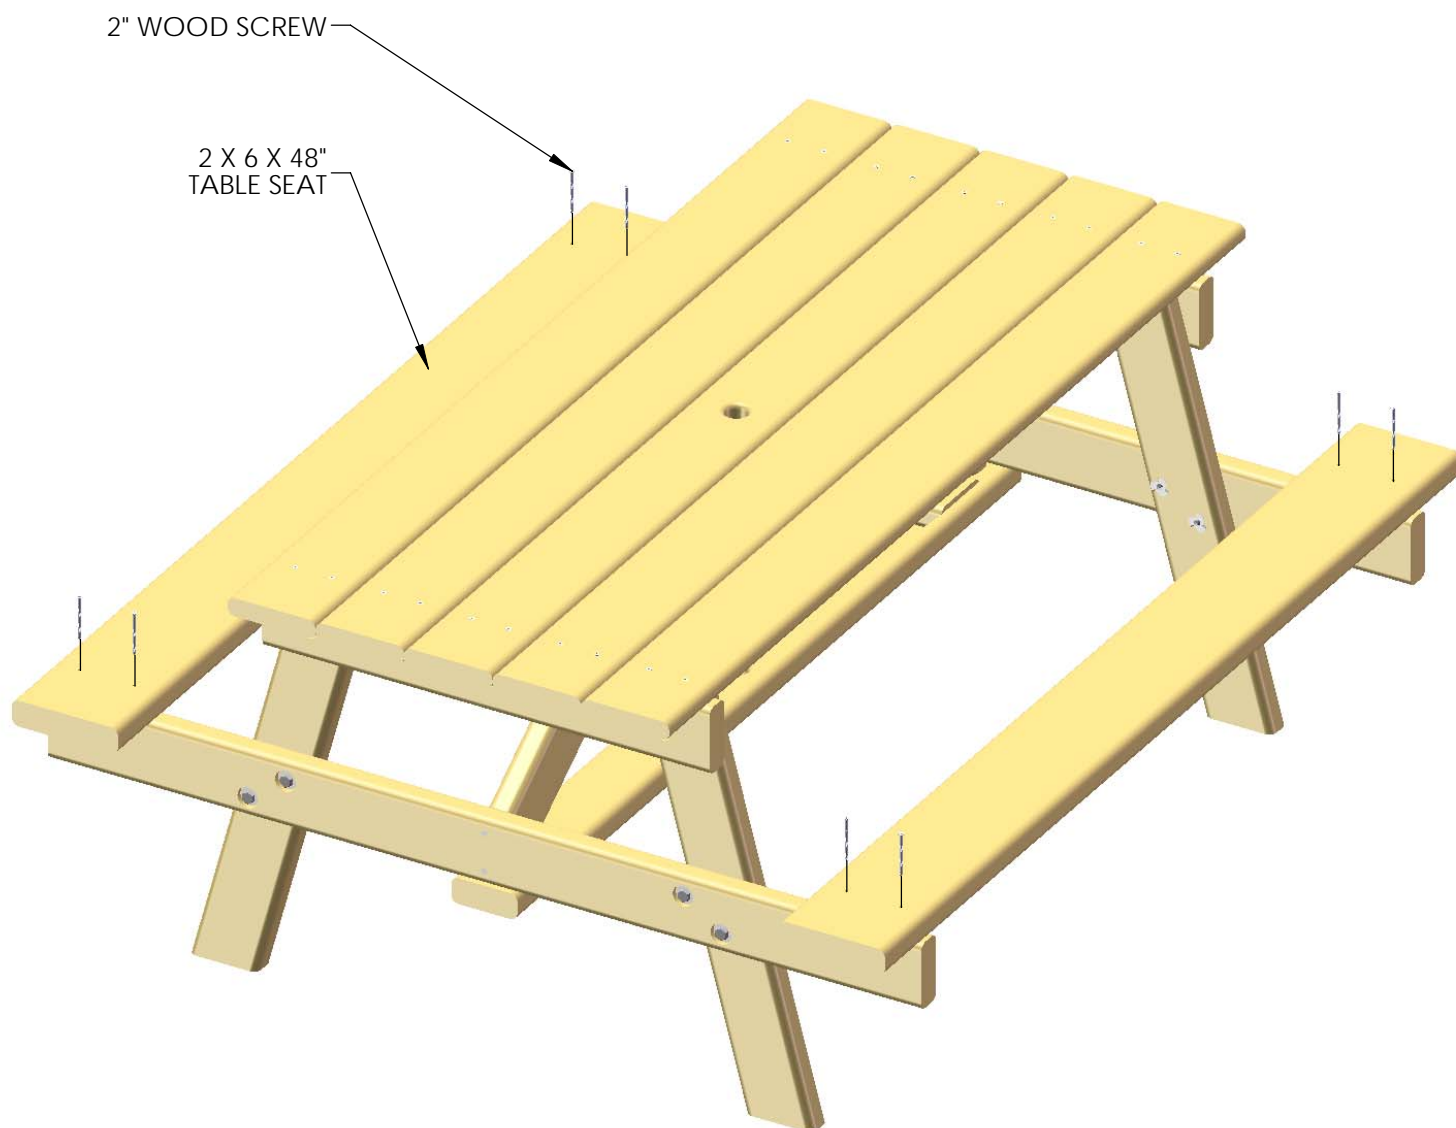2: CENTER THE SEATS AT THE ENDS OF THE SEAT SUPPORTS AND ATTACH WITH 2" WOOD SCREWS IN THE PRE-DRILLED HOLES.



## STEP 7: UMBRELLA

1: ASSEMBLE THE UMBRELLA AND PLACE THE POST THROUGH THE HOLE IN THE CENTER OF THE PICNIC TABLE, AND THROUGH THE HOLE IN THE CENTER LEG SUPPORT.

