

# gorilla<sup>®</sup>

playsets



## Sunscape

ASSEMBLY MANUAL  
Copyright © 2011 Gorilla Playsets  
All Rights Reserved

Gorilla Playsets • 190 Etowah Industrial Court Canton, GA 30114  
(800) 882-0272 • [www.gorillaplaysets.com](http://www.gorillaplaysets.com)  
Latest Revision: January 27, 2011

# TABLE OF CONTENTS

Warranty and Safety Guidelines.....	3-10
Leveling the Play Set, General Information, Definitions and Site Plan.....	10-14
Tool List, Hardware, Lumber and Accessory Checklist.....	15-28
Assembling the Ladder.....	Steps 1-3
Assembling the Rock Wall.....	Steps 4-6
Framing the Play Set.....	Steps 7-15
Installing Rock Wall Boards.....	Step 16
Installing Panel Boards, Deck Boards and Center Posts.....	Steps 17-19
Roof Assembly.....	Steps 20-28
Panel Slats.....	Step 29
Center Deck Supports.....	Step 30
Swing Beam Assembly.....	Steps 31-37
Tire Swing, Completing Rock Wall.....	Steps 38-40
Installing the Rope Ladder.....	Steps 41-42
Mounting Slide.....	Step 43
Attaching Steering Wheel, Telescope, and Safety Handles.....	Steps 44-46
Hanging Swings.....	Steps 47-48
Flag Kit and Name Plate.....	Steps 49-50

**PLEASE READ OWNER'S MANUAL CAREFULLY  
BEFORE STARTING ASSEMBLY!**

# IMPORTANT – PLEASE READ

As fresh lumber acclimates to its new environment, the natural tendencies of the tree can show itself in the form of checks, or “cracks” in the lumber. In almost all cases this is normal and it will not affect the structural integrity of your play set.

Cosmetic defects that do not affect the structural integrity of the product, or natural defects of wood such as warping, checking or any other physical properties of wood that do not present a safety hazard, are not covered by this warranty. Defects that develop because the product is exposed to extreme climate conditions are not covered by this warranty. Defects that develop as a result of faulty or improper installation of the product are also not covered by this warranty.

**Most cracks are not warrantable**, however if you believe that the integrity of your play set is compromised by this natural occurrence, please follow the warranty claim procedure found at [www.gorillaplaysets.com](http://www.gorillaplaysets.com). Click on the “Customer Care” tab on the left hand side of the page, then click on “Warranty Claim” and follow the instructions.

We appreciate your purchase and know that you will enjoy your play system for many years to come.

IF YOU HAVE MISSING OR DAMAGED PARTS OR NEED ASSISTANCE ASSEMBLING, PLEASE CALL Gorilla Playsets™ MANUFACTURING DIRECT. (800) 882-0272 FACTORY HOURS – MON.–FRI., 8AM-5PM EST DO NOT RETURN THIS PRODUCT TO THE RETAILER OR CONTACT THE RETAILER DIRECT. THE RETAILER DOES NOT STOCK COMPONENTS. PLEASE RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE. KEEP THEM IN A SAFE PLACE WHERE YOU CAN REFER TO THEM AS NEEDED.

## **CONTACT INFO:**

Gorilla Playsets  
190 Etowah Industrial Court  
Canton, GA 30114  
Tel. (800) 882-0272  
Fax. (678) 880-3329  
[custsrv@gorillaplaysets.com](mailto:custsrv@gorillaplaysets.com)

Check for revised instructions at [www.gorillaplaysets.com/category-s/92.htm](http://www.gorillaplaysets.com/category-s/92.htm)

# Thank you for choosing Gorilla Playsets®

We've included everything you need, except tools, to build your very own professional looking play set. When complete, your new play set should far exceed the quality of play set kits from other build-your-own companies. Our engineers and design team have over 30 years of playground experience. What we've developed is a play set that doesn't compromise quality for simplicity. Yet you'll appreciate how quick and easy construction really is! Our play set kits are designed for children ages 3 to 11. Gorilla Playsets® believes every child should have a play set and with our kits they can! You can rest assured your new play set is safe, durable and designed to hold up to the elements. As parents ourselves, we know how important the security and well-being of our children is, and this shows in all of our products.

Each play set features our step-by-step 3D illustrated manual, patented powder coated swing beam bracket, heavy-duty swing belts with chains, slide(s), accessories, plus all the required hardware and pre-milled lumber.

## Quality Lumber

At Gorilla Playsets, we use only the finest, hand selected lumber available. You can be assured that our lumber is strong, durable, and conforms to the national standards for use in children's play equipment. It's this quality that allows us to offer a 10 year warranty on the lumber used in our play sets.

# Limited Manufacturers Warranty

Gorilla Playsets® (“Gorilla”) warrants its play sets to be free from defects in workmanship and materials, under normal use and conditions at its original installation, for 10 years for structural wood components and for one year for all other components (e.g., hardware, plastics, tarps, rope ladder, etc.)

Cosmetic defects or natural defects of wood (e.g., warping, seasonal checking or cracking, knots, or knot holes, etc.) that do not affect the structural integrity of the product are not covered by this warranty. Defects that develop because the product is exposed to extreme climate conditions, or that develop as a result of faulty or improper installation of the product, are not covered by this warranty. Fading or discoloration of any part or accessory, cracks in plastic components, surface rust on hardware, and chips on powder coated materials are not considered defects in material as long as they do not affect the functionality or structural integrity of the part or component.

It is the owner’s responsibility to properly maintain the play set. Instructions for proper maintenance can be found on Gorilla’s website. Imperfections or defects that develop because of a failure to properly maintain the play set are not covered by this warranty.

Gorilla will repair or, at its discretion, replace any part within the stated warranty period that is defective in workmanship or materials. This decision is subject to verification of the defect, which, at Gorilla’s discretion, may be accomplished by submitting photographs or by delivery of the defective part to Gorilla. Any warranty claim must include proof of purchase, including the date of purchase.

This warranty is valid only if the product is used for the purpose for which it was designed and installed at a residential, single-family dwelling. This warranty is void if the product is put to commercial or institutional use. This warranty does not cover (a) products that have been damaged by acts of God, negligence, misuse, or accident, or that have been modified or repaired by unauthorized persons; (b) the cost of labor; or (c) the cost of shipping the product, any part, or any replacement product or part.

GORILLA DISCLAIMS ALL OTHER REPRESENTATIONS AND WARRANTIES OF ANY KIND, EXPRESS, IMPLIED, STATUTORY, OR OTHERWISE, INCLUDING THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. GORILLA WILL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES. This warranty is valid only in the United States of America, is nontransferable and does not extend to the owners of the product subsequent to the original purchaser, and only applies to the product as originally installed (in other words, installing the product and then later disassembling and reinstalling the product at the same or another location voids the warranty). Some states do not allow limitations on implied warranties or exclusion of incidental or consequential damages, so these restrictions may not be applicable to you. This warranty gives you specific legal rights. You may also have other rights which vary from state to state.

# IMPORTANT SAFETY GUIDELINES

This product is intended for residential use only and not intended for use in any public setting. A safety surface such as mulch or recycled tire should be used under the play set to prevent injury from falls. Also a 6 foot safety zone should be used around the entire play set.

As with any home project, good judgment and respect for power tools will greatly reduce the risk of injury. Gorilla recommends you follow all tool manufacturers' safety guidelines. Always wear eye protection and safety gloves to prevent injury. In several phases of construction two people may be required for lifting and securing of lumber. While play set is being constructed, please keep children off the equipment until the project is complete. Bolts and screw heads should be checked regularly for tightness. The ground ladder, rope ladder, slide, swings and other areas where children spend a majority of their playtime should be checked more frequently.

Gorilla shall not be liable for incidental, indirect or consequential damages or injuries that result from the building and/or playing on our play sets. Adult supervision is recommended anytime a play set is being used.

## WEIGHT LIMITS FOR GORILLA PLAYSETS

- FORT PLATFORMS: 800 LBS. TOTAL WEIGHT
- SWING BELTS: 175 LBS.
- GLIDER SWINGS: 70 LBS. PER CHILD
- TRAPEZE: 125 LBS.
- FULL BUCKET SWING: 50 LBS.
- TODDLER BUCKET SWING: 50 LBS.
- INFANT SWING: 35 LBS.
- TIRE SWING: 125 LBS. TOTAL WEIGHT
- ROPE LADDER: 75 LBS.
- ROCK WALL: 150 LBS.
- ALL SLIDES: 125 LBS.

Gorilla recommends that the weight limits for all components must not be exceeded. Failure to adhere to these and other safety guidelines could result in damage to the play set and injury to the users.

## **Safety and Maintenance Tips for Your New Play Set:**

**NOTE: Your children's safety is our #1 concern. Observing the following statements and warnings reduces the likelihood of serious or fatal injury. Please review these safety rules regularly with your children.**

- This play set is designed for the use of 4 occupants who have a combined weight not exceeding 800 pounds on the elevated floor, 3 occupants who have a combined weight of 525 pounds on the swing area, for a total Unit capacity of 7 occupants who have a combined weight of 1325. (this weight is not including the picnic table area)
- On-site adult supervision is required.
- Teach children not to walk close to, in front of, behind, or between moving swings or other moving playground equipment.
- Teach children to sit in and never stand on swings.
- Teach children not to twist the chains and ropes and not to loop them over the swing beam, since this may reduce the strength of the chain or rope.
- Teach children not to jump from swings or other playground equipment in motion.
- Teach children not to push empty seats. The seat may hit them and cause serious injury.
- Teach children to sit in the center of the swings with their full weight on the seats.
- Teach children not to use the equipment in a manner other than intended.
- Teach children to always go down slides feet first. Never slide headfirst.
- Teach children to look before they slide to make sure no one is at the bottom.
- Teach children to never run up a slide, as this increases their chances of falling.
- The parents should have the children dress appropriately with well-fitting shoes. Loose clothing such as scarves and ponchos should not be worn. Always take off, tie up or tuck in cords and drawstrings on children's clothing. These things can get caught on playground equipment and strangle a child.
- Teach children not to climb when the equipment is wet.
- Teach children to never jump from a fort deck. They should always use the ladder, ramp or slide.
- Teach children to never crawl or walk across the top of monkey bars.
- Teach children to never crawl on top of a fort roof.
- Verify that any suspended climbing ropes, chains, or cables are secured at both ends and that they cannot be looped around an adult hand.
- Teach children not to attach items to the playground equipment that are not specifically designed for use with the equipment, such as, but not limited to, jump ropes, clothesline, pet leashes, cables and chain as they may cause a strangulation hazard.
- Teach children to never wrap their legs around swing chain.
- Teach children to never slide down the swing chain.

**WARNING: Children must NOT use this play set until unit has been completely assembled and inspected by an adult to insure set has been properly installed.**

## **Safety and Maintenance Tips for Your New Play Set: (continued)**

Playgrounds should be inspected on a regular basis. If any of the following conditions are noted, they should be removed, corrected, or repaired immediately to prevent injuries.

- Hardware that is loose, worn or that has protrusions or projections.
- Exposed equipment footings.
- Scattered debris, litter, rocks, or tree roots.
- Splinters, large cracks, and decayed wood components.
- Deterioration and corrosion on structural components, which connect to the ground.
- Missing or damaged equipment components, such as handholds, guardrails, swing seats.
- Check all nuts and bolts frequently during the usage season and tighten as required. (But not so tight that you crack the wood) We recommend you check the swing beam and hardware often due to wood expansion and contraction. It is particularly important that this procedure be followed at the beginning of each season.
- Remove plastic swing seats and take indoors or do not use when the temperature drops below 32°F.
- Oil all metallic moving parts monthly during the usage period.
- Check all coverings for bolts and sharp edges twice monthly during usage season to be certain they are in place. Replace when necessary. It is especially important to do this at the beginning of each new season.
- Check swing seats, ropes, cables and chains monthly during usage season for evidence of deterioration. Replacement should be made of any swing seat that has developed cracks in the plastic seats or has exposed metal in the edges of the swing seat. If there are already exposed metal inserts on the edge of the seat, immediately remove the seats and chains to prevent serious injury. Ropes, cables and chains should be removed and replaced if excessive wear is found. Contact Gorilla for warranted replacement parts.
- For rusted areas on metallic members such as monkey bars, hand supports brackets, etc.; sand and repaint, using a non lead-based paint meeting the requirements of Title 16 CRF Part 1303.
- Inspect wood parts monthly. The grain of the wood sometimes will lift in the dry season causing splinters to appear. Light sanding may be necessary to maintain a safe playing environment. If you are treating your play set with stain regularly, it will help prevent severe checking/splitting and other weather damage.
- Once or twice a year, depending on your climate conditions, you must apply some type of protection (sealant) to the wood of your unit. Prior to the application of sealant, lightly sand any “rough” spots on your set. Please note this is a requirement of your warranty.
- Creating and maintaining the play set on a level location is very important. As your children play, your play set will slowly dig its way into the soil, and it is very important that it settles evenly. Make sure the play set is level and true once each year or at the beginning of each play season.
- Rake the playground surface periodically to prevent compaction and maintain appropriate depths.

# Play Set Surfacing Recommendations:

Below are some of the recommendations that the U.S. Consumer Product Safety Commission (CPSC) offers from its Handbook for Public Playground Safety. The guide can be downloaded in full at [www.cpsc.gov/cpscpub/pubs/325.pdf](http://www.cpsc.gov/cpscpub/pubs/325.pdf)

**1. Protective Surfacing** - Since almost 60% of all injuries are caused by falls to the ground, protective surfacing under and around all playground equipment is the most critical safety factor on playgrounds.

Certain manufactured synthetic surfaces also are acceptable; however, test data on shock absorbing performance should be requested from the manufacturer.

Asphalt and concrete are unacceptable. They do not have any shock absorbing properties. Similarly, grass and turf should not be used. Their ability to absorb shock during a fall can be reduced considerably through wear and environmental conditions.

Certain loose-fill surfacing materials are acceptable. Surfacing materials are acceptable, such as the types and depths shown in the table.

## Fall Heights and Materials

Type Of Material	6 in. depth	9 in. depth	12 in. depth
Double-Shredded bark mulch	6' Fall Height	10' Fall Height	11' Fall Height
Wood Chips	6' Fall Height	7' Fall Height	12' Fall Height
Fine Sand	5' Fall Height	5' Fall Height	9' Fall Height
Shredded Tires*	10-12' Fall Height	N/A	N/A
Fine Gravel	6' Fall Height	7' Fall Height	10' Fall Height

\*This data is from tests conducted by independent testing laboratories on a 6-inch depth of uncompressed shredded tire samples produced by four manufacturers. The tests reported critical heights, which varied from 10 feet to greater than 12 feet. It is recommended that persons seeking to install shredded tires as a protective surface request test data from the supplier showing the critical height of the material when it was tested in accordance with ASTM F1292.

*It should be recognized that all injuries due to falls cannot be prevented no matter what surfacing material is used.*

**Disposal Instructions:** When the play set is no longer desired, it should be disassembled and disposed of in such a way that no reasonable hazards will exist at the time the unit is discarded.

**2. Fall Zones** - A fall zone, covered with a protective surfacing material, is essential under and around equipment where a child might fall. This area should be free of other equipment and obstacles onto which a child might fall. Stationary climbing equipment and slides should have a fall zone extending a minimum of 6' in all directions from the perimeter of the equipment.



Swings should have a fall zone extending a minimum of 6' from the outer edge of the support structure on each side. The fall zone in front and back of the swing should extend out a minimum distance of twice the height of the swing as measured from the ground to the top of the swing support structure.

## LEVELING YOUR FORT DURING ASSEMBLY

- Complete the steps which will be the basic frame of the fort. {i.e. four corner posts with base (sand box boards) and deck supports}
- Position in the most level area chosen for the play set, keeping in mind the location and size of the swing beam, ladder, slides, etc. that extend off the fort.
- Once the frame is in the final position, check for vertical and horizontal levelness to determine which side(s) will need to be dug into the ground to level the play set.
- With a shovel, score the ground around the outside edges of the sandbox boards on the 'high' side of the fort. This is the area that will be dug in. Make sure to score deep enough; the scored lines will be your digging template.
- Push the frame off and away from the scored area, far enough to dig and remove dirt to reach the appropriate depth.
- Dig a channel along the scored line(s) for the base of the fort (corner post and sandbox boards) to rest into. Dig the channel(s) to the same level depth. The bottom of the channel(s) should be level to each other so your frame doesn't teeter or rock because the channel(s) are uneven.
- Once you have removed enough grass and dirt, slide/push the frame into the channel(s). Place a level on the vertical and horizontal boards of the frame to determine if enough soil, or too much, was removed.
- Repeat this process until the basic frame is plumb and level and in its final position before completing the rest of the assembly.
- Measure to make sure fort is square.

**Important: if you require a channel depth of more than 6", then we recommend you have your play set area professionally graded before completing assembly.**

*Example Play area:*

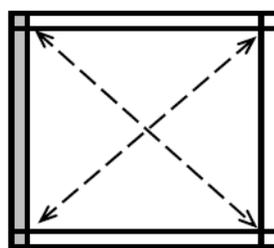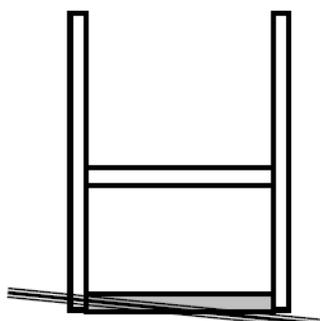

The diagonal measurements should be the same from corner post to corner post. If not, adjust corner posts so that the distance is equal.

■ =Area to be scored and channeled for levelness

# General Info to Review Before Installation

- Depending on your experience, assembly of Gorilla Playsets can take as little as 6 hours up to 24 hours, depending on size, after inventory of parts; therefore, we recommend you set aside a full two days for assembly.
- Identify all of the parts for your play set. Empty each box and lay out boards so you can see each part. Your instruction book will have detailed drawings that will make it easy for you to recognize individual parts. Keep all hardware and metal parts separate from wooden pieces.
- After everything is laid out, check carefully to ensure all parts are present. Make sure there are no broken boards.
- Find an area to sort your hardware. It is best to open the hardware on a solid surface so that you do not lose any pieces in the grass. This will save time and familiarize you with all the different pieces in the hardware bag.
- Important note: Wood has some natural defects such as knots, surface cracks, etc... We reject parts that are structurally defective. We use a high quality lumber in our structures; however, you should inspect each part for splinters or rough spots and sand them smooth to prevent injury.
- After familiarizing yourself with all of the components, read all instructions thoroughly. Reading instructions after you have studied the parts will help you understand more clearly the installation process, and help to eliminate unnecessary mistakes.
- Pay close attention to the diameter and length of each bolt and screw.
- Never tighten hardware completely at first. It helps to have some adjustment for bolt alignment while you are attaching parts together. After everything is square, tighten each joint.
- After the main unit is assembled it is critical that the floor is level and square. If the main frame is not level, the walls and floor will be out of square.
- After you complete installation, make sure every bolt, screw, and nut is tight, and every board is secure. Wood will expand and contract with the seasons.
- Check all bolt connections and swing hangers every two weeks.
- Place the set on level ground, not less than 6ft from any structure or obstruction such as a fence, garage, house, overhanging branches, laundry lines, or electrical wires.

**This page is a list of definitions and explanations used throughout our instructions to aid you in the assembly of your play set.**

**Offset Holes-** Throughout the installation procedures we will refer to parts with offset holes. This refers to the orientation of the holes on the board. An offset hole is one that is closer to one side than it is the other or in other words, it is not centered on the board. In the procedures you will be instructed to attach the boards with the holes offset up or with the holes offset down. This refers to which side of the board the hole/holes should be closer to. Offset holes up= hole/holes will be closer to the top of the board. Offset holes down= hole/holes will be closer to the bottom of the board. Note: some parts do not have offset holes, but instead the holes are on center. Therefore there will not be any reference to how to offset these parts.


**EXAMPLE OF OFFSET HOLES UP**



**EXAMPLE OF OFFSET HOLES DOWN**



**Counter-sunk holes-** Many of the parts that will be used have counter-sunk holes. A counter-sunk hole is one that surrounds one side of a thru hole, but does not extend through the wood it's self. When using a counter-sunk hole the bolt will be inserted through the thru hole and either the head of the bolt and washer or nut and washer will occupy the counter sunk hole.

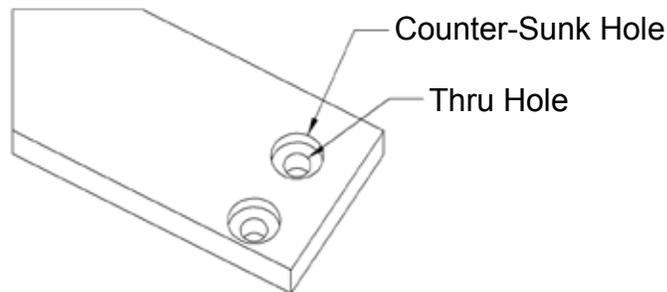


**Lag Screws-** Lag screws are used in the construction of our play sets to enhance the structural integrity of the unit. There will not be predrilled holes in the post for lag screw installation. Lag screws are self-tapping, though if you are using a manual socket wrench it may be necessary to tap the head of the lag screw with a hammer. You should also be sure to tighten the lags completely. Power tools such as an impact wrench or power drill should have enough torque to drive the lag screws without using a hammer, but make sure not to over tighten as this can cause the threads to “strip out” in the post.


## Common Installation Practice Installing T-nuts

When installing T-nuts into the wood, use a smooth faced hammer to set the face of the T-nut flush into the wood.


Corner Post

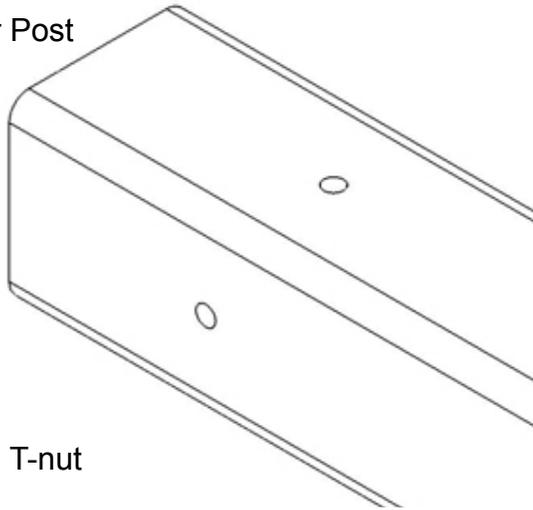


T-nut

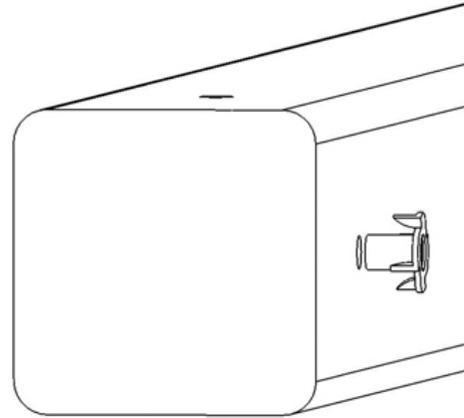

Insert the barrel of the T-nut into the predrilled hole. Using a smooth faced hammer, drive the T-nut until the face of the T-nut is flush to the wood.

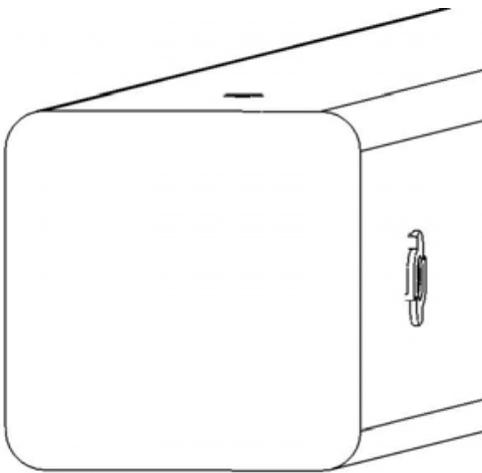


This picture shows the T-nut insert and installed flush to the wood.

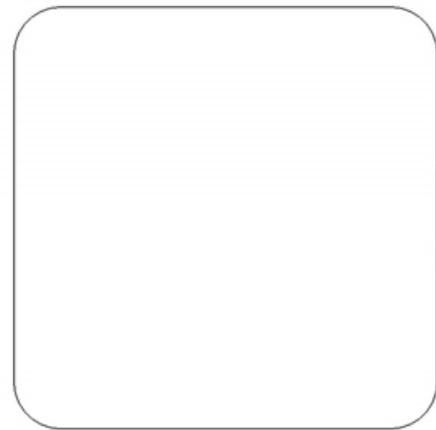

This picture shows an end view of the T-nut insert and installed flush to the wood.


**WARNING: DO NOT EMBED THE TOP OF THE T-NUT INTO THE FACE OF THE WOOD**

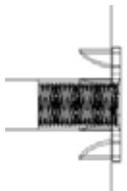

Cross Section end views, you are looking at an Xray view of the post and T-nut. The barrel of the T-nut is in the corner post the line is the face of the wood.

**Please familiarize yourself with the manual, parts/components and general construction process of your new playset before getting started.**

**SITE PLAN:**

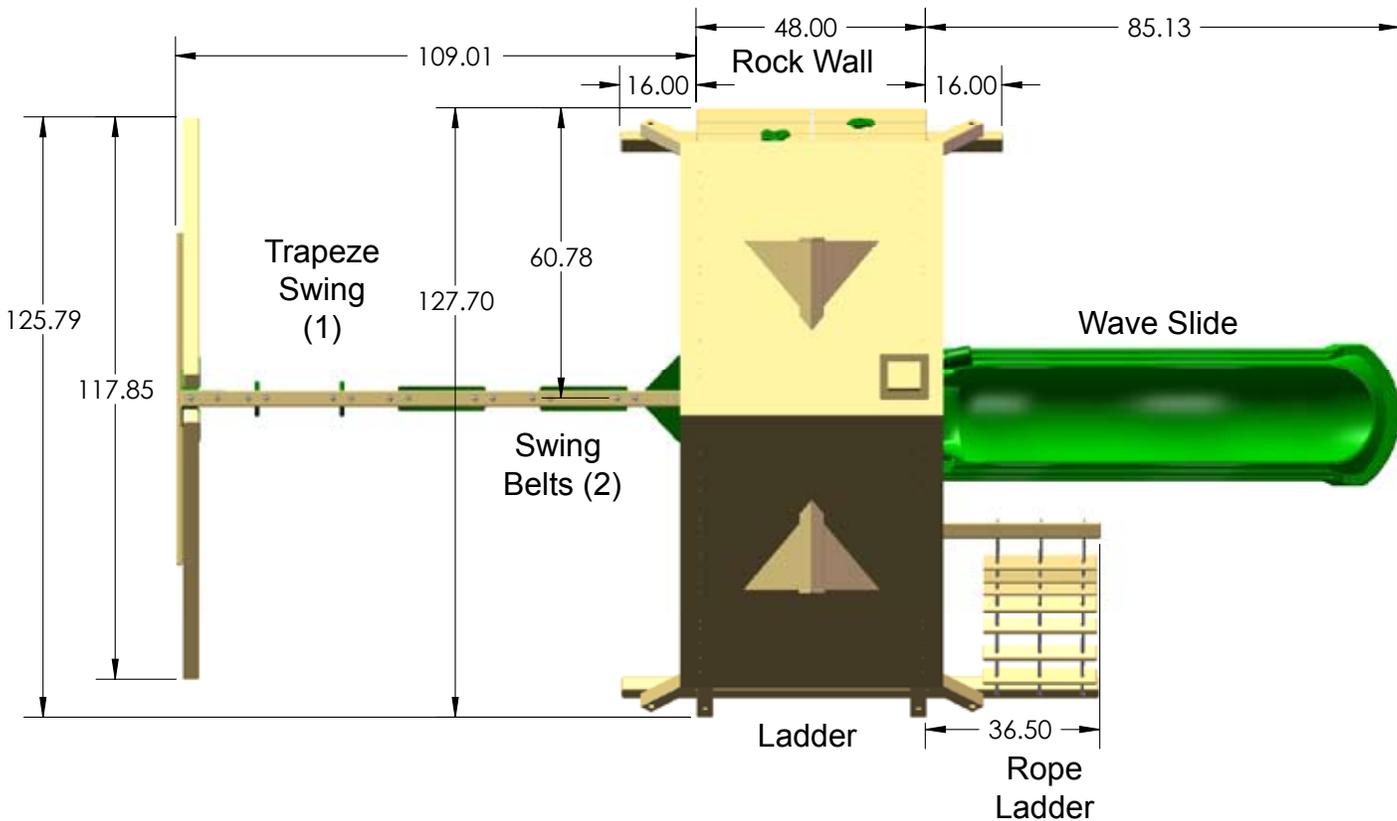

Playset height: 11' - 6"

Approximate assembly time: 10-14 Hours

**6 foot unobstructed safety perimeter around playset recommended**

**REQUIRED TOOL LIST:**

- \_\_\_ Standard or Cordless Drill w/ Phillips Bit (#2 square bit provided)
- \_\_\_ 1/8" Drill Bit
- \_\_\_ 3/16" Drill Bit
- \_\_\_ 3/8" Drill Bit
- \_\_\_ 1/2" Wrench, Socket, and Deep Well Socket
- \_\_\_ 9/16" Wrench, Socket, and Deep Well Socket
- \_\_\_ Level
- \_\_\_ Tape Measure
- \_\_\_ Extension Cord (if using standard drill)
- \_\_\_ Hammer
- \_\_\_ Pencil
- \_\_\_ Locking Pliers (Vise Grips)
- \_\_\_ Shovel
- \_\_\_ Rubber Mallet

**KIT CONTENTS**

**Swings, Slides, Accessories:**

- \_\_\_ (Qty) Description
- \_\_\_ (1) Trapeze Swing w/ Chains
- \_\_\_ (2) Swingbelts w/ Chains
- \_\_\_ (1) Tire Swing
- \_\_\_ (1) Telescope
- \_\_\_ (1) Steering Wheel
- \_\_\_ (1) 10ft. Wave Slide
- \_\_\_ (1) Sunscape Assembly Manual
- \_\_\_ (10) Rockwall Grips
- \_\_\_ (4) Safety Handles
- \_\_\_ (2) Flag Kit

**Fort/Swing Hardware and Wood Components:**

*see following pages*

**READ! VERY IMPORTANT!**


If you are missing parts or have questions regarding the installation of our quality product PLEASE call us directly at the factory (1-800-882-0272). Our trained staff will be happy to assist you.

**Customer Service hours:**

**Monday thru Friday 8AM-5PM EST**

**E-mail: [custsrv@gorillaplaysets.com](mailto:custsrv@gorillaplaysets.com)**

**Use the ruler to the right to measure your bolts and screws. Picture views shown below are 1:1 scale and can be used to match bolt and screw sizes.**

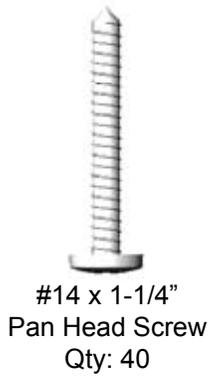

5/16" x 6"  
Hex Bolt  
Qty: 12



5/16" x 4"  
Hex Bolt  
Qty: 14



5/16" Tee Nut  
Qty: 27



3/8" Lock Nut  
Qty: 19



5/16" Washer  
Qty 30




1/2" Washer  
Qty: 2



1/4" Washer  
Qty 40




3/8" Washer  
Qty 69

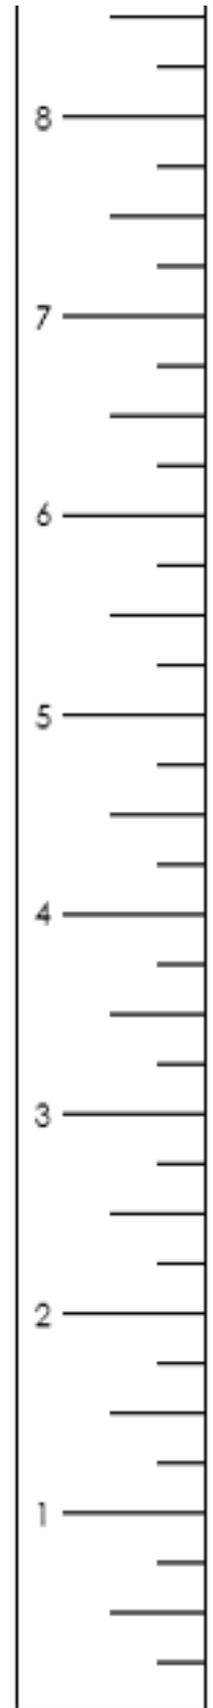


**Use the ruler to the right to measure your bolts and screws. Picture views shown below are 1:1 scale and can be used to match bolt and screw sizes.**

3/8" x 9"  
Carriage Bolt  
Qty: 1

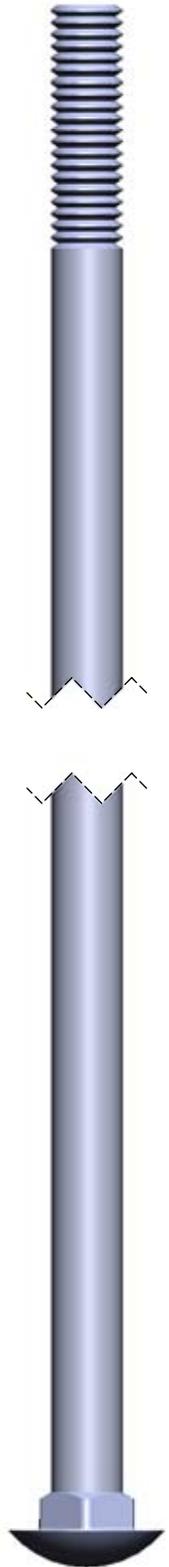


3/8" x 6-1/2"  
Carriage Bolt  
Qty: 14

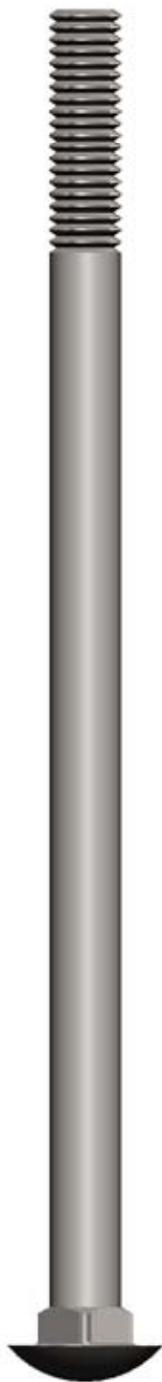

5/16" x 3-1/2"  
Hex Lag Screw  
Qty: 4



3/8" x 5"  
Hex Lag Screw  
Qty: 12

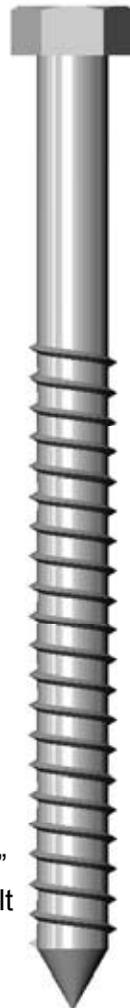


3/8" x 3-1/2"  
Hex Lag Screw  
Qty: 36



3/8" x 4"  
Carriage Bolt  
Qty: 2




3/8" x 3-1/2"  
Carriage Bolt  
Qty: 2






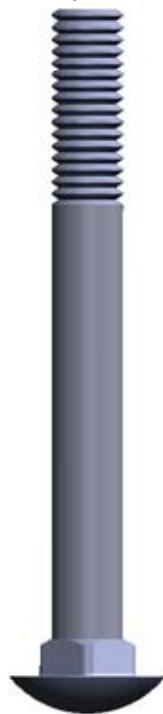









#2 Square  
Drive Bit  
Qty: 1
















Plastic  
Bolt Cap  
Qty: 19








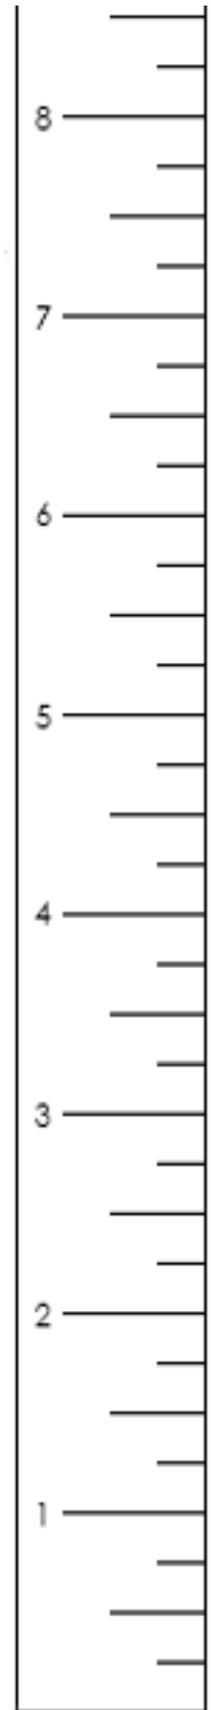


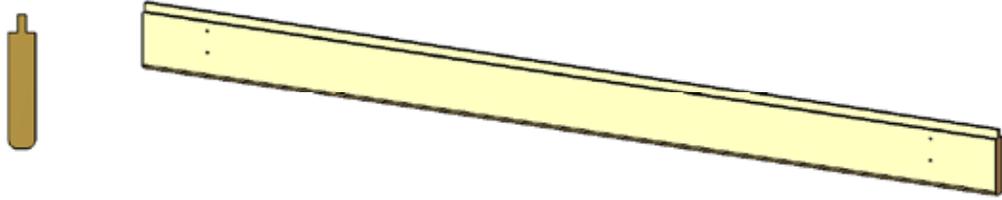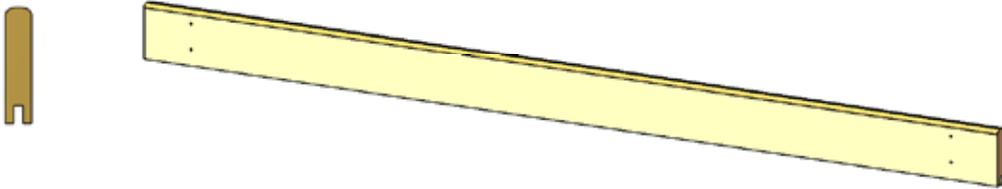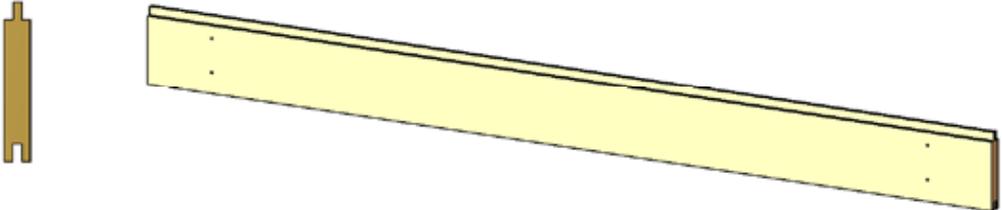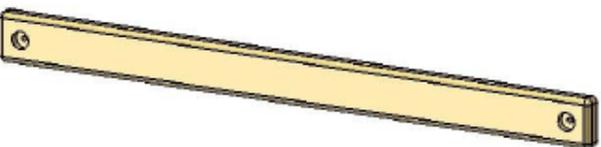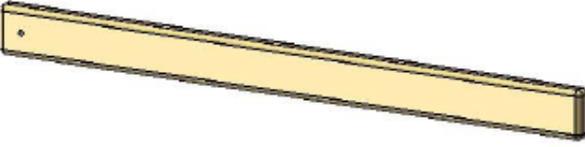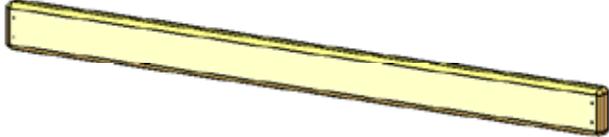Picture	Description	Qty.
	1 X 4 X 55" Roof Finisher (Tongue Only)	<b>2</b>
	1 X 4 X 55" Roof Starter (Groove only)	<b>2</b>
	1 X 5 X 55" Roof Board (Tongue and Groove)	<b>34</b>
	2 X 4 X 10" Bottom Panel Board	<b>2</b>
	2 X 4 X 45" Rear Bottom Panel Board	<b>1</b>
	2 X 4 X 48" Front Center Post	<b>1</b>
	2 X 4 X 48" Roof End Cap	<b>2</b>

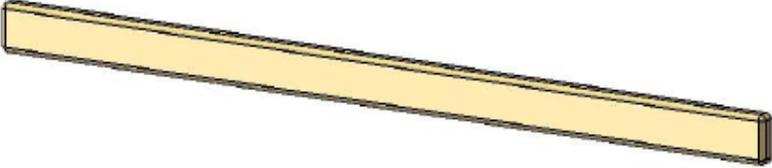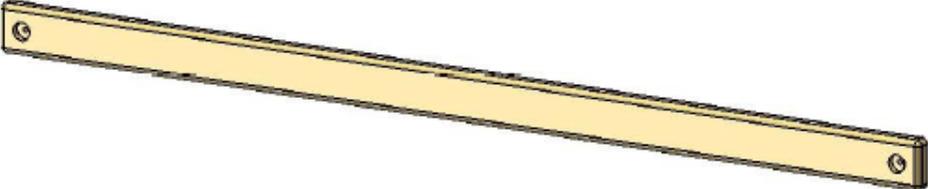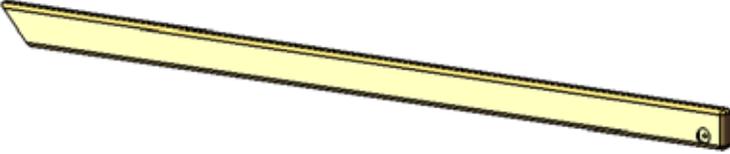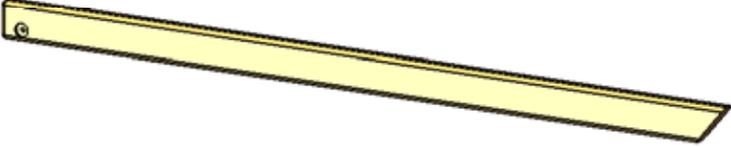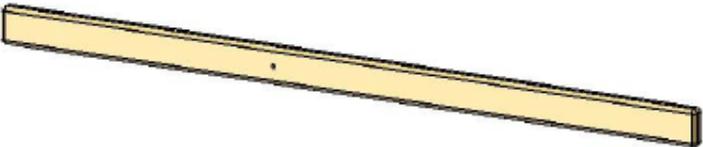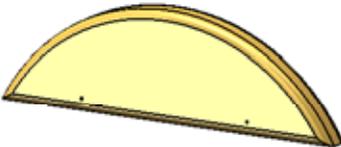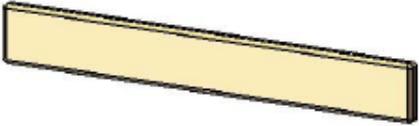Picture	Description	Qty.
	2 X 4 X 58" Center Deck Support	<b>3</b>
	2 X 4 X 70" Cross Member	<b>1</b>
	2 X 4 X 70" Roof Support (Left)	<b>2</b>
	2 X 4 X 70" Roof Support (Right)	<b>2</b>
	2 X 4 X 73-3/4" Rear Center Post	<b>1</b>
	2 X 6 X 16" Sun	<b>2</b>
	2 X 6 X 41-1/4" Deck Spacer	<b>4</b>

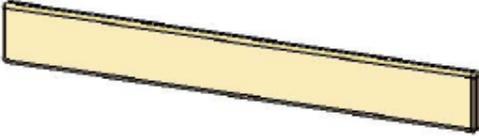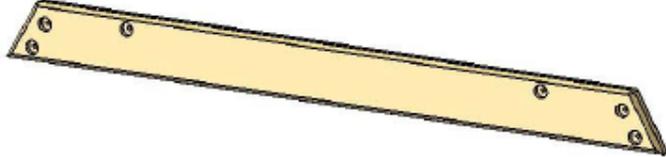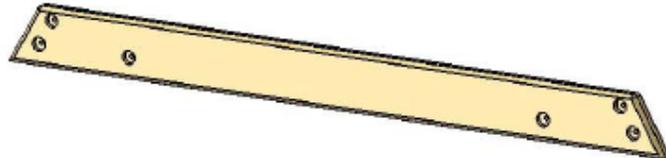
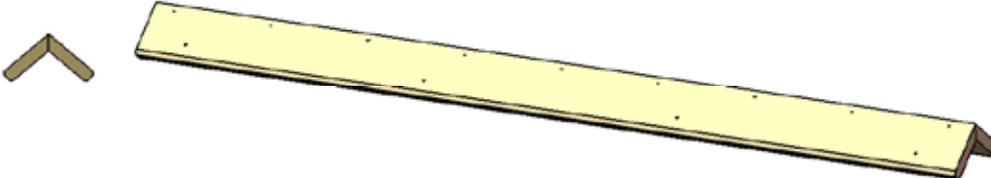
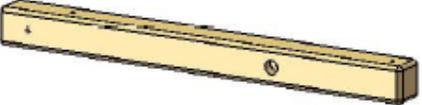
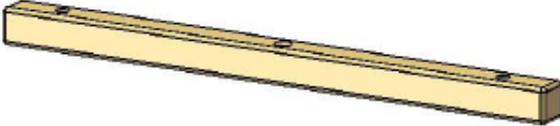
Picture	Description	Qty.
	2 X 6 X 47-3/4" Deck Board	<b>7</b>
	2 X 6 X 66-1/4" Inner Fort Support	<b>2</b>
	2 X 6 X 66-1/4" Outer Fort Support	<b>2</b>
	3-1/2" X 3-1/2" X 55" Roof Peak As- sembly	<b>1</b>
	4 X 4 X 16" Angle Support	<b>4</b> <b>(2 left &amp; 2 right)</b>
	4 X 4 X 40-1/2" Corner Post	<b>4</b>
	4 X 4 X 55" Rock Wall Rope Support	<b>1</b>

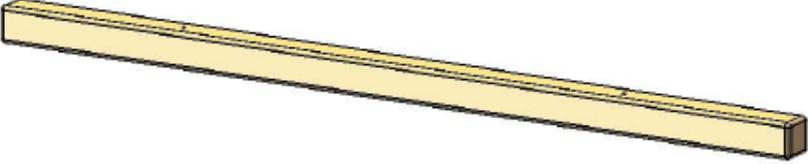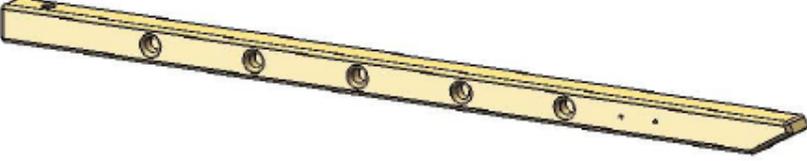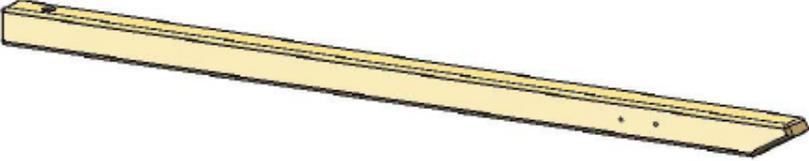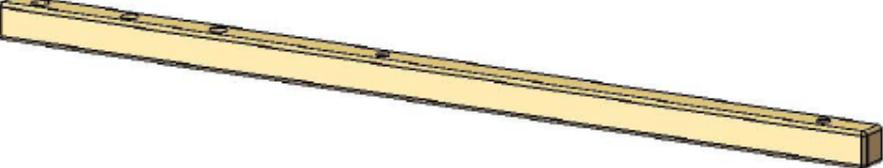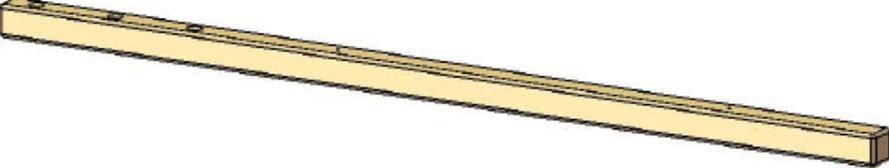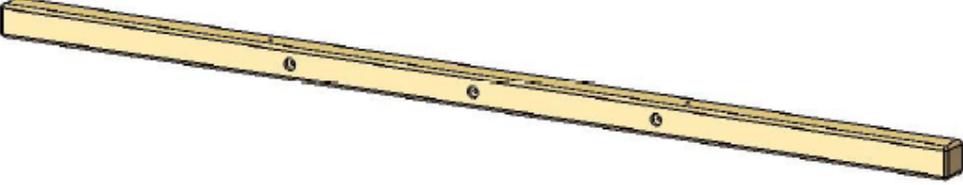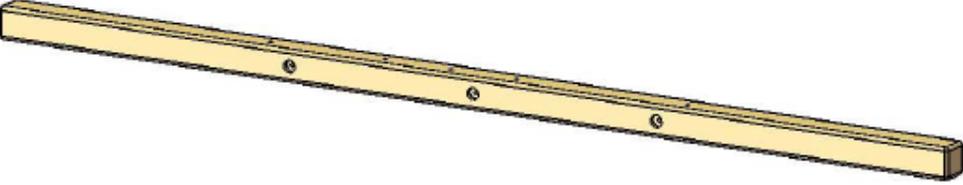Picture	Description	Qty.
	4 X 4 X 80" Rock Wall Bottom Support	<b>1</b>
	4 X 4 X 80-1/4" Ladder Side	<b>2</b> <b>( 1 Left</b> <b>&amp;</b> <b>1 Right)</b>
	4 X 4 X 80-1/4" Rock Wall Side	<b>2</b>
	4 X 4 X 88" Rope Ladder Support	<b>1</b>
	4 X 4 X 100" Rope Ladder Runner	<b>1</b>
	4 X 4 X 108" Side Rail	<b>1</b>
	4 X 4 X 108" Swing Beam Side Rail	<b>1</b>

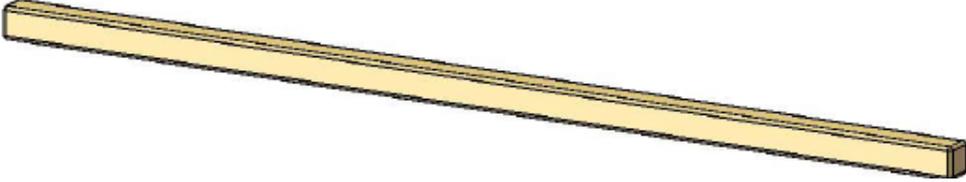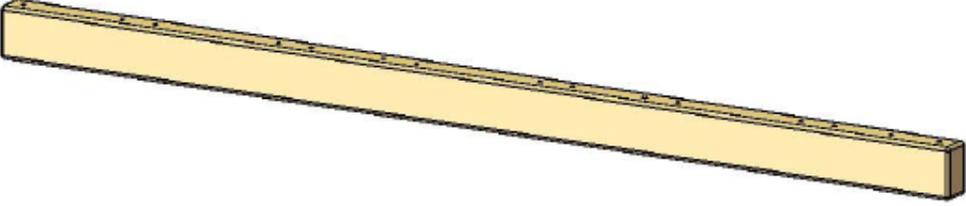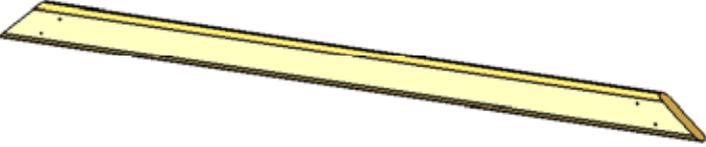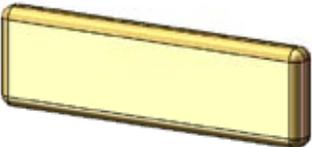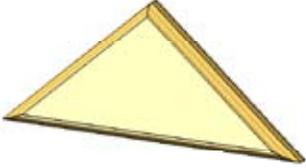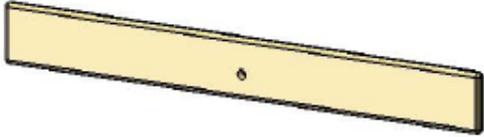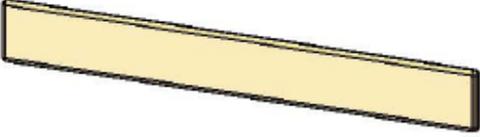Picture	Description	Qty.
	4 X 4 X 108" Swing Leg	<b>2</b>
	4 X 6 X 108" Swing Beam	<b>1</b>
	5/4 x 3 x 51" Sun Support	<b>2</b>
	5/4 X 4 X 11-3/8" Ray	<b>4</b>
	5/4 X 4 X 28-1/2" Panel Slat	<b>6</b>
	5/4 X 6 X 13" Roof Peak Support	<b>2</b>
	5/4 X 6 X 48" Bottom Rock Wall Board	<b>1</b>
	5/4 X 6 X 48" Rock Wall Board	<b>11</b>

THE BOARDS ON THIS SHEET WILL NOT BE USED FOR THIS PLAYSET.



REMOVE THESE BOARDS FROM YOUR WORK AREA.

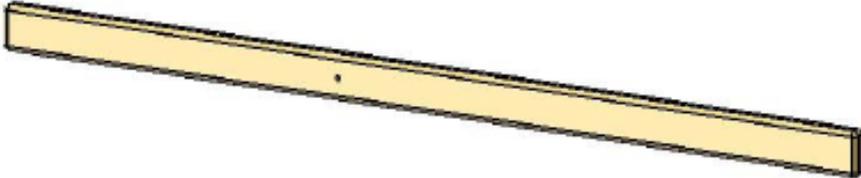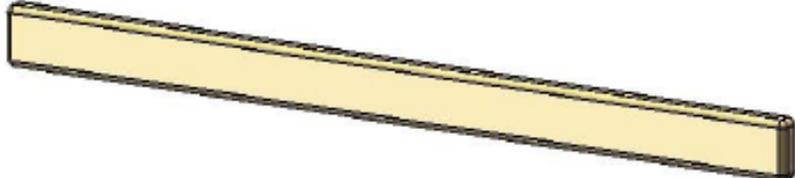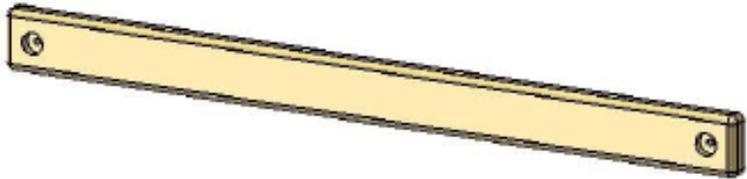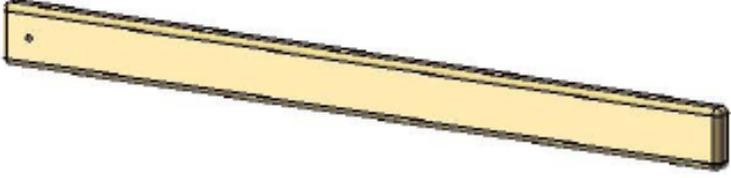Picture	Description	Qty.
	2 X 4 X 70" Rear Center Post	<b>1</b>
	2 X 4 X 48" Center Tarp Board	<b>1</b>
	2 X 4 X 54-1/2" Tarp Board	<b>2</b>
	2 X 4 X 44-1/4" Front Center Post	<b>1</b>

THE BOARDS ON THIS SHEET WILL NOT BE USED FOR THIS PLAYSET.


REMOVE THESE BOARDS FROM YOUR WORK AREA.

Picture	Description	Qty.
	10' Wave Slide	<b>1</b>
	Rope Ladder Steps 2 x 4 x 24"	<b>7</b>
	Swings w/Chains  Trapeze Bar w/Chains	<b>2</b>  <b>1</b>

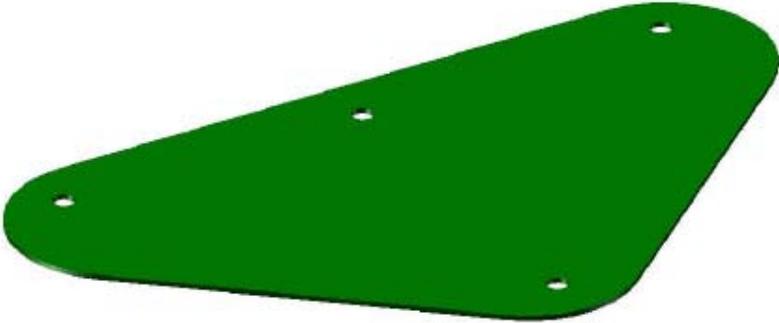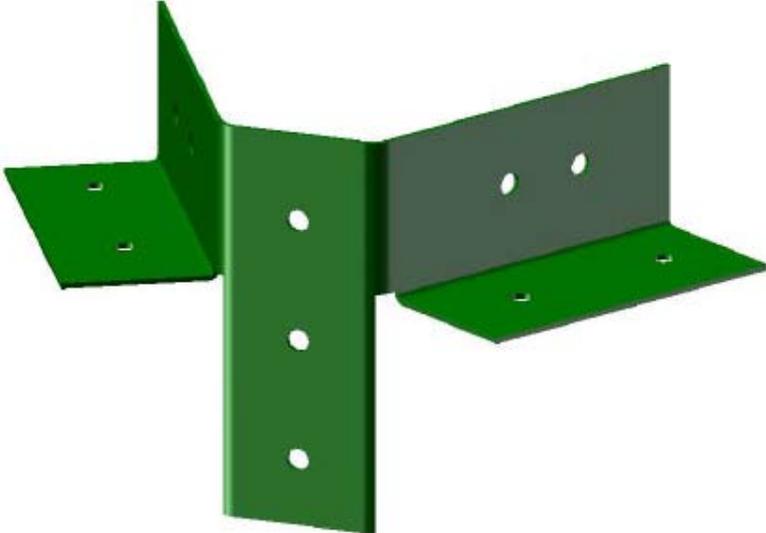Picture	Description	Qty.
	Swing Plate	<b>1</b>
	Climbing Rocks	<b>10</b>
	A-Frame Swing Leg Bracket	<b>1</b>
Not Shown	Hardware Box Instructions	<b>1</b>

Picture	Description	Qty.
	Iron Ductile Swing Hangers	<b>6</b>
	Telescope	<b>1</b>
	10' Rope  16' Rope	<b>1</b>  <b>3</b>

Picture	Description	Qty.
	Tire Swing	<b>1</b>
	Spring Clip	<b>9</b>
	Tire Swivel	<b>1</b>
	Flag Kit	<b>2</b>

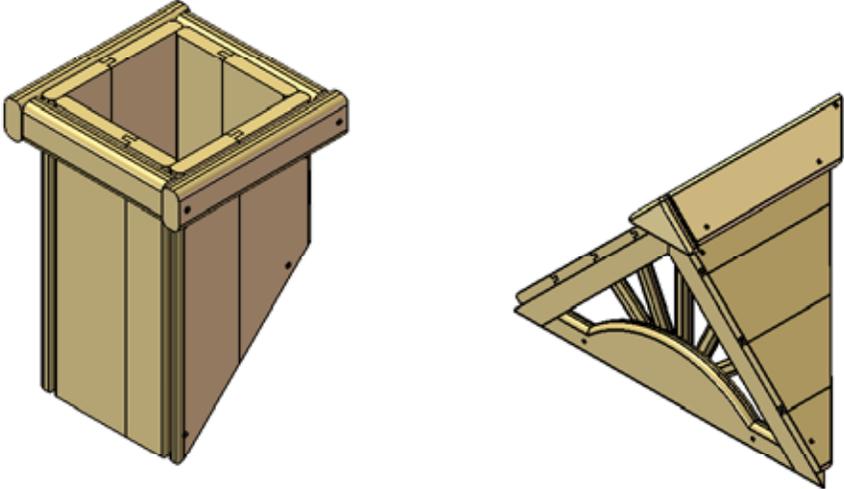Picture	Description	Qty.
	<p>Chimney</p> <p>Dormers</p>	<p><b>1</b></p> <p><b>2</b></p>
	<p>Steering Wheel</p>	<p><b>1</b></p>
	<p>Ladder Rungs</p>	<p><b>5</b></p>
	<p>Safety Handle (Pair)</p>	<p><b>2</b></p>


## Step 1: Assembling the Ladder

1: Start with the 4 x 4 x 80-1/4" Ladder Sides. The sides should be positioned in a manner that allows the five holes on the inside to face each other, and the angled ends should be facing the same way. It should also be noted that there are two 3/8" holes just above the five ladder rung holes.

2: Lay one of the ladder sides on the ground and place the five metal Ladder Rungs inside of the holes. Leave the ladder side on the ground with the metal ladder rungs sticking up. Use a rubber mallet or a hammer/wood block to insert ladder rungs.


3: Install t-nuts into the holes just above the ladder rungs. The hole closest to the rungs will get a t-nut on the outside, and the hole just above it will get a t-nut on the inside.

4: Take the other ladder side and line up the ladder rung holes with the metal ladder rungs previously installed. If the rungs can spin, use 2-1/2" wood screws to secure. Drive the screws into the ladder sides at an angle, from the back side. **Note: do not complete this step until entire fort is assembled.**

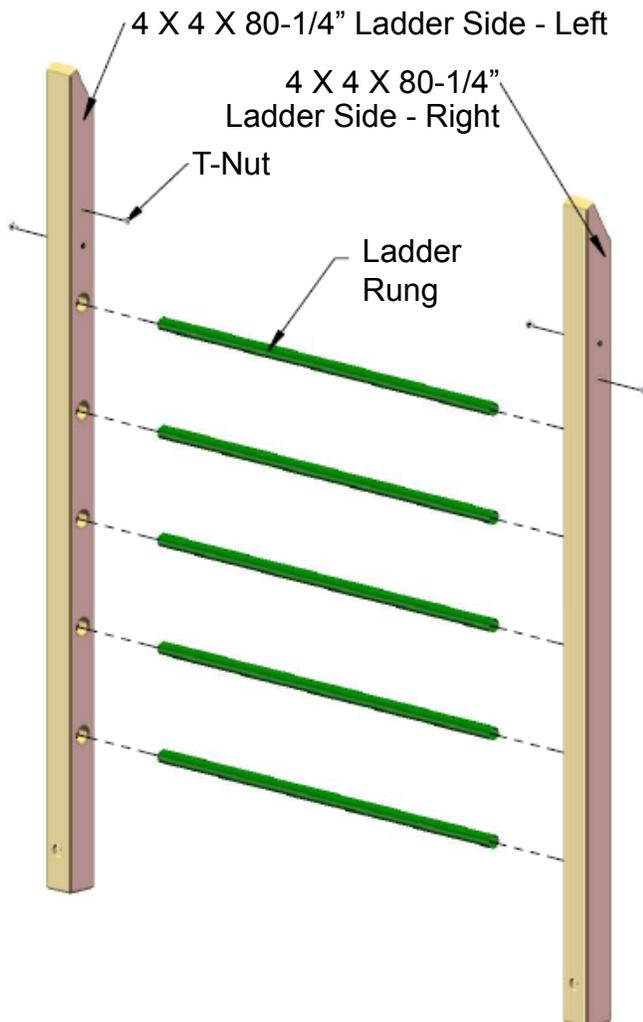


If the rungs are not secure or if they spin in the holes; use a 2-1/2" wood screw to secure them. Drive screws in at an angle. For best results drive screws into the side shown to keep them hidden.

2-1/2" Wood Screw

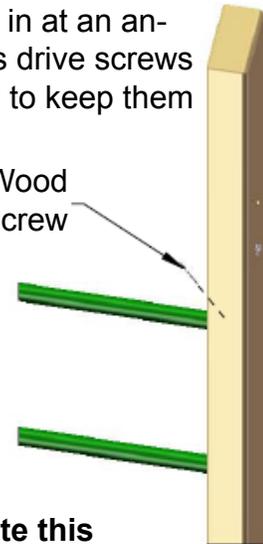


**Do not complete this step until entire fort has been assembled.**

Cross section showing wood screws pinching the ladder rungs into place.

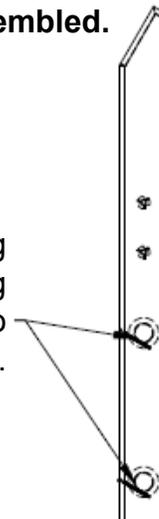


## Step 2: Attaching the Rope Ladder Runner

- 1: Find the 4 x 4 x 100" Rope Ladder Runner.
- 2: Line up the 3/8" pilot holes on the Rope Ladder Runner to the counter-sunk holes on the ladder assembly. The three 7/8" holes will face toward the outside of the ladder assembly.
- 3: Find two t-nuts, and set with a hammer on the exposed 3/8" holes of the Rope Ladder Runner.
- 4: Fasten the Rope Ladder Runner to the ladder assembly with 5/16" x 6" hex bolts and 5/16" washers through the counter-sunk holes of the ladder sides and into the t-nuts installed in the Rope Ladder Runner.

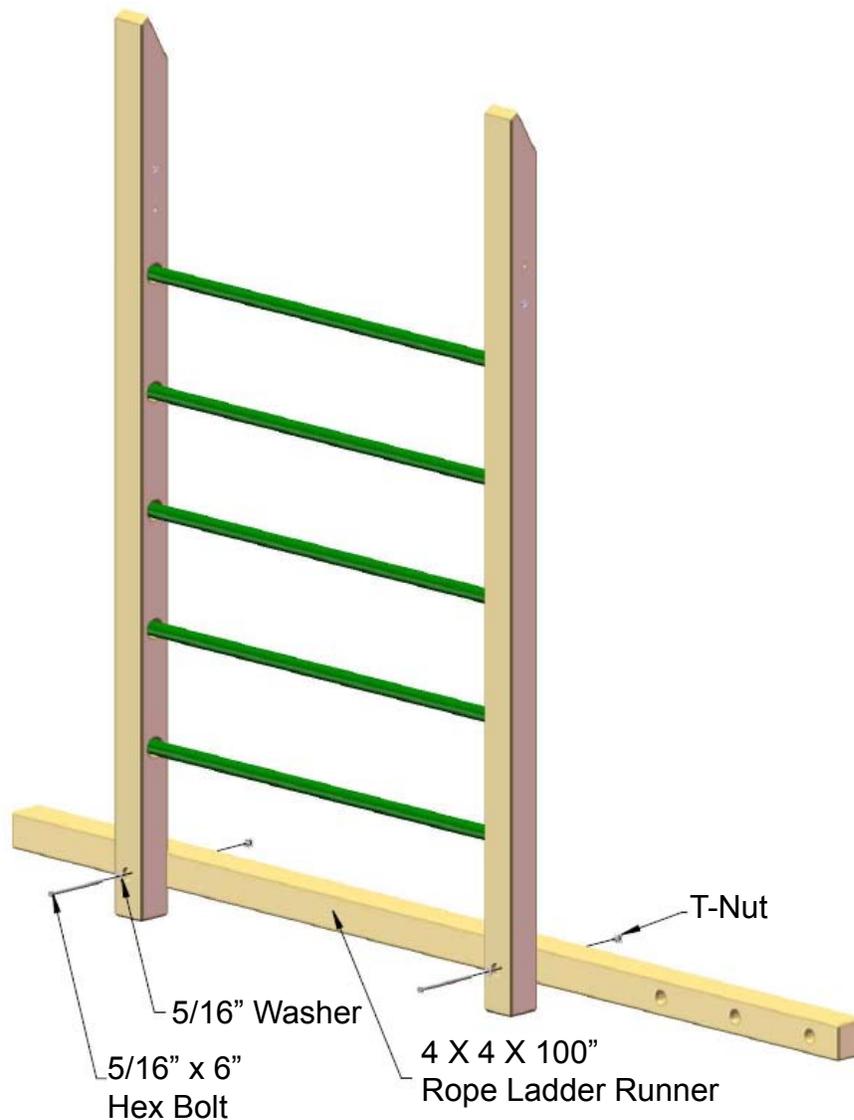


### Step 3: Installing Angle Supports

- 1: Make sure the ladder assembly is square. Find two 4 x 4 x 16" Angle Supports.
- 2: Place the Angle Supports on the ladder assembly so that the angled end rests against the ladder sides, and the counter-sunk hole on the flat end faces out. Center the counter-sunk holes on their respective boards before attaching.
- 3: Fasten the angled end to the ladder side with one 3/8" x 3-1/2" lag screw with a 3/8" washer.
- 4: Fasten the flat end to the Rope Ladder Runner with one 3/8" x 5" lag screw with a 3/8" washer.
- 5: Repeat sub steps 2-4 to fasten another Angle Support to the opposite side of the ladder assembly.

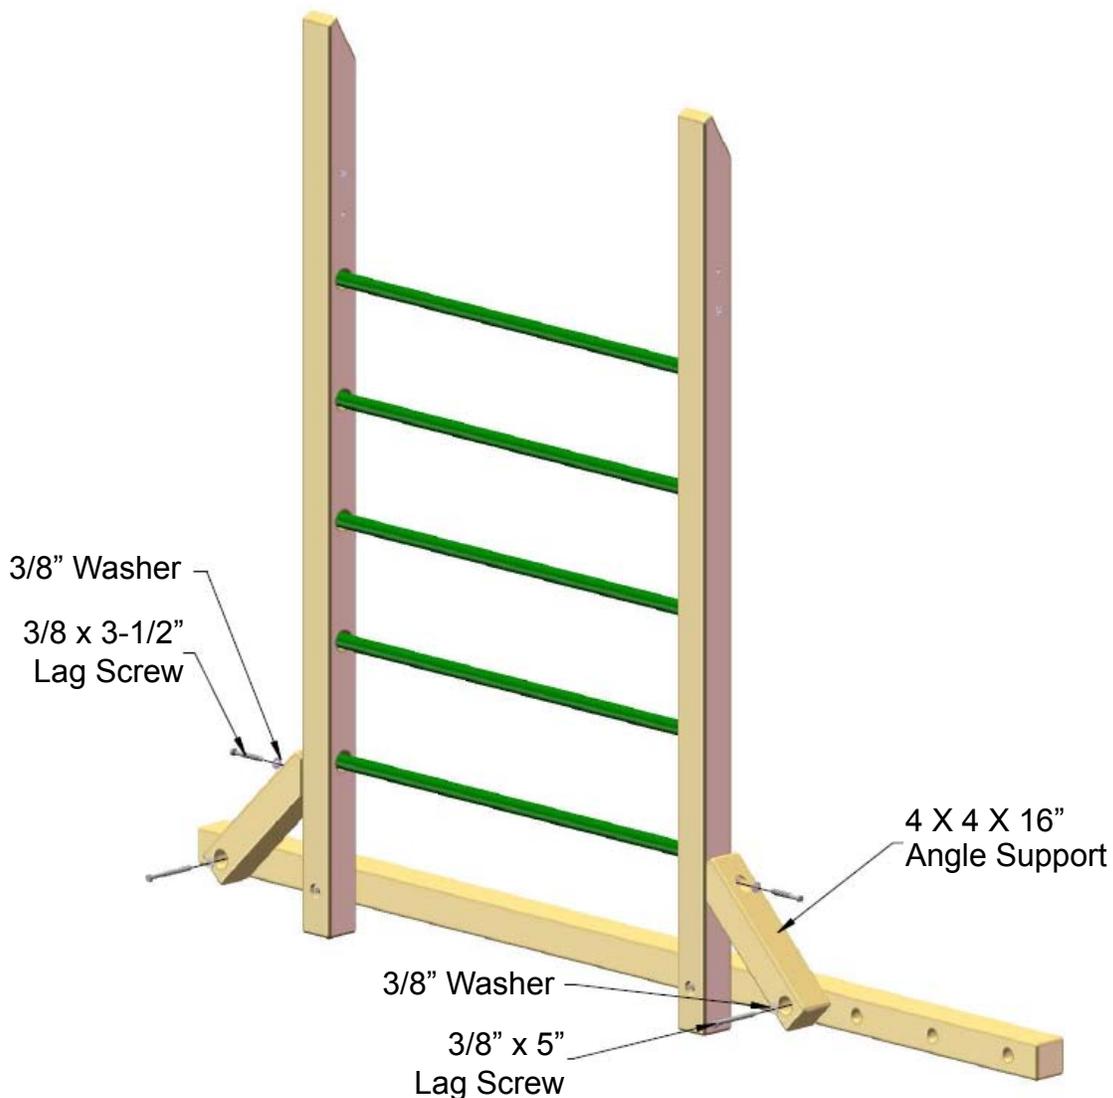


## Step 4: Assembling the Rock Wall

- 1: Start with the 4 x 4 x 80-1/4" Rock Wall Sides. The sides should be positioned in a manner that allows the angled ends to face the same way. It should also be noted that there are two 3/8" holes just below the angled ends.
- 2: Install t-nuts into the holes just below the angled ends. The bottom holes will get a t-nut on the outside, and the top holes will get a t-nut on the inside.
- 3: Find the 4 x 4 x 80" Rock Wall Bottom Support. Line up the 3/8" pilot holes on the Rock Wall Bottom Support to the 3/8" holes on the Rock Wall Sides.
- 4: Find two t-nuts, and set with a hammer on the exposed 3/8" holes of the Rock Wall Bottom Support.
- 5: Fasten the Rock Wall Bottom Support to the Rock Wall Sides with 5/16" x 6" hex bolts and 5/16" washers through the counter-sunk holes of the Rock Wall Sides into the t-nuts installed in the Rock Wall Bottom Support.

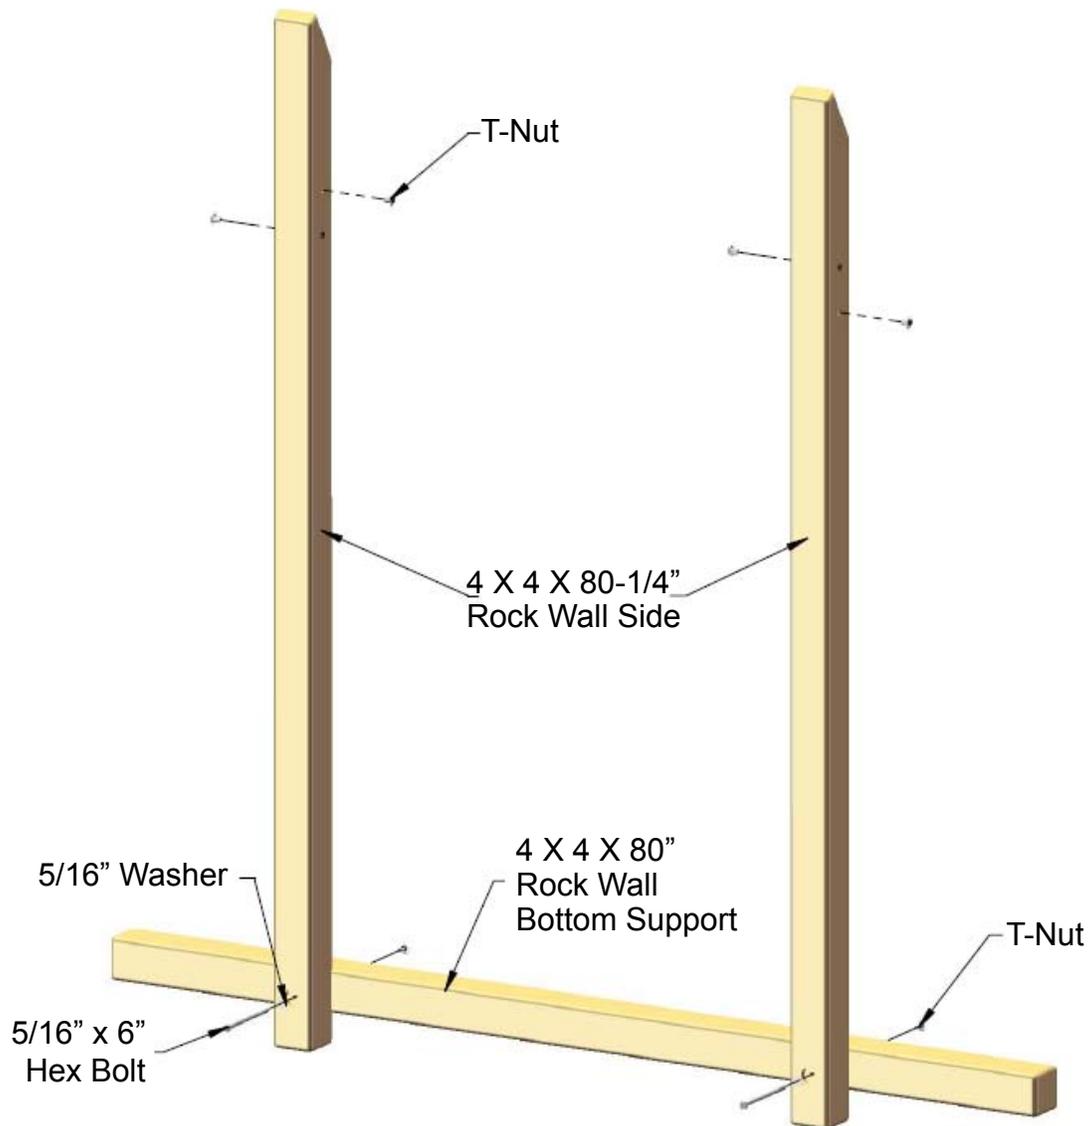


## Step 5: Assembling the Rock Wall

- 1: Measure 67" from the bottom of each of the Rock Wall Sides and mark this location.
- 2: Before installing boards, make sure that the Rock Wall Sides are square to the Rock Wall Bottom Support. Once the Rock Wall Sides are square, lay the 5/4 x 6 x 48" Rock Wall Board on the Rock Wall Sides with the top of the board placed at the 67" mark previously made. Attach with two 2" wood screws per side.

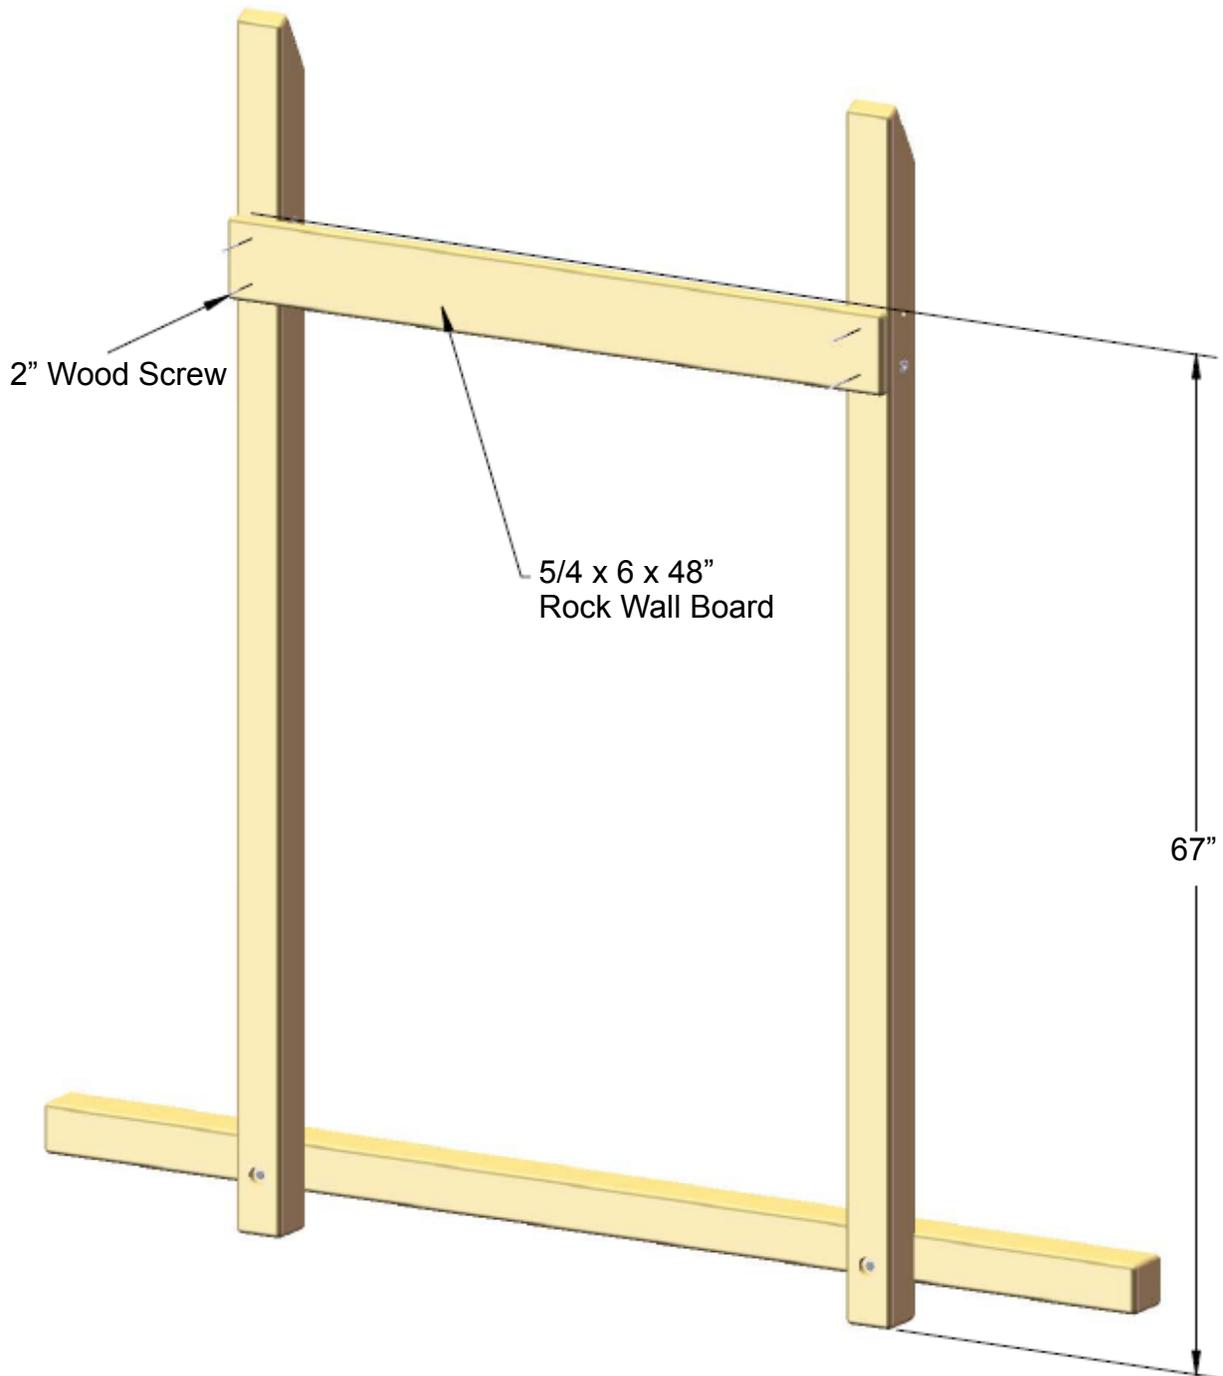



## Step 6: Installing Angle Supports

- 1: make sure the Rock Wall assembly is square. Find two 4 x 4 x 16" Angle Supports.
- 2: Place the Angle Supports on the Rock Wall assembly so that the angled end rests against the Rock Wall Sides, and the counter-sunk hole on the flat end faces out. Center the counter-sunk holes on their respective boards before attaching.
- 3: Fasten the angled end to the Rock Wall Side with one 3/8 x 3-1/2" lag screw with a 3/8" washer.
- 4: Fasten the flat end to the Rock Wall Bottom Support with one 3/8 x 5" lag screw with a 3/8" washer.
- 5: Repeat sub steps 2-4 to fasten another Angle Support to the opposite side of the Rock Wall assembly.

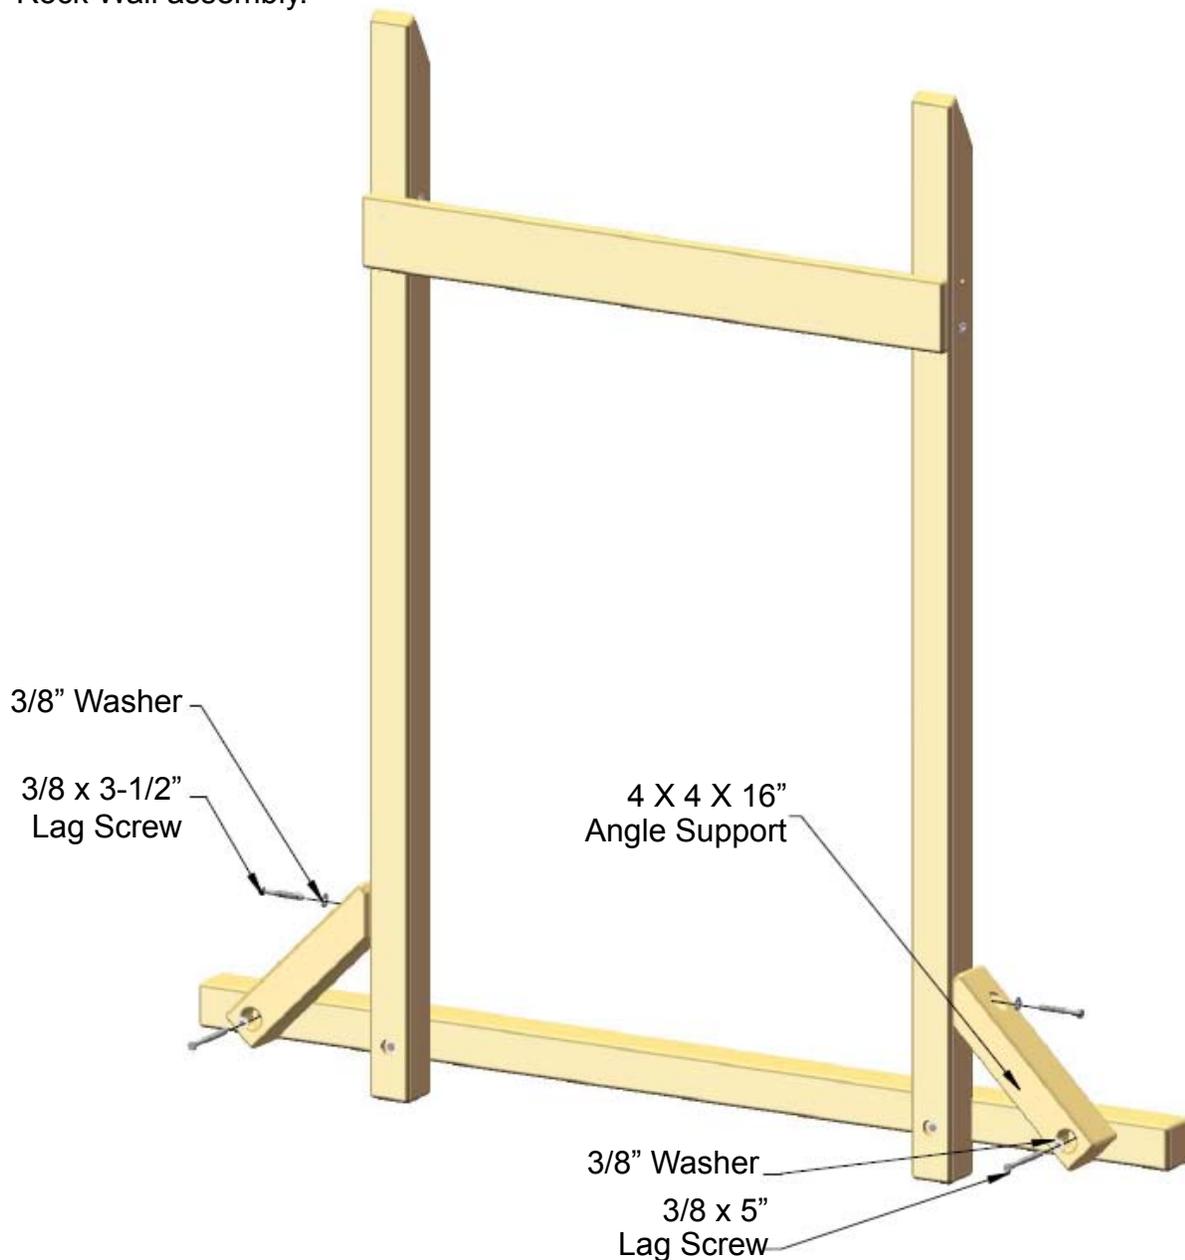


## Step 7: Installing Outer Fort Supports

- 1: Find the two 2 x 6 x 66-1/4 Outer Fort Supports. The easiest way to differentiate the Outer Supports from the Inner Supports is to look for the counter-sunk holes at 12-1/4" from each end. The two boards with the counter-sunk holes closest to the bottom (longer) side are the Outer Fort Supports, the boards with the counter-sunk holes closest to the top (shorter) side are the Inner Fort Supports.
- 2: Lay the Ladder Assembly and Rock Wall Assembly flat on the ground, and line up the 3/8" hole closest to the top with the top hole of the Outer Fort Support.
- 3: Attach the Outer Fort Support to the Ladder and Rock Wall assembly with 5/16 x 4" hex bolts and 5/16" washers.
- 4: Repeat sub steps 2 and 3 to fasten another Outer Fort Support to the opposite side of the fort.
- 5: With help, lift up the Ladder Assembly and Rock Wall Assembly so that the Ladder Sides and Rock Wall Sides are flush to the angled ends of the Outer Fort Support.

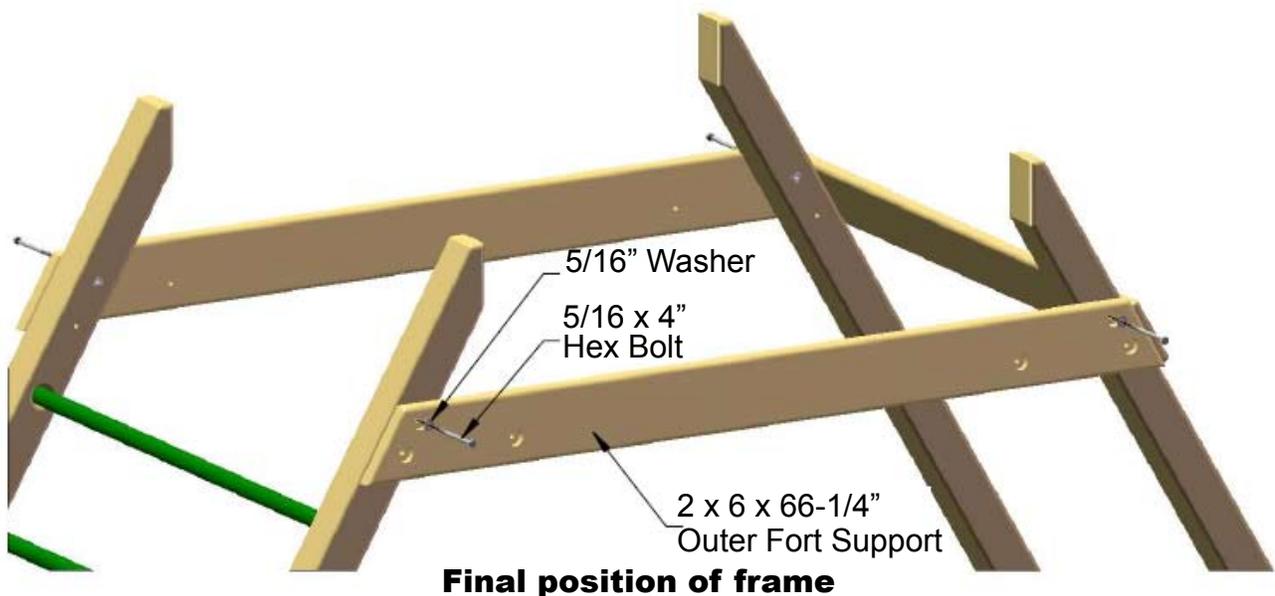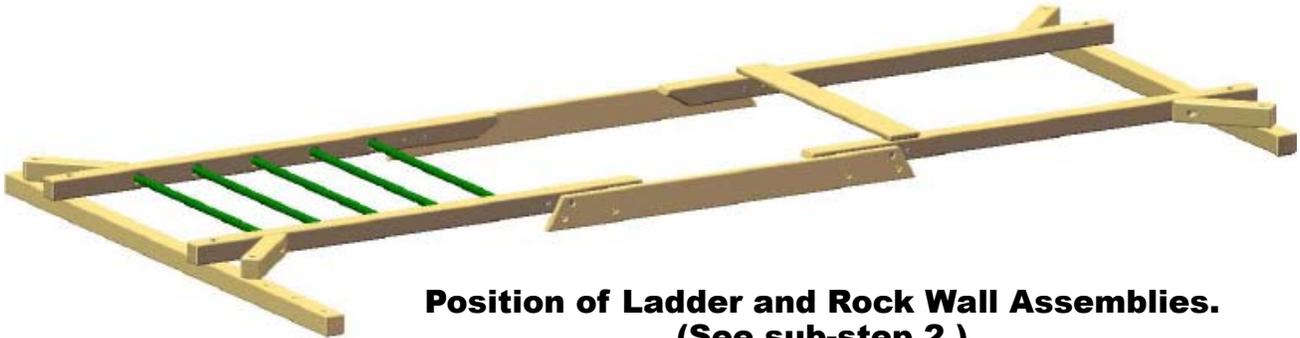


## Step 8: Installing Inner Fort Supports

- 1: Find the two 2 x 6 x 66-1/4 Inner Fort Supports.
- 2: Line up the 3/8" hole closest to the bottom with the bottom hole of the Inner Fort Support.
- 3: Attach the Inner Fort Support to the Ladder Assembly and Rock Wall Assembly with 5/16 x 4" hex bolts and 5/16" washers.
- 4: Repeat sub steps 2 and 3 to fasten another Inner Fort Support to the Ladder Assembly and Rock Wall Assembly.

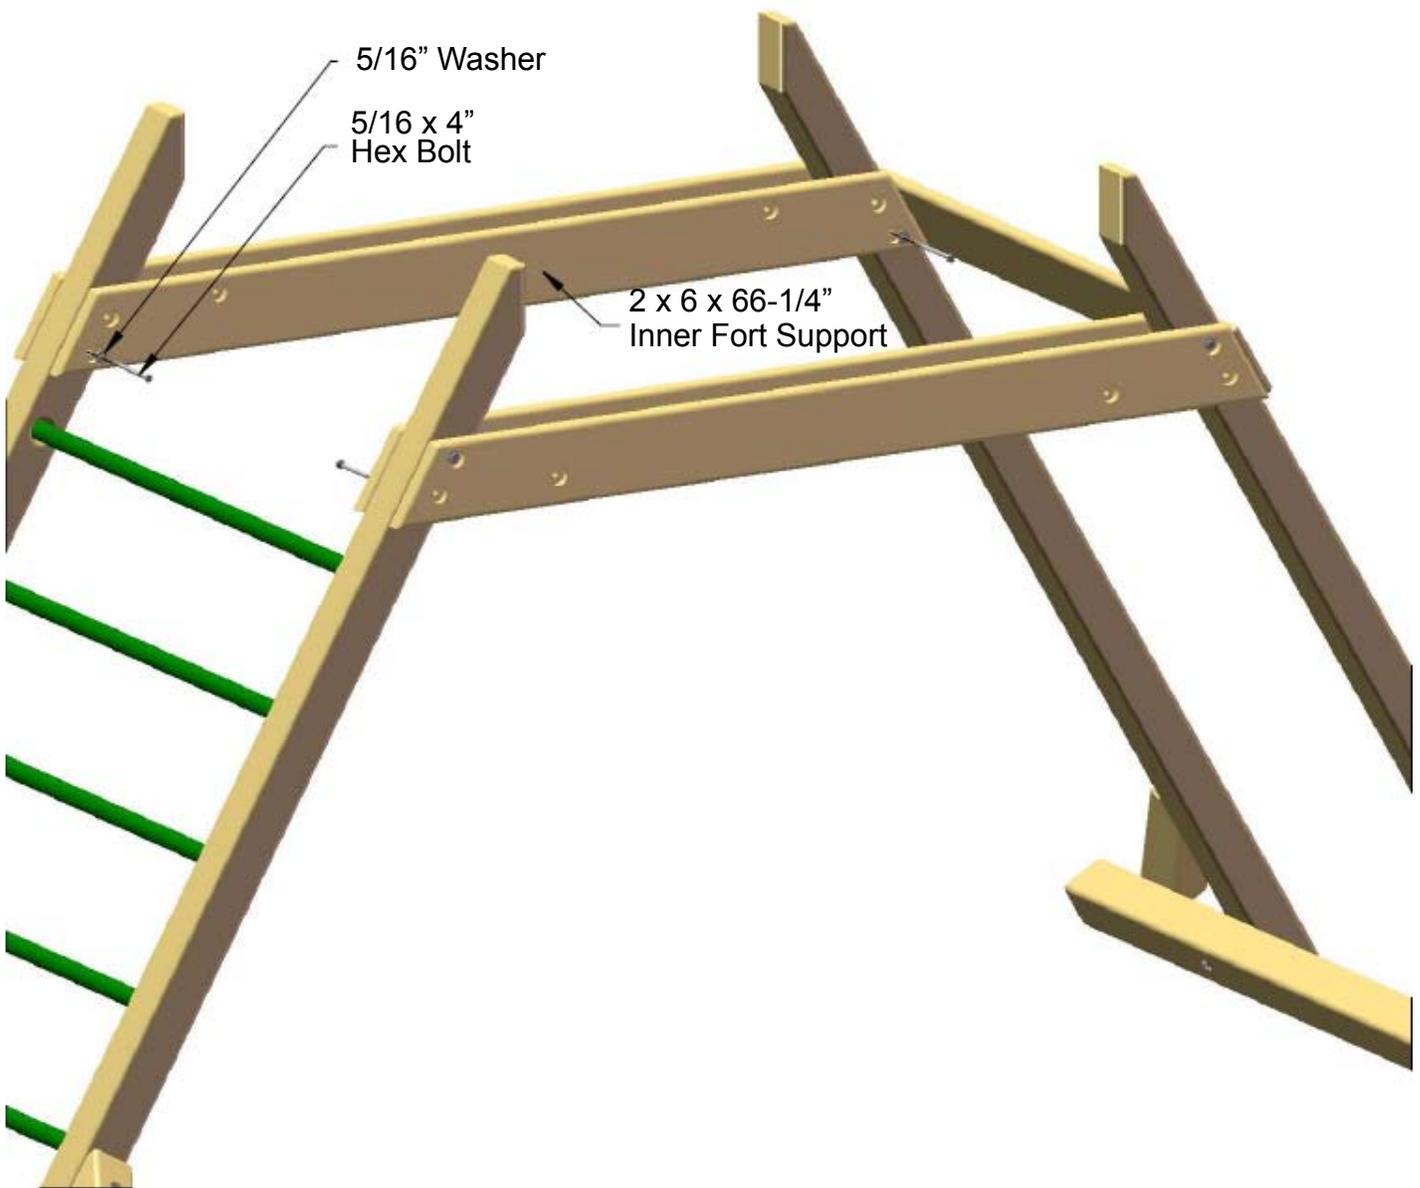

## Step 9: Installing T-Nuts on Corner Posts

- 1: Find four 4 x 4 x 40-1/2" Corner Posts
- 2: Using the diagram below, install t-nuts into the appropriate holes. Place t-nuts into the holes of the Corner Post and set with a hammer.
- 3: The Corner Posts are shown relevant to their orientation on the unit.

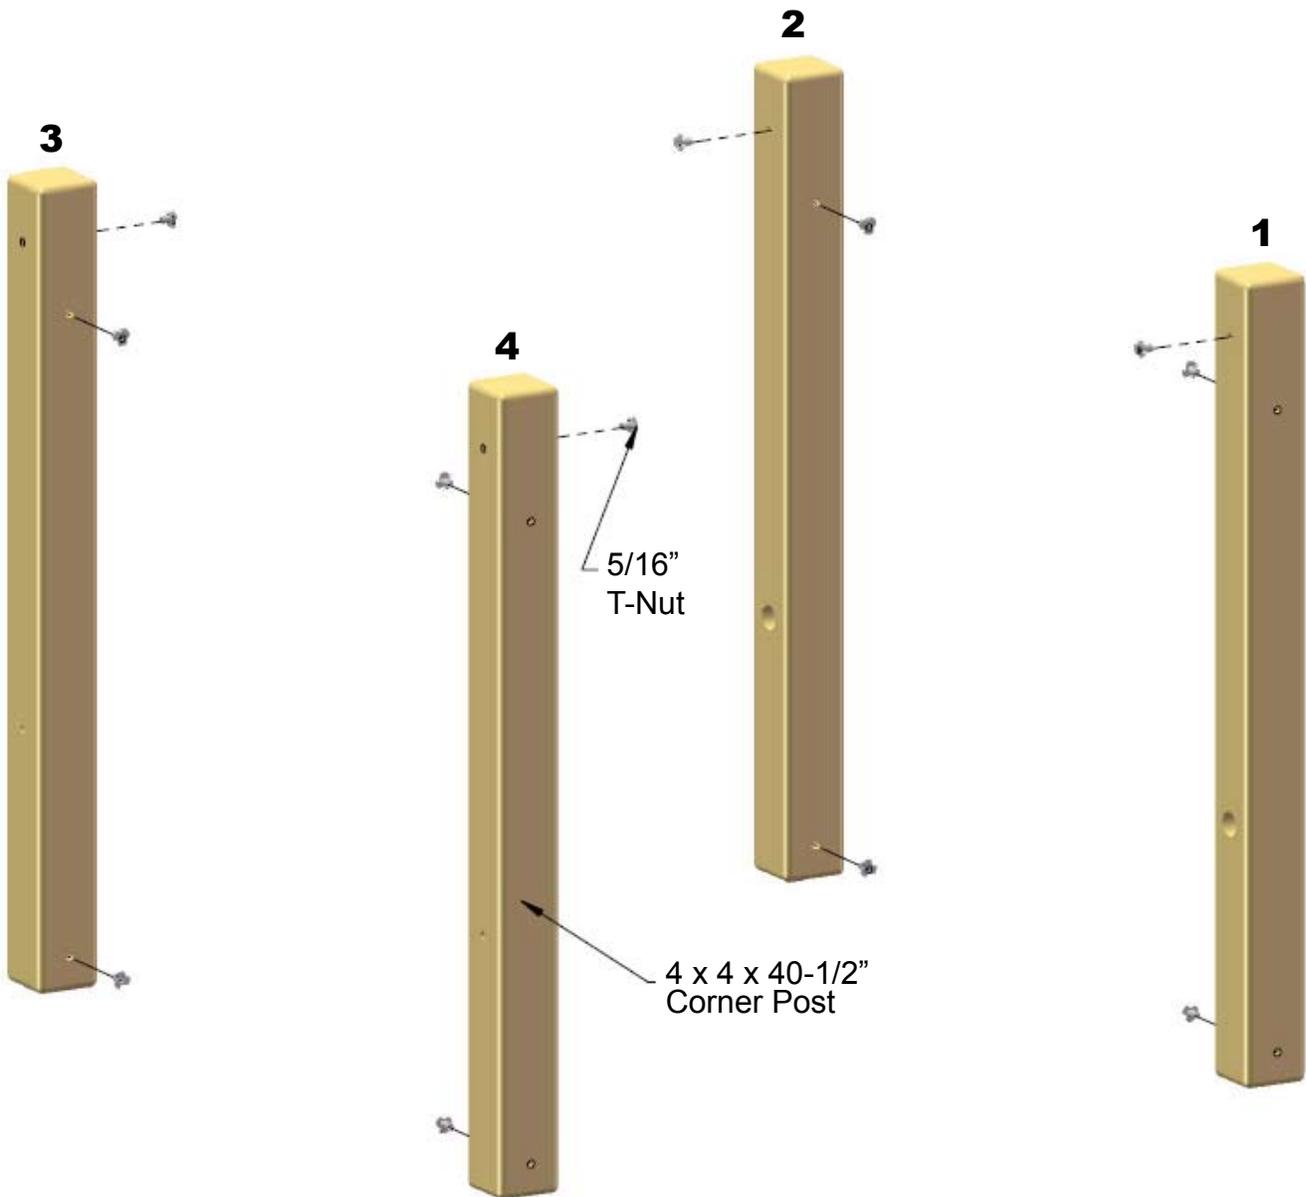


## Step 10: Installing Corner Posts

1: Take the Corner Posts with the t-nuts installed from the previous step and arrange the posts in their proper orientation. (The Corner Posts are shown below with numbers to reference the previous step.)

2: The Corner Posts should be oriented with the counter-sunk holes facing toward each other on both sides. The Corner Posts should be placed between the Inner and Outer Fort Supports, and rest flush against the angled end of the Ladder and Rock Wall Assemblies. The hole at the bottom of each Corner Post should be lined up with the counter-sunk hole of the Outer Fort Support. The t-nuts in the bottom hole of the Corner Posts should face each other on the inside of the fort.


3: Install the Corner Posts with 5/16 x 4" hex bolts and 5/16" washers.

4: Do not install any lag screws at this time.

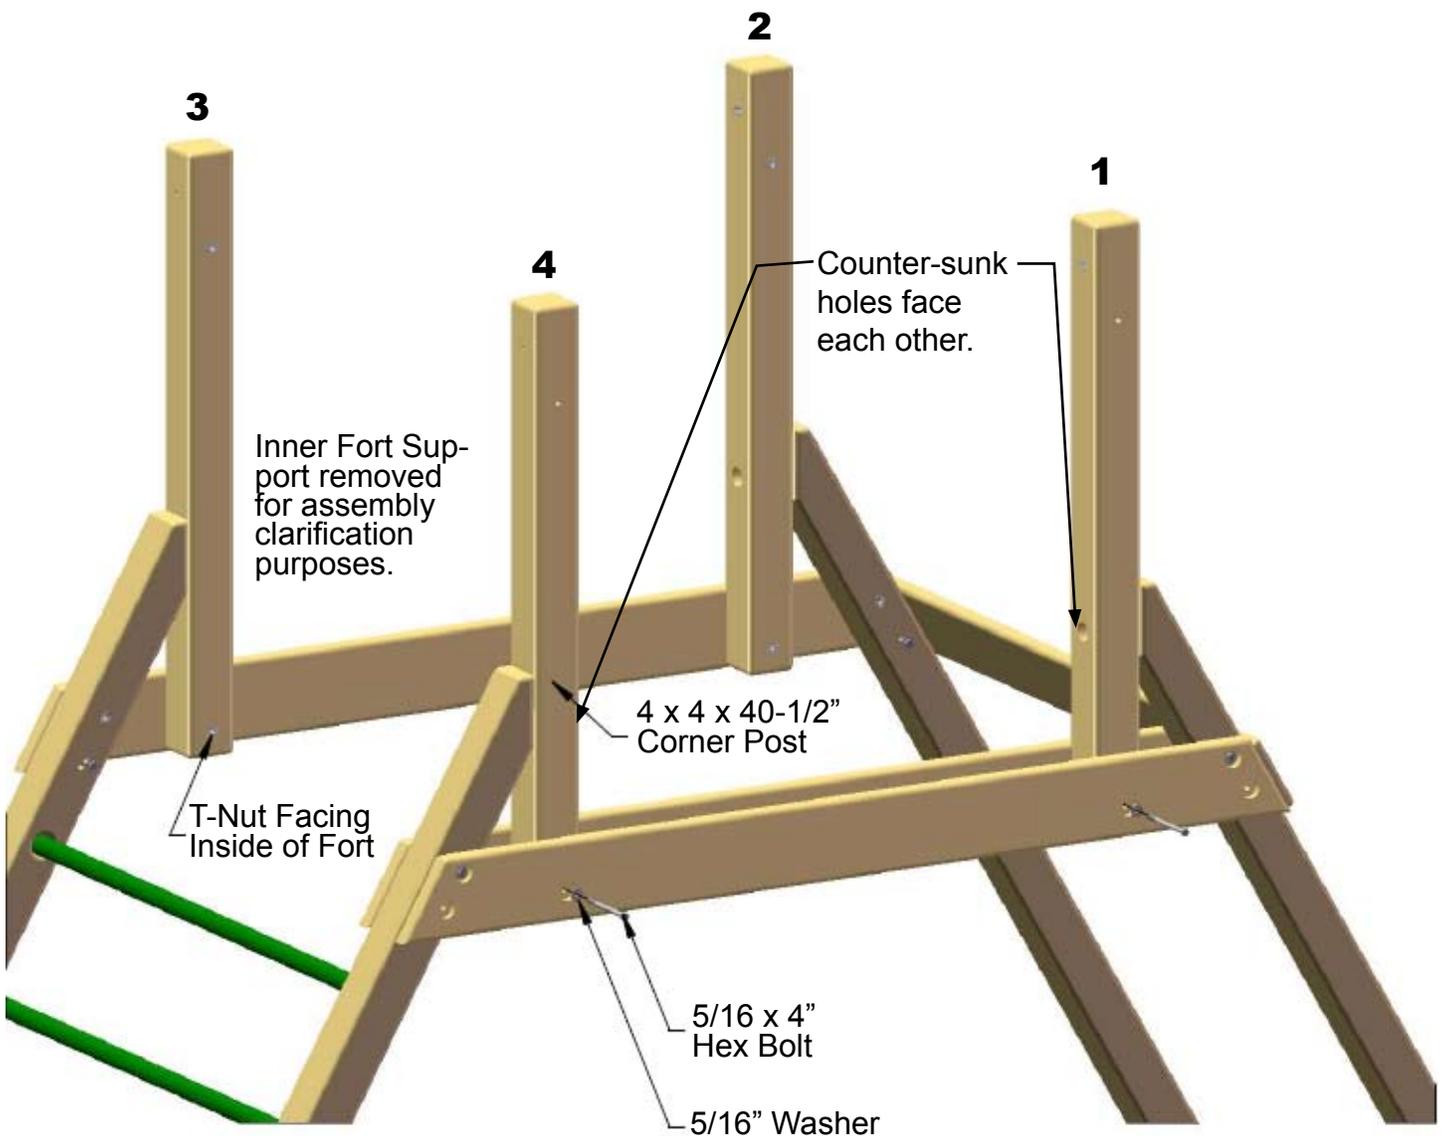


## Step 11: Attaching Swing Beam Plate to the Swing Beam Side Rail

- 1: Find the 4 x 4 x 108" Swing Beam Side Rail. Note the difference between the Swing Beam Side Rail and the Side Rail. The Swing Beam Side Rail will have three more counter sunk holes on one side than the Side Rail.
- 2: Find the Swing Beam Plate.
- 3: Place the Swing Beam Plate on top of the Swing Beam Side Rail and line up the three holes on the plate with the three holes on the Swing Beam Side Rail. Make sure the counter-sunk holes are on the opposite side of the Swing Beam Plate.
- 4: Fasten the Swing Beam Plate to the Swing Beam Side Rail with two 3/8" X 3-1/2" carriage bolts on top.
- 5: Finish installing the Swing Beam Plate to the Swing Beam Side Rail with 3/8" washers, and 3/8" lock nuts on the bottom. Install bolt caps over any exposed threads.

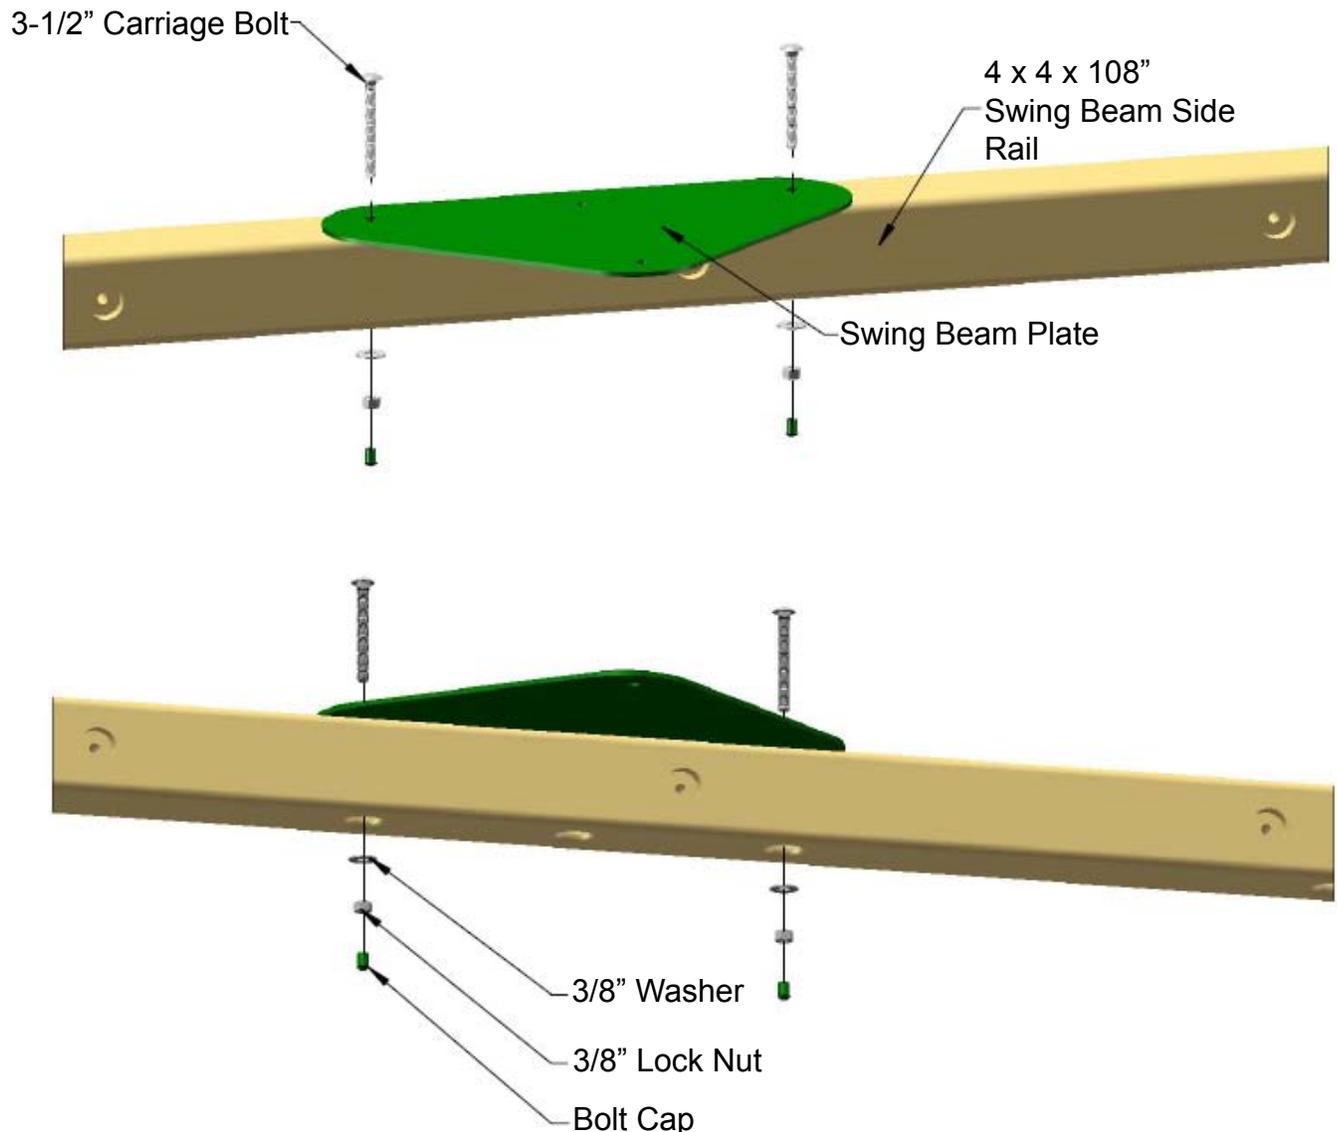


## Step 12: Attaching the Swing Beam Side Rail

- 1: Take the 4 x 4 x 108" Swing Beam Side Rail with the Swing Beam Plate and line up the pilot holes in the Corner Posts with the holes in the Swing Beam Side Rail.
- 2: Fasten the Swing Beam Side Rail with 5/16 x 6" hex bolts and 5/16" washers into the t-nuts in the Corner Posts.

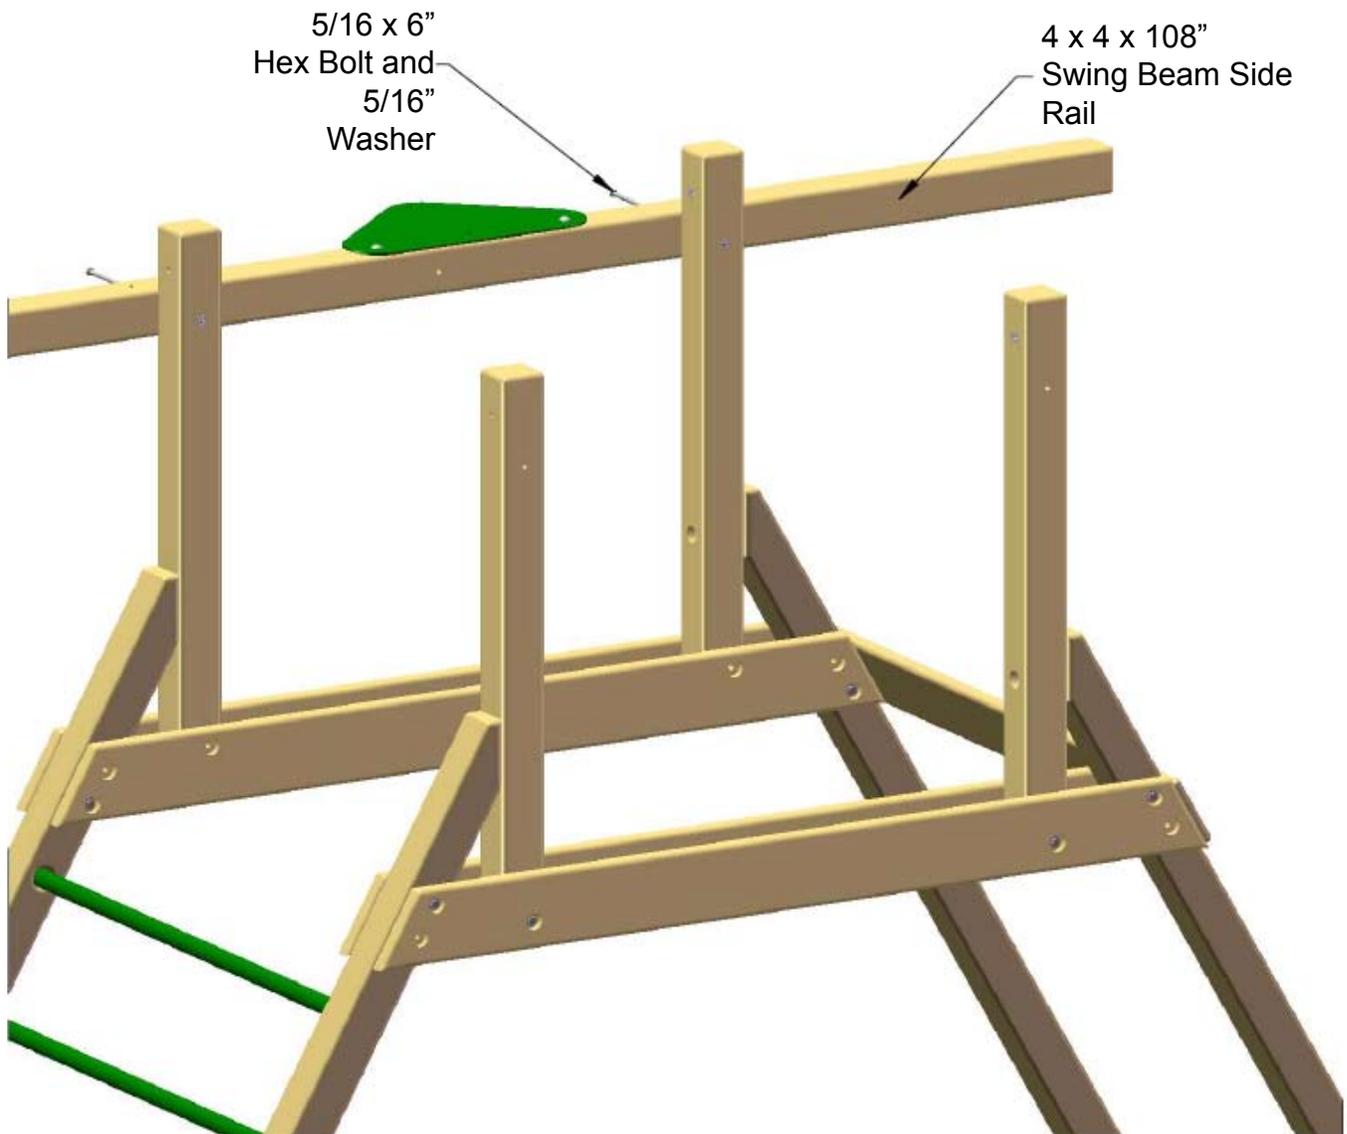


### Step 13: Attaching the Side Rail

- 1: Take the 4 x 4 x 108" Side Rail and line up the pilot holes in the Corner Posts with the holes in the Side Rail.
- 2: Fasten the Side Rail with 5/16 x 6" hex bolts and 5/16" washers into the t-nuts in the Corner Posts.

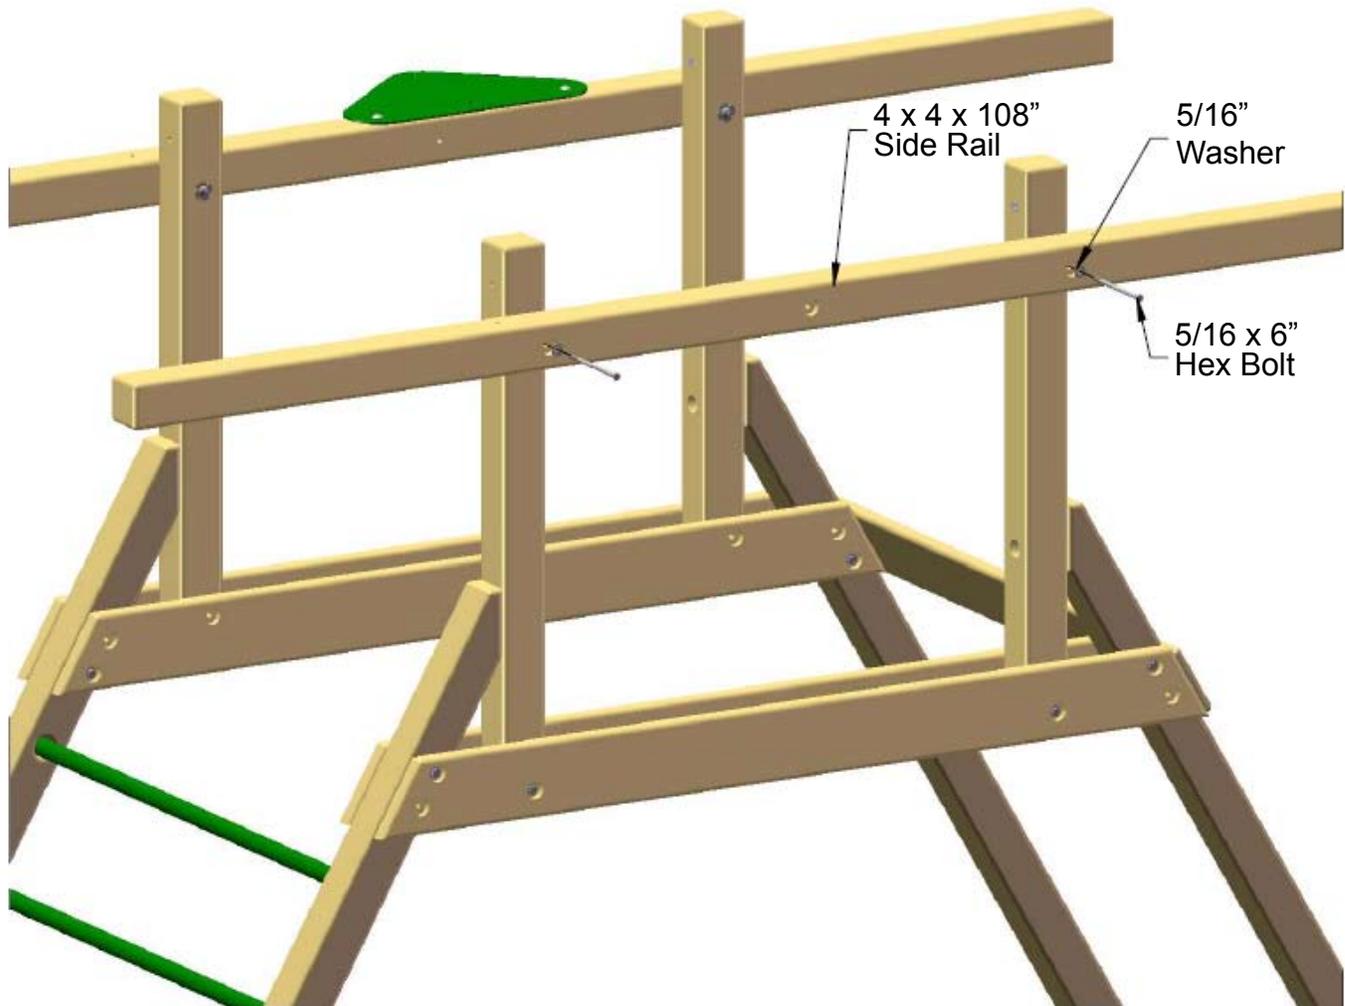


## Step 14: Attaching the Rope Ladder Runner and the Rock Wall Rope Support

- 1: Find the 4 x 4 x 88" Rope Ladder Runner and lay it on top of the Side Rail and the Swing Beam Side Rail on the ladder side of the fort.
- 2: Line up the counter-sunk holes of the Rope Ladder Runner with the holes in the Corner Posts and attach with 5/16 x 6" hex bolts with 5/16" washers. The three holes on the end of the Rope Ladder Runner should be on the opposite side of the Swing Beam Plate before installing.
- 3: Find the 4 x 4 x 55" Rock Wall Rope Support and lay it on top of the Side Rail and the Swing Beam Side Rail on the rock wall side of the fort.
- 4: Line up the counter-sunk holes of the Rock Wall Rope Support with the holes in the corner posts and attach with 5/16 x 6" hex bolts with 5/16" washers.

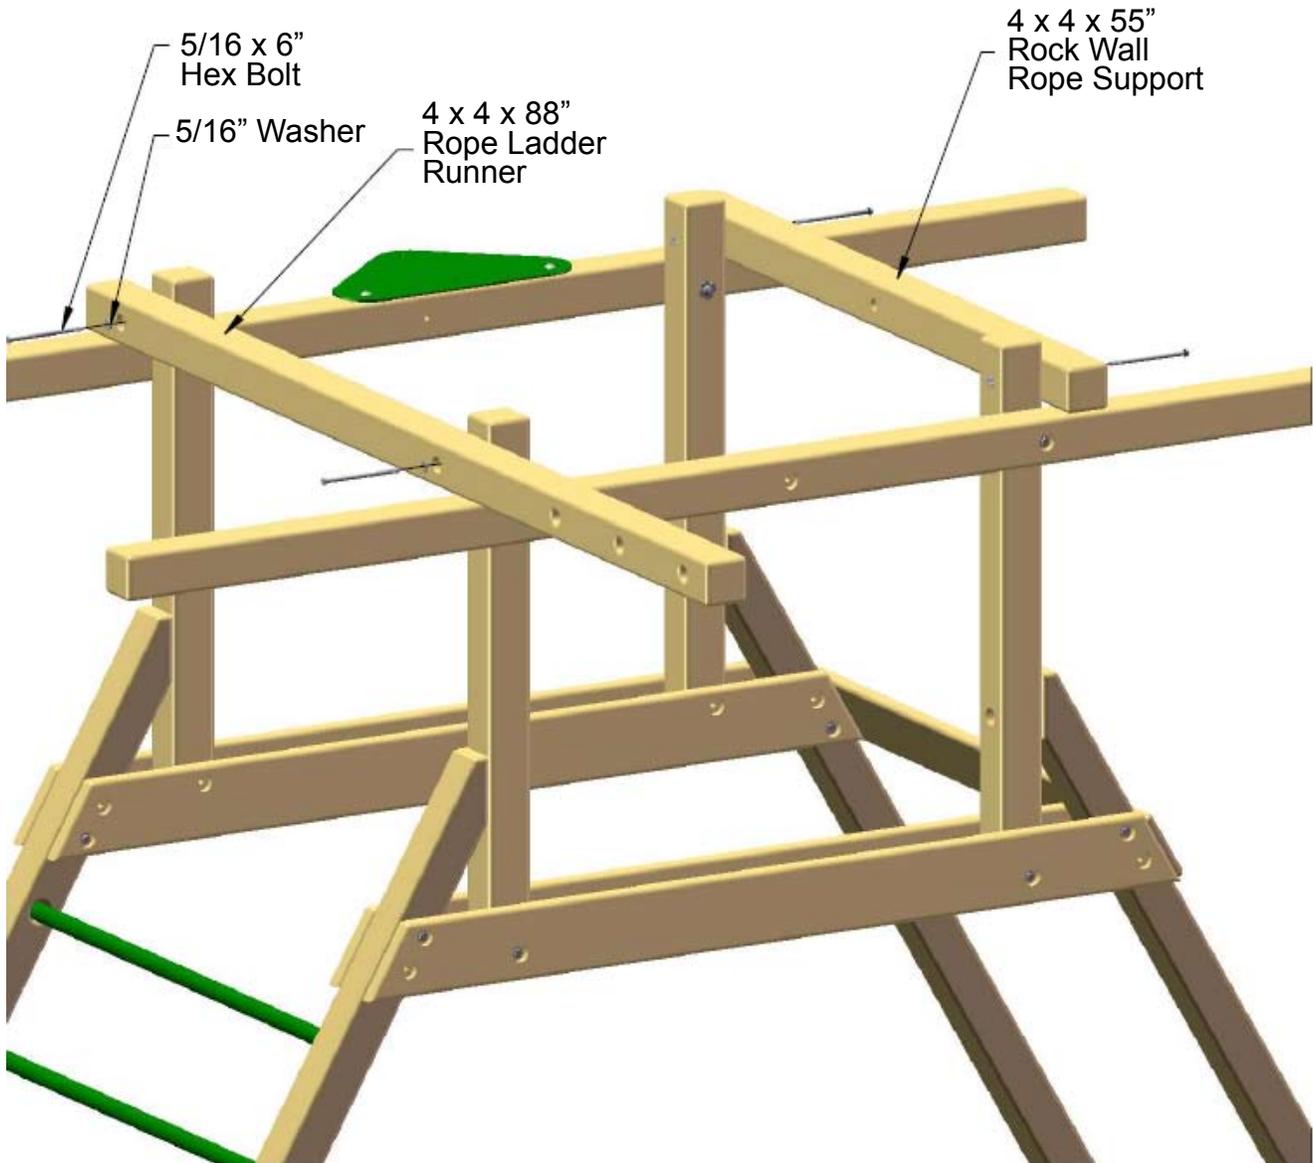


## Step 15: Installing Lag Screws

- 1: Make sure that the unit is level and square.
- 2: Starting at the Inner and Outer Fort Supports, use 3/8 x 3-1/2" lag screws with 3/8" washers in the empty holes on the 2 x 6 parts to secure the base of the fort.
- 3: The upper part of the fort needs to be secured with 3/8 x 5" lag screws with 3/8" washers in the empty holes of the 4 x 4 parts.

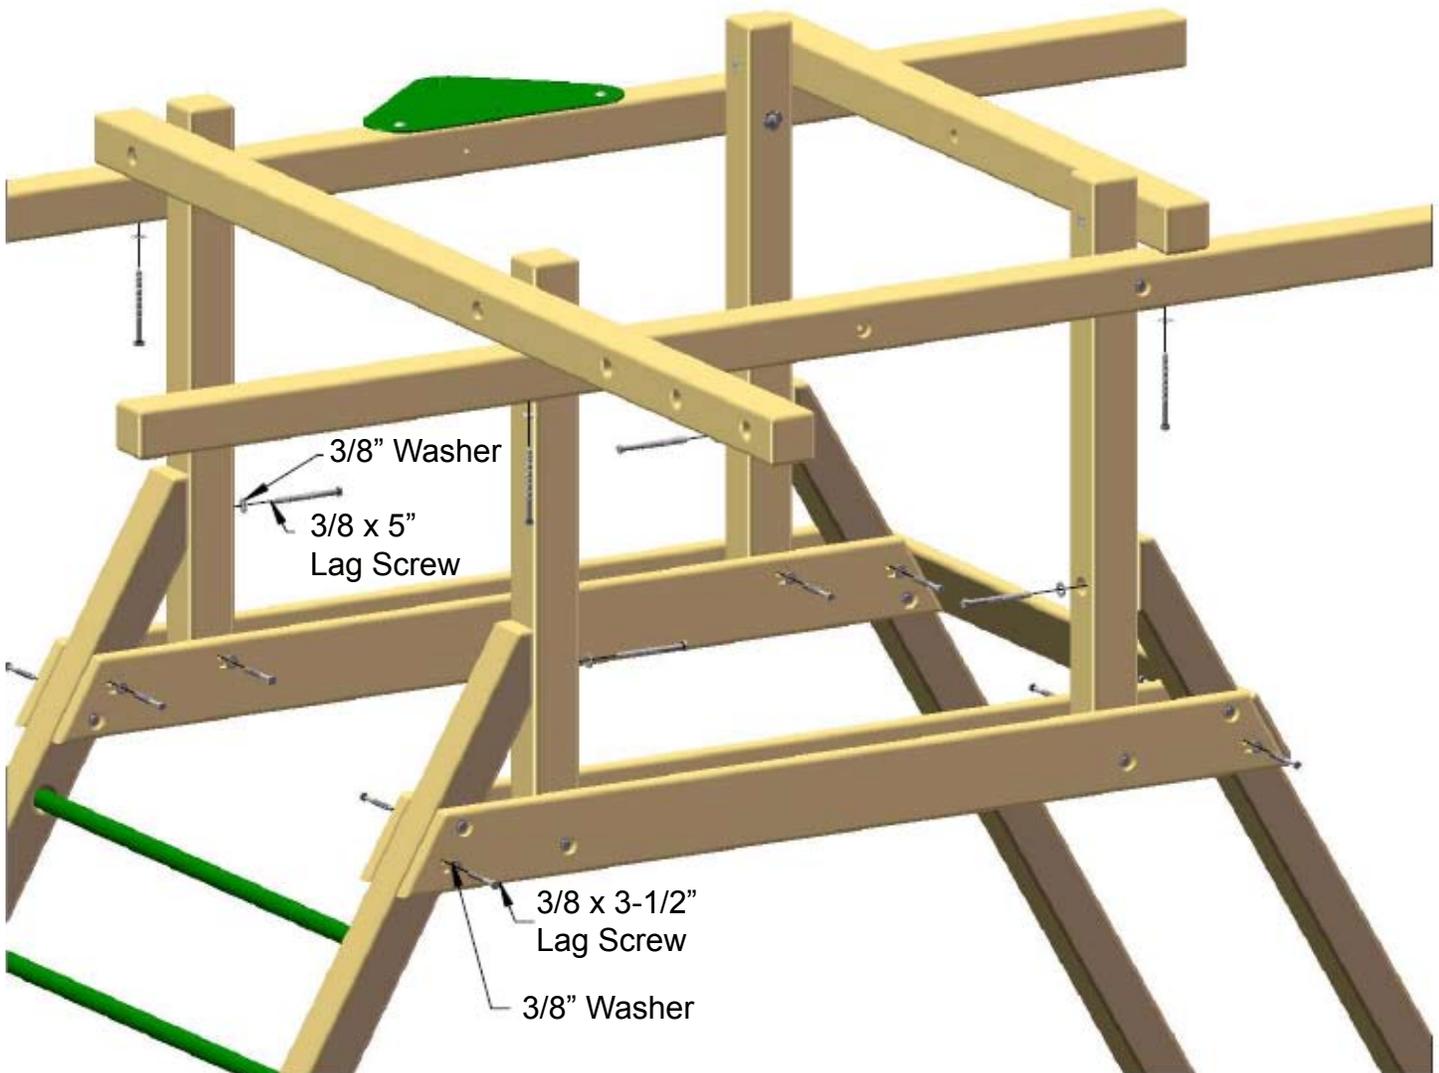


## Step 16: Installing Rock Wall Boards

- 1: Find nine 5/4 x 6 x 48" Rock Wall Boards.
- 2: Lay the Rock Wall Boards across the Rock Wall Sides on top of the previously installed Rock Wall Boards.
- 3: Attach the Rock Wall Boards with two 2" wood screws per end.
- 4: The final board will be the 5/4 x 6 x 48" Bottom Rock Wall Board with one hole in the center. It will attach in the same manner as the other Rock Wall Boards.
- 5: After assembly, your rock wall may have a gap at the bottom. This is normal due to milling variances and wood shrinkage.

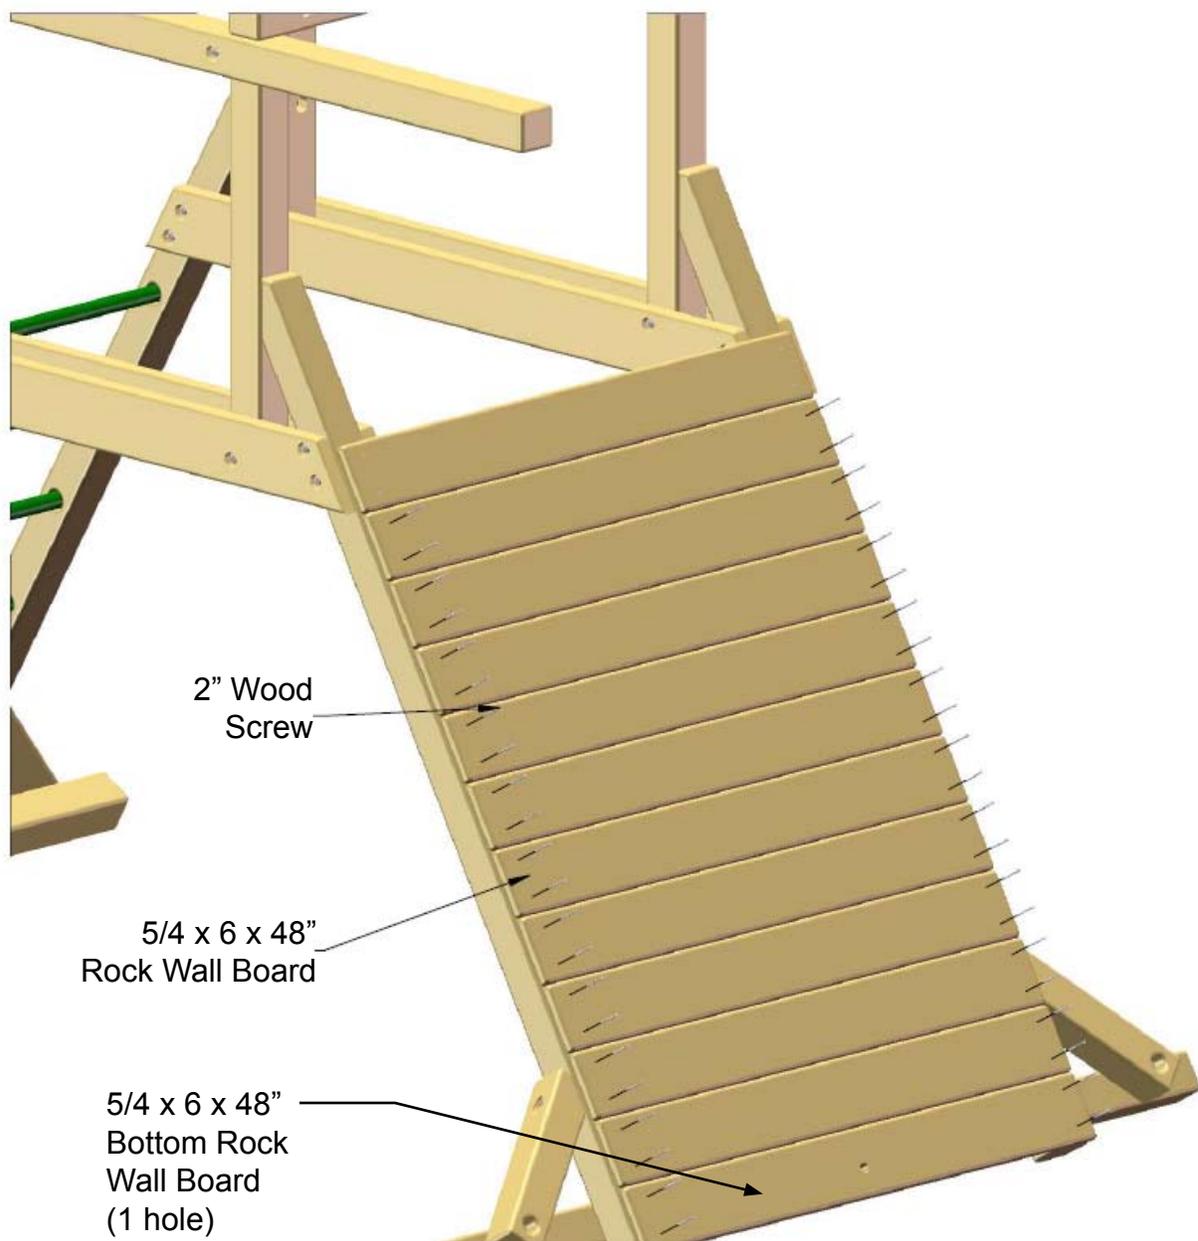

## Step 17: Installing the Bottom Panel Boards


- 1: Find the 2 x 4 x 45" Rear Bottom Panel Board.
- 2: Lay the board across the Outer Fort Support on the swing beam side of the fort, centered between the two corner posts.
- 3: Attach the Rear Bottom Panel Board with 3/8 x 3-1/2" lag screws and 3/8" washers.
- 4: Find two 2 x 4 x 10" Bottom Panel Boards.
- 5: Lay the board across the Outer Fort Support on the front of the fort, flush with the outside of the two corner posts.
- 6: Attach the Bottom Panel Boards with 3/8 x 3-1/2" lag screws and 3/8" washers.

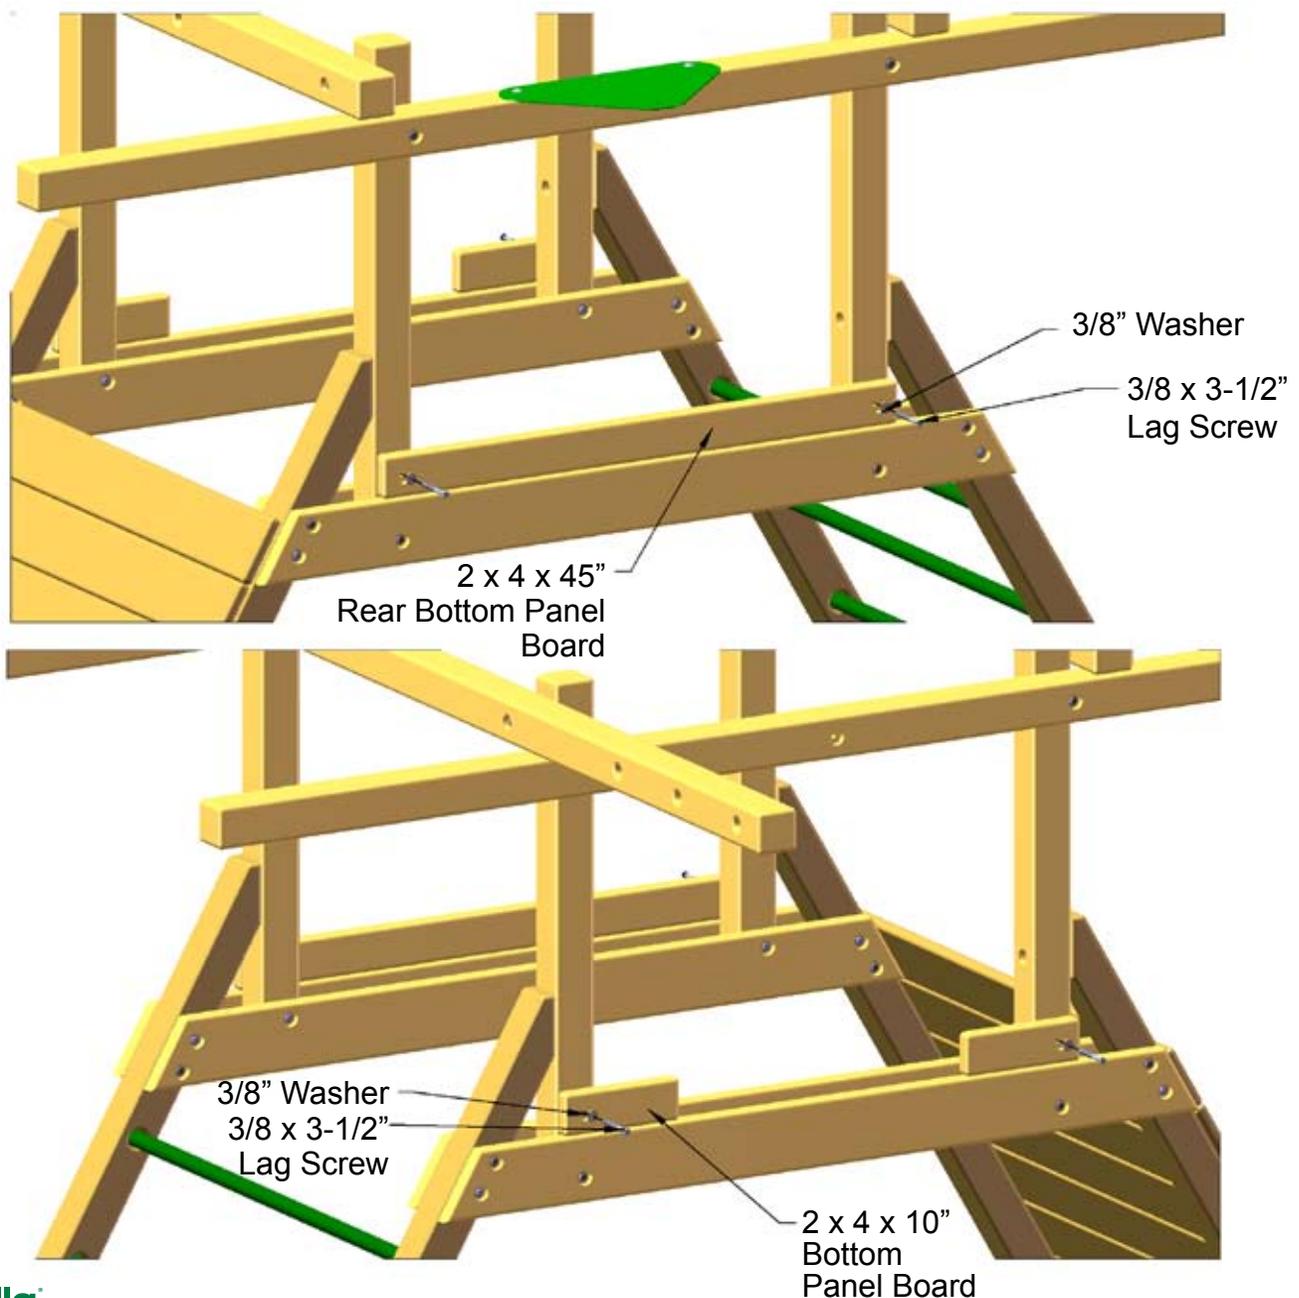

## Step 18: Deck

- 1: Find seven 2 x 6 x 47-3/4" Deck Boards.
- 2: Lay the Deck Boards across the Inner Fort Supports, between the Bottom Panel Boards and Rear Bottom Panel Board and inside the area between the corner posts.
- 3: Find four 2 x 6 x 41-1/4" Deck Spacers.
- 4: Lay two Deck Spacers across the Inner Fort Supports on the ladder and rock wall sides of the fort.
- 5: Make sure that all boards are evenly spaced across the deck and attach the Deck Boards and Deck Spacers to the Inner Fort Supports with two 2-1/2" wood screws per side.

**MAKE SURE ALL BOARDS ARE EVENLY SPACED  
ACROSS THE DECK BEFORE SECURING.**

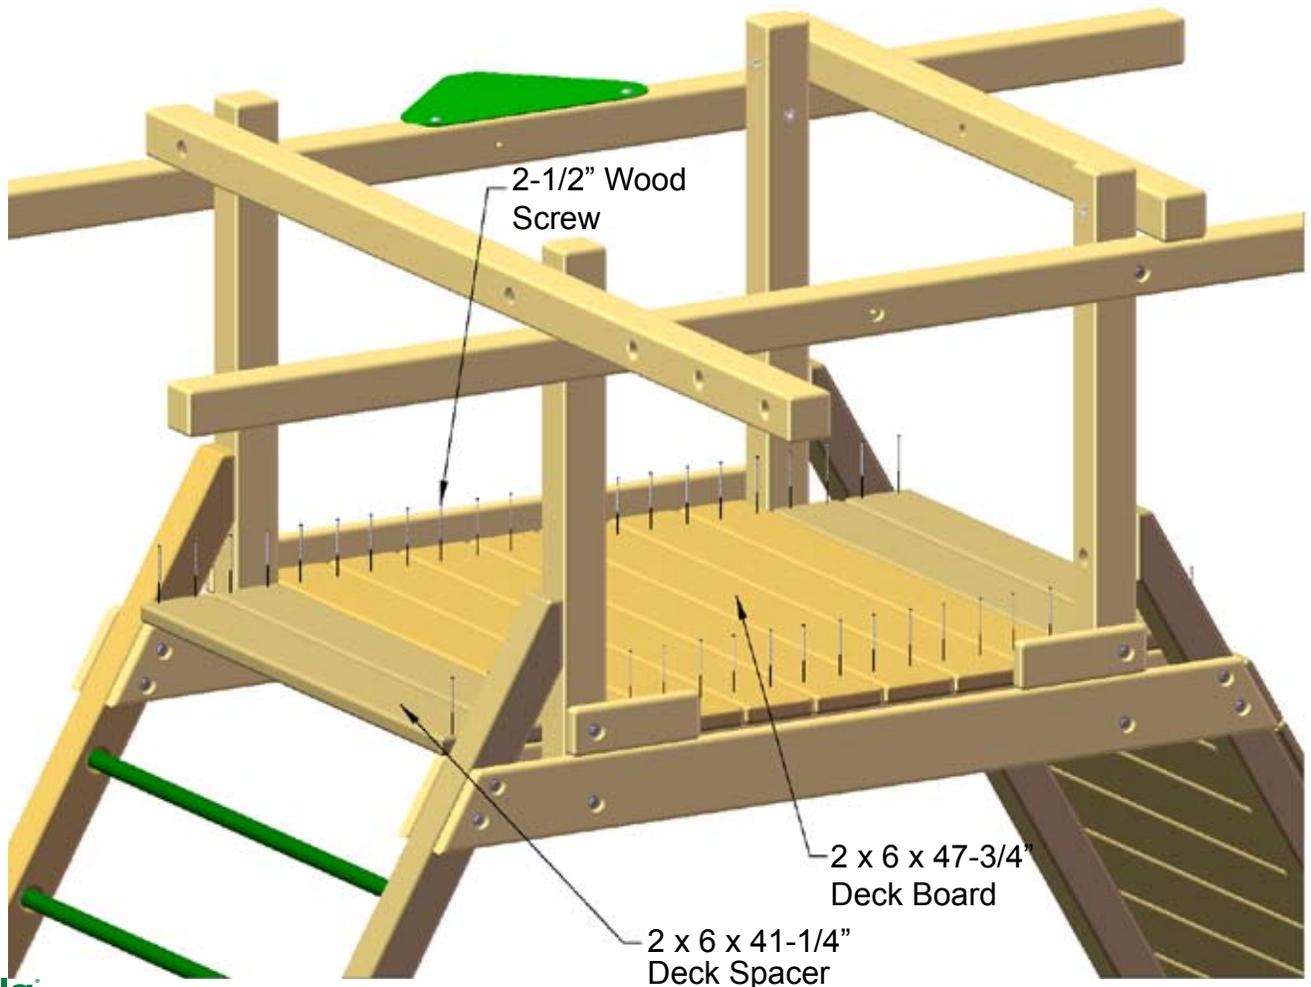

## Step 19: Center Posts

1: Take the 2 x 4 x 73-3/4" Rear Center Post, and line up the hole in the post with the through hole in the Swing Beam Side Rail. Take note that the hole in the Rear Center Post is not on center, and the shorter end of the post will face down.

2: When the Rear Center Post is lined up properly, install a 5/16" t-nut into the hole in the Rear Center Post.


3: Fasten the Rear Center Post to the fort with 5/16 x 4" hex bolts and 5/16" washers through the Swing Beam Side Rail, and into the t-nuts of the rear center post.

4: Make sure that the Rear Center Post is square and level, and fasten with 2-1/2" wood screws through the bottom of the post.

5: Take the 2 x 4 x 48" Front Center Post, and install a 5/16" t-nut into the hole in the Front Center Post. Line up the hole in the post with the through hole in the Side Rail.

6: When the Front Center Post is lined up properly, fasten the Front Center Post to the fort with a 5/16 X 4" hex bolt and a 5/16" washer through the Side Rail, and into the t-nut of the Front Center Post.

7: Use a 2-1/2" wood screw to keep the Front Center Post stabilized and to keep it from spinning after it has been installed.

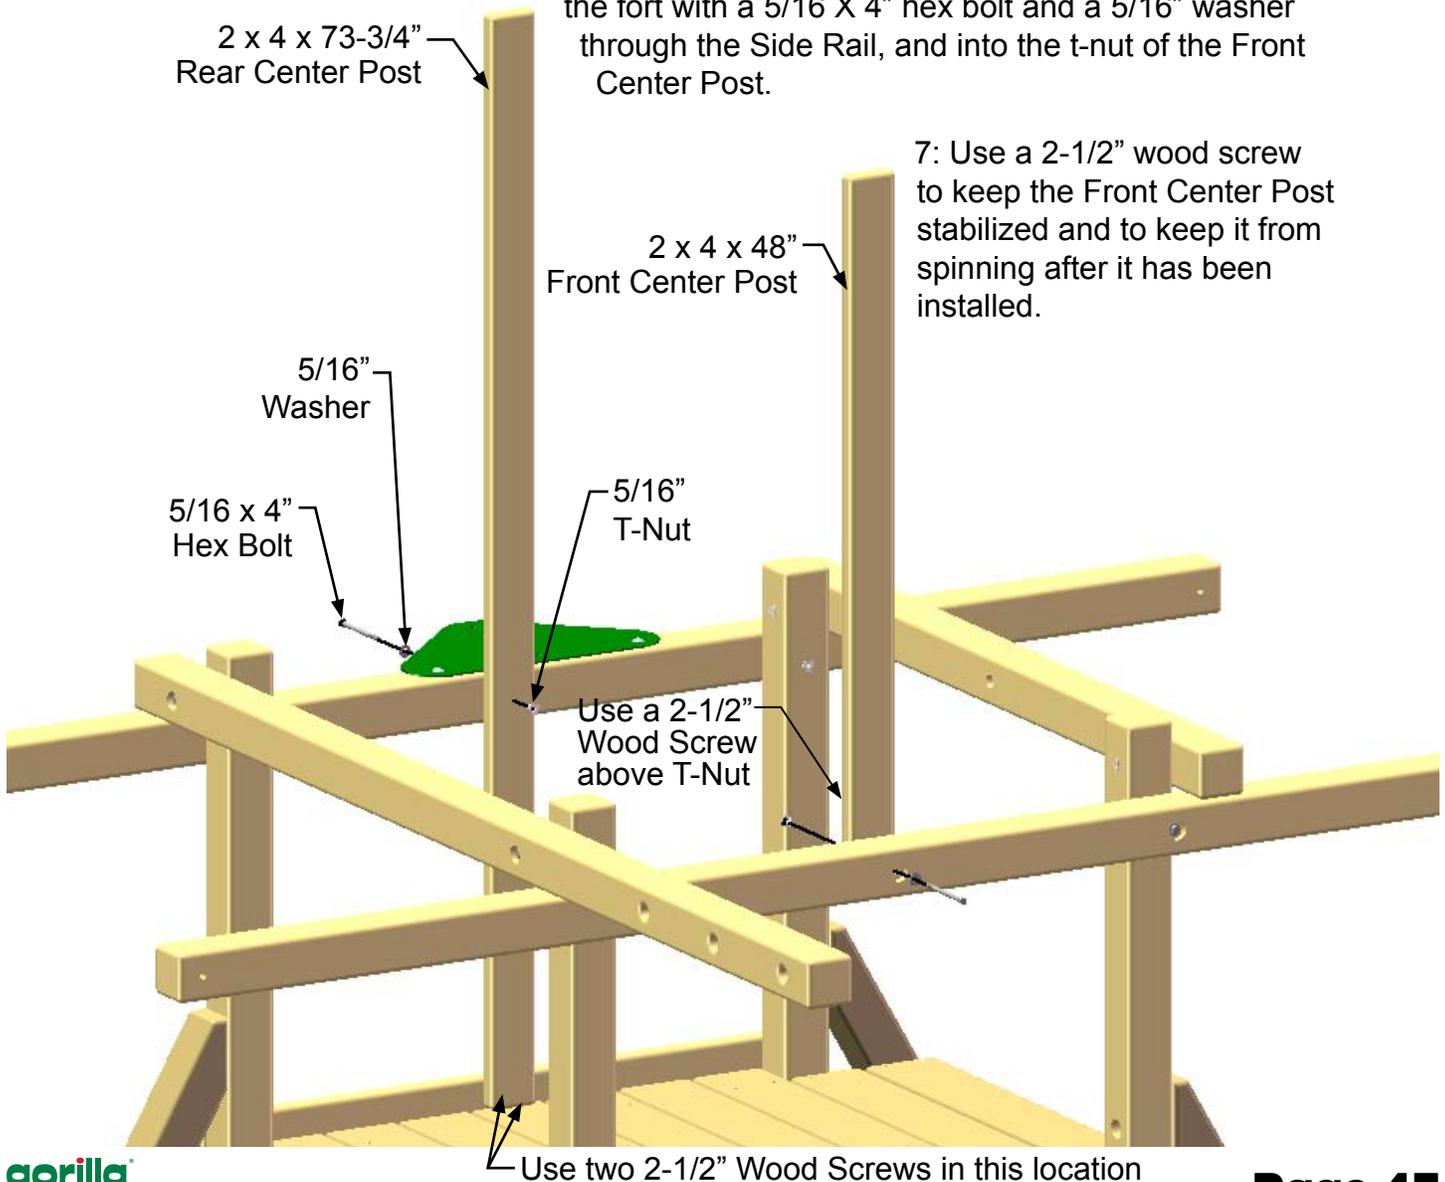


Use two 2-1/2" Wood Screws in this location

## Step 20: Drill holes for Roof Supports

1: On the end of the INSIDE surface of the 4 x 4 x 108" Swing Beam Side Rail and the 4 x 4 x 108" Side Rail you will need to drill two 3/16" diameter holes 2-1/2" deep. One hole per end.

2: Measure as shown below and drill a hole in each end of both rails on the INSIDE SURFACE.

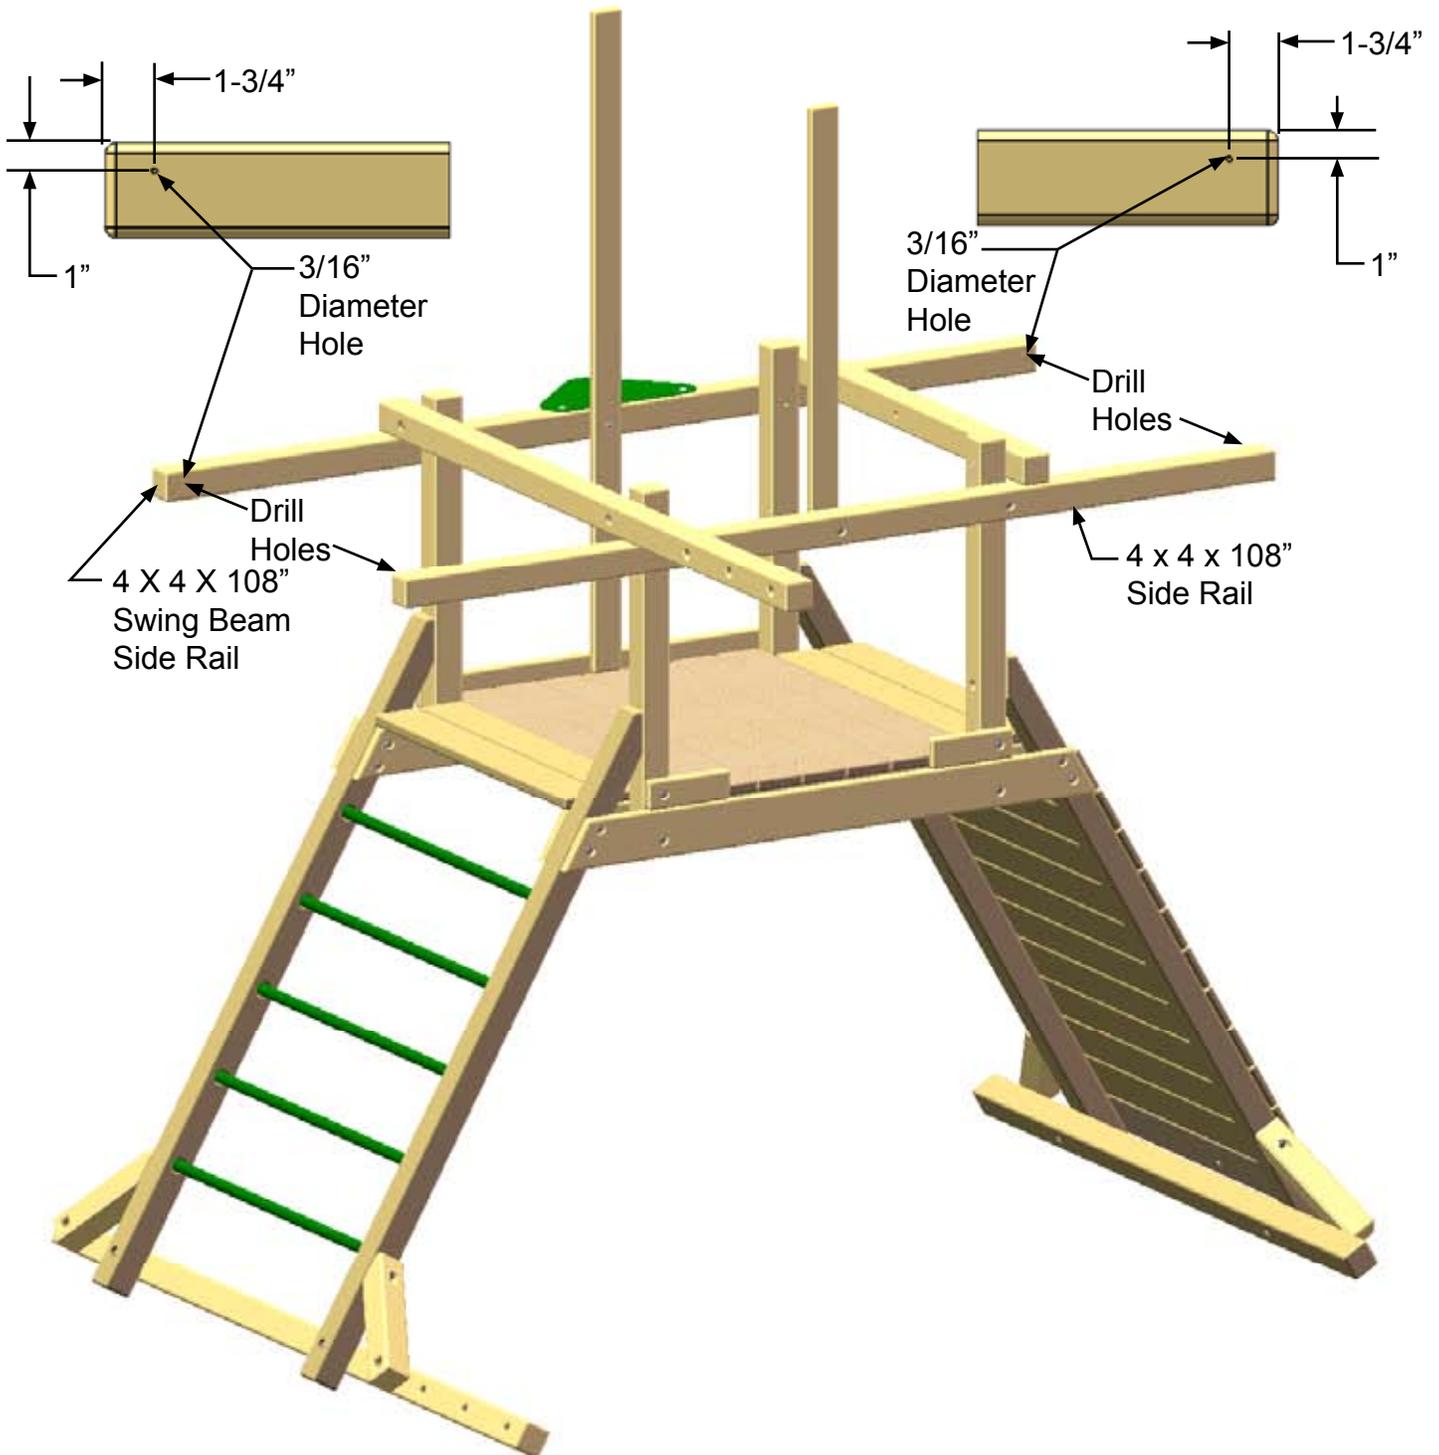


## Step 21: Roof Supports

1: Find two 2 x 4 x 70" Roof Support - Left and two 2 x 4 x 70" Roof Support - Right.


Lean the angled end of each roof support against the center posts. The other end of each roof support should have the counter-sunk hole facing the inside.

2: Fasten the counter-sunk end of each roof support to the inside of the rails with one 5/16" x 3-1/2" lag screw and one 5/16" washer.

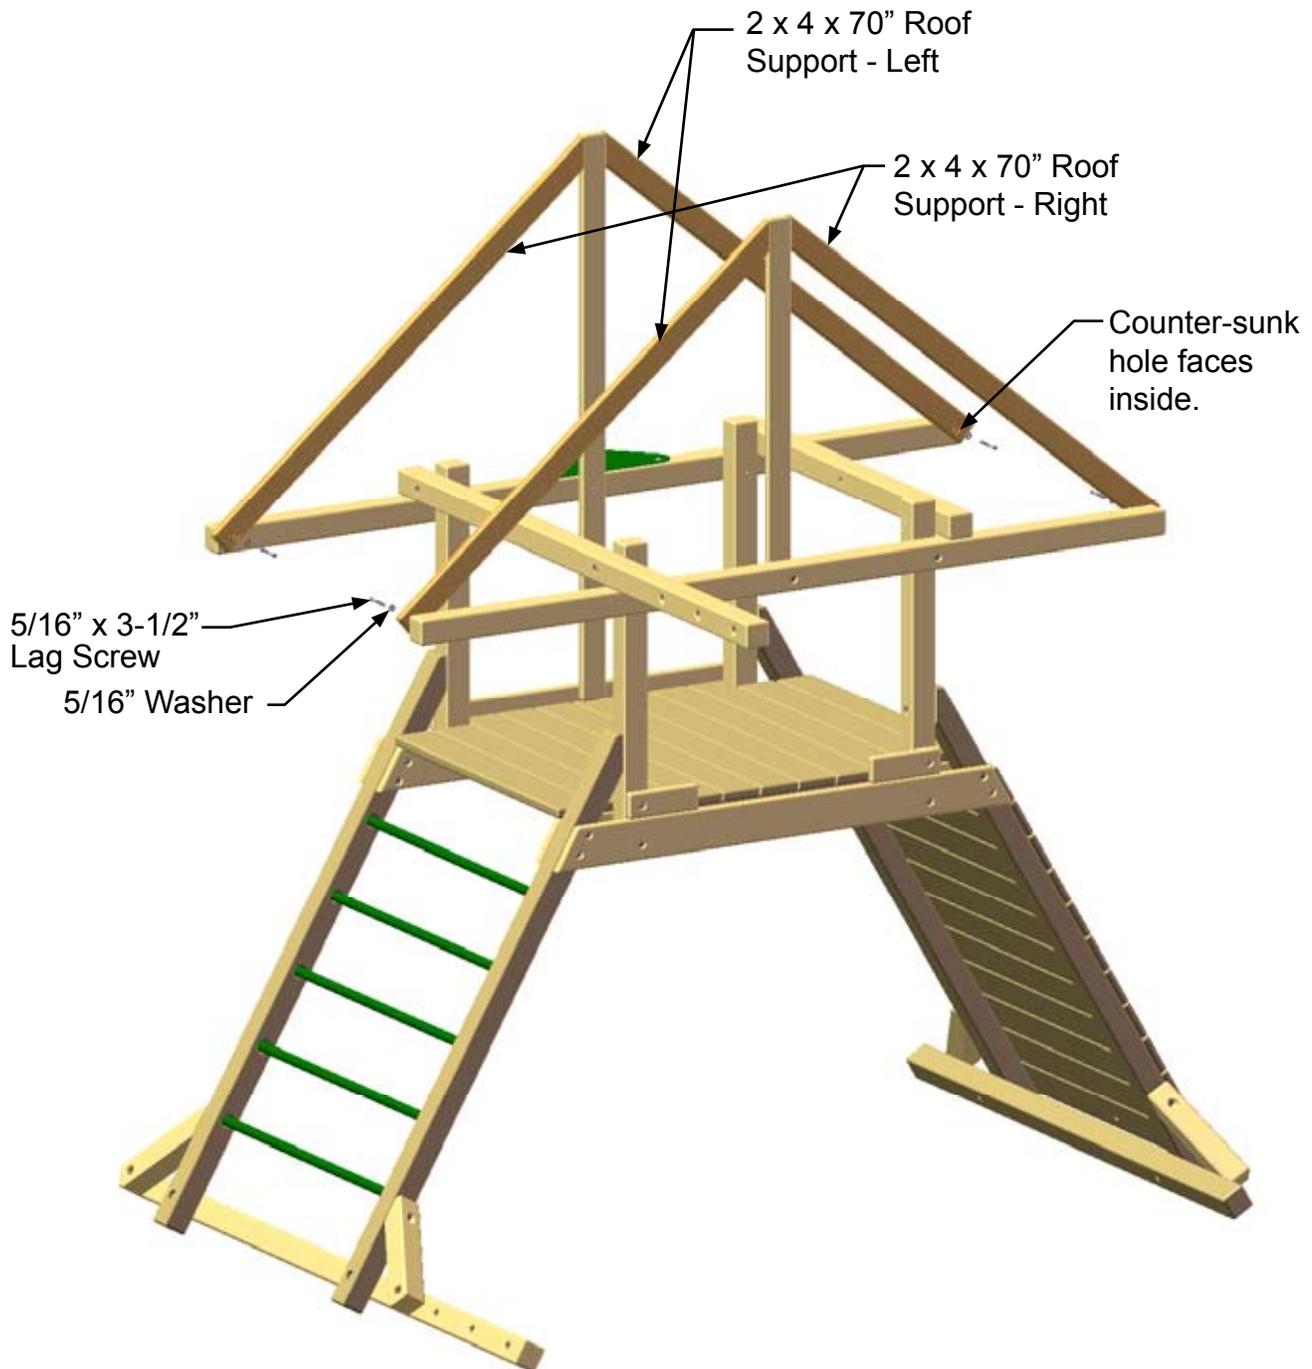


## Step 22: Roof Peak Supports

- 1: Find two 5/4 x 6 x 13" Roof Peak Supports. Each Roof Peak Support will be attached on the outside of the roof supports and center post.
- 2: Make the top angled surfaces of the Roof Peak Supports flush with the top surfaces of the Roof Supports.
- 3: Attach each Roof Peak Support to the Roof Supports and center post with 2" wood screws as shown below.

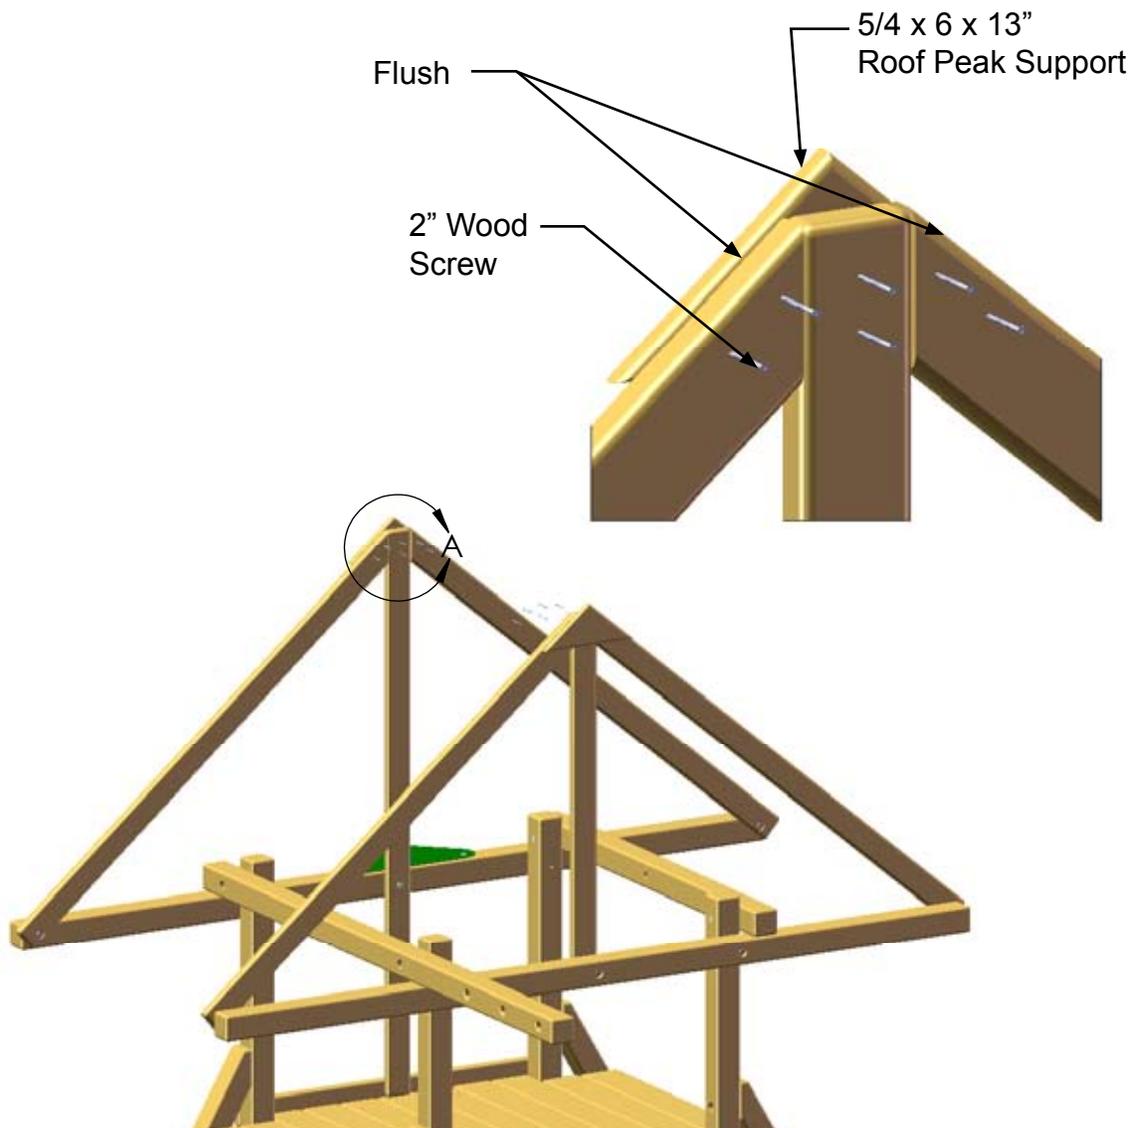

## Step 23: Roof Starters and Roof Peak


- 1: Find two 1 x 4 x 55" Roof Starters (groove only) and one 3-1/2" x 3-1/2" x 55" Roof Peak.
- 2: Place the 1 x 4 x 55" Roof Starters (groove only) at the peak of the roof. The holes in the Roof Starters should be centered over the top of the triangular shaped Roof Peak Supports. The flat side of the Roof Starters should be placed as close together as possible near the peak without the boards overlapping.
- 3: Fasten each Roof Starter to the center of each triangular shaped Roof Peak Supports with 1-1/2" wood screws.
- 4: Place the 3-1/2" x 3-1/2" x 55" Roof Peak on top of the Roof Starters and attach with 1-1/4" wood screws.

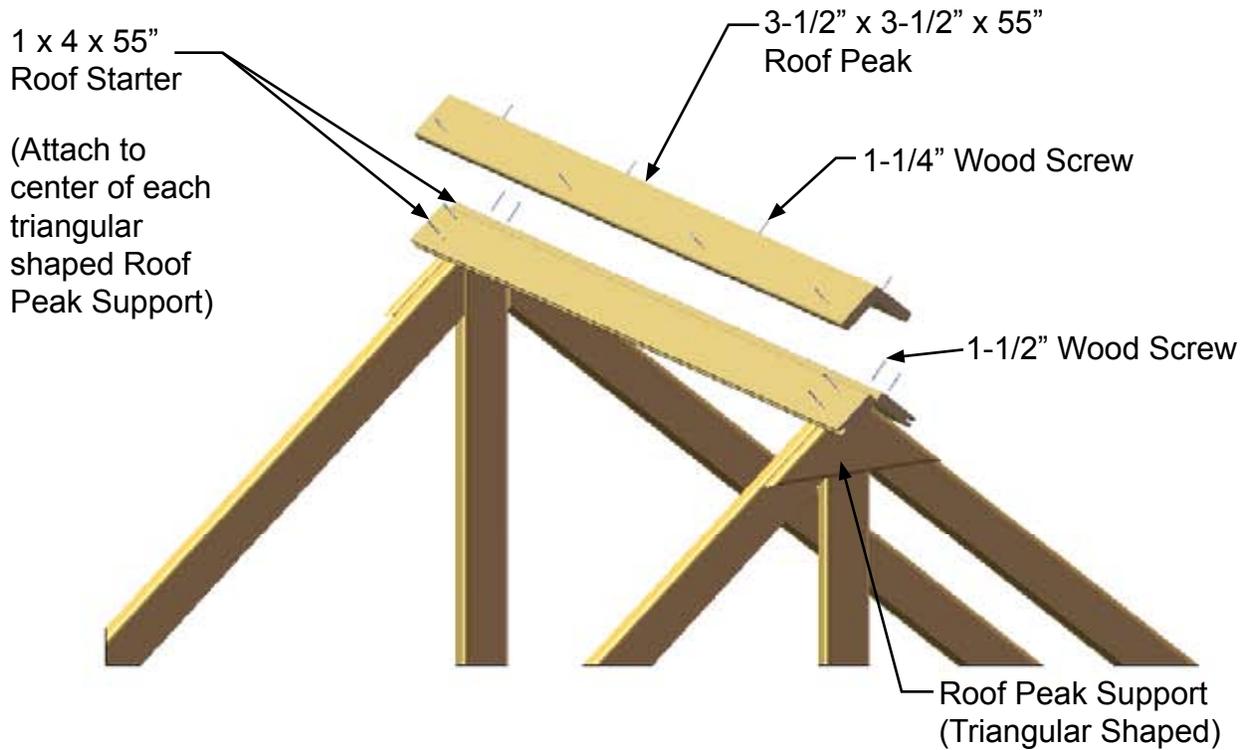

## Step 24: Roof Boards/Chimney and Dormers

1: Place the 1 x 5 x 55" Roof Board on top of the Roof Supports, fitting the tongue into the groove of the Roof Starter. The holes in the Roof Boards should be centered over the Roof Supports. There are seventeen Roof Boards on each side of the roof. If necessary place a scrap 2 x 4 board against the Roof Board and hammer on it to seat the tongue into the groove for the Roof Boards. Fasten each Roof Board to the Roof Supports with four 1-1/2" wood screws.


**Tip:** Use the instructions provided with the Chimney and Dormers to build them. After putting in three Roof Boards on the right roof STOP and then install the Chimney. Notice the mounting block for the Chimney will get installed on the first Roof Board. Once the 11th Roof Board is installed mount the Dormers as shown below centered on the roof.

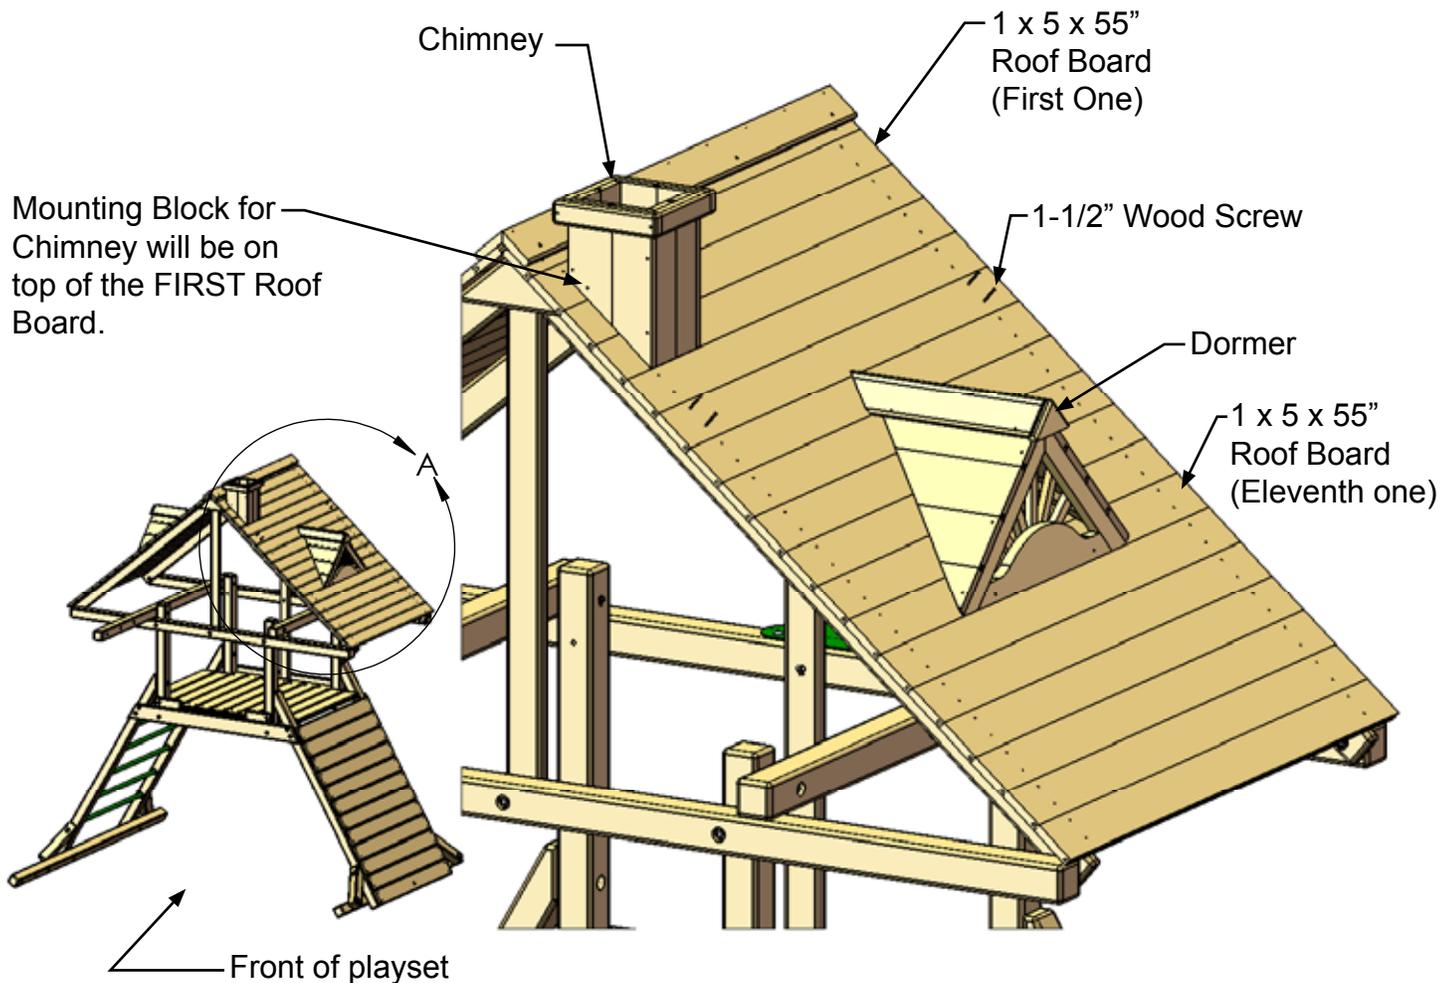

## Step 25: Roof Finishers & End Caps


1: Place the 2 x 4 x 48" Roof End Cap on the ends of the Roof Supports. The top surface of the Roof End Cap should be flush with the top of the Roof Supports. Attach the Roof End Cap to the Roof Supports with 2-1/2" wood screws. Repeat for the other Roof End Cap on the other side of the roof.

2: Slide the tongue of the 1 x 4 x 55" Roof Finisher into the groove of the last Roof Board. Attach the Roof Finisher to the Roof Supports and the Roof End Cap with 1-1/2" wood screws. Repeat for the other Roof Finisher on the other side of the roof.

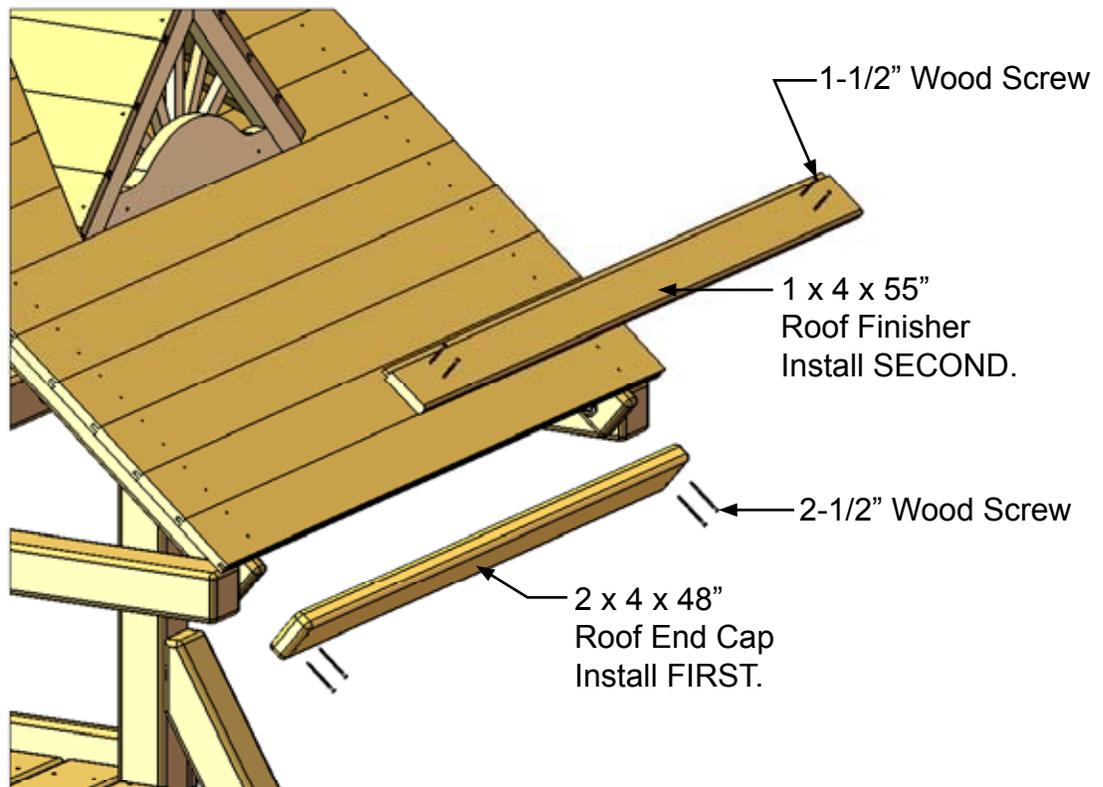


## Step 26: Sun/Sun Support Assembly

- 1: Place the 2 x 6 x 16" Sun on top of the 5/4 x 3 x 51" Sun Support as shown in the bottom picture. There should be a 1-1/4" distance between the bottom of the Sun and the bottom of the Sun Support.
- 2: Attach the Sun to the Sun Support with 2" wood screws.
- 3: Repeat sub steps 1 & 2 to make another Sun/Sun Support assembly.

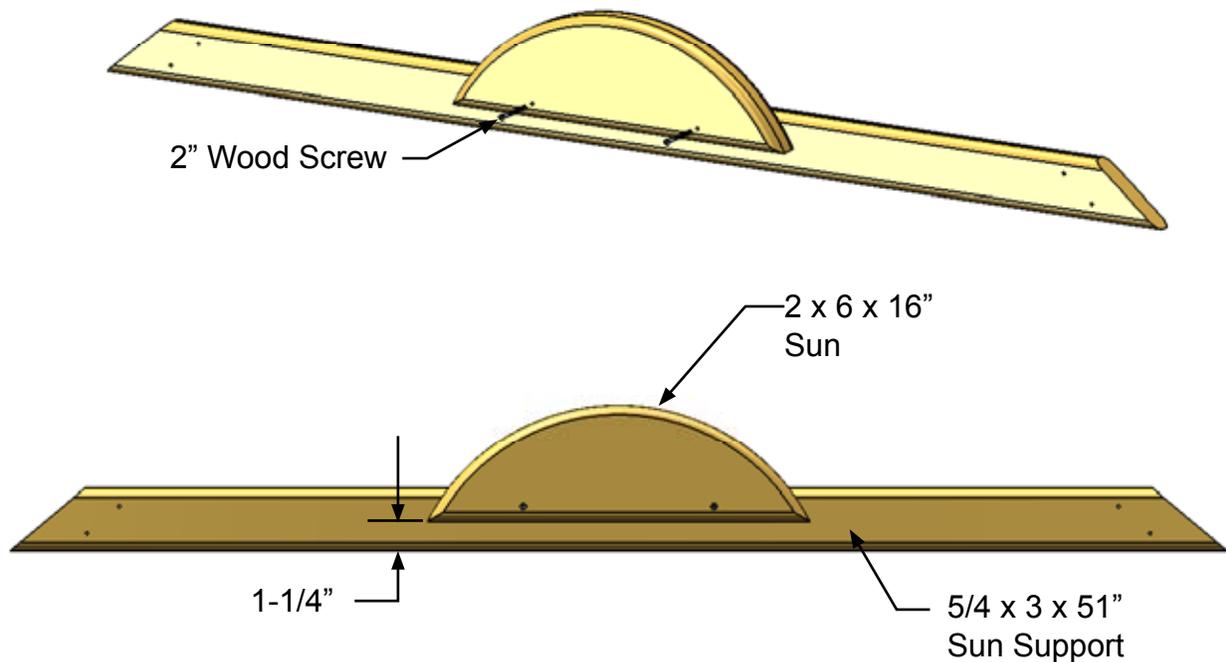

## Step 27: Sun/Sun Support Assembly Installation


- 1: Place the Sun/Sun Support assembly on top of the Roof Supports as shown below. Level the Sun Support.
- 2: Attach the Sun Support to the Roof Supports with 2" wood screws.
- 3: Go underneath the roof to attach the Center Post to the Sun Support with one 2" wood screw.
- 4: Repeat sub steps 1 thru 3 to attach another Sun/Sun Support assembly on the other side of the roof.

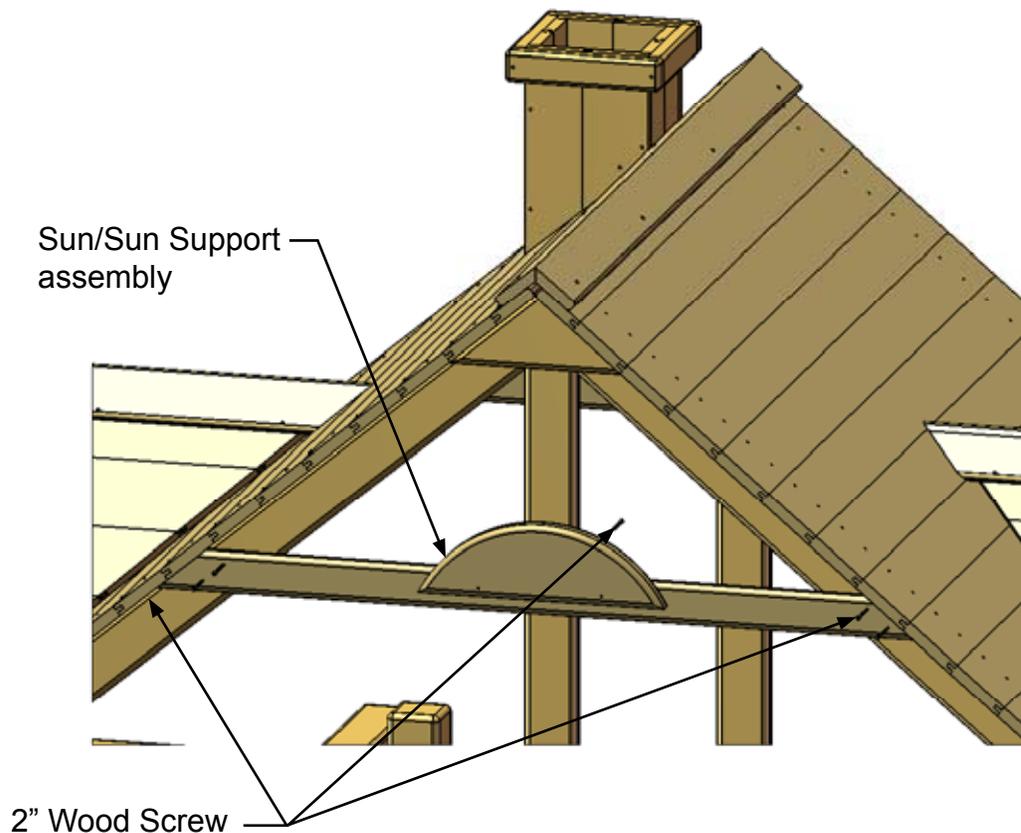

## Step 28: Sun Ray Installation

1: Place each 5/4 x 4 x 11-3/8" Sun Ray on top of the Roof Support and behind the Sun piece as shown below.


2: From the inside of the roof attach each Sun Ray to the Roof Support and the Sun with four 2" wood screws.

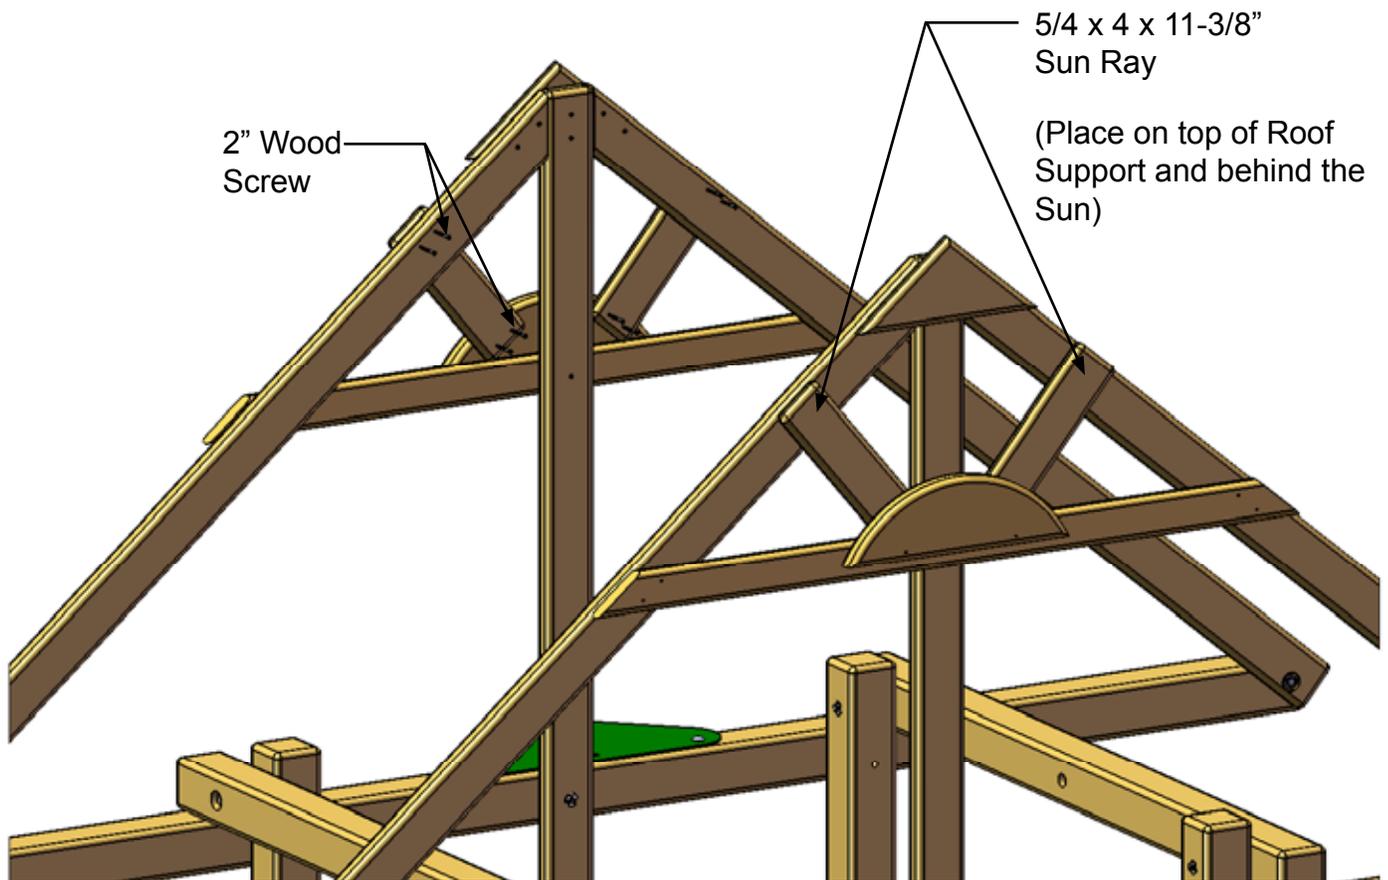

## Step 29: Panel Slats

1: Find six 5/4 x 4 x 28-1/2" Panel Slats and arrange them so that four of them are evenly spaced across the swing beam side of the fort and two of them are flush to the end of the Bottom Panel Boards on the front of the fort.

2: Attach the Panel Slats with two 2" wood screws per end.

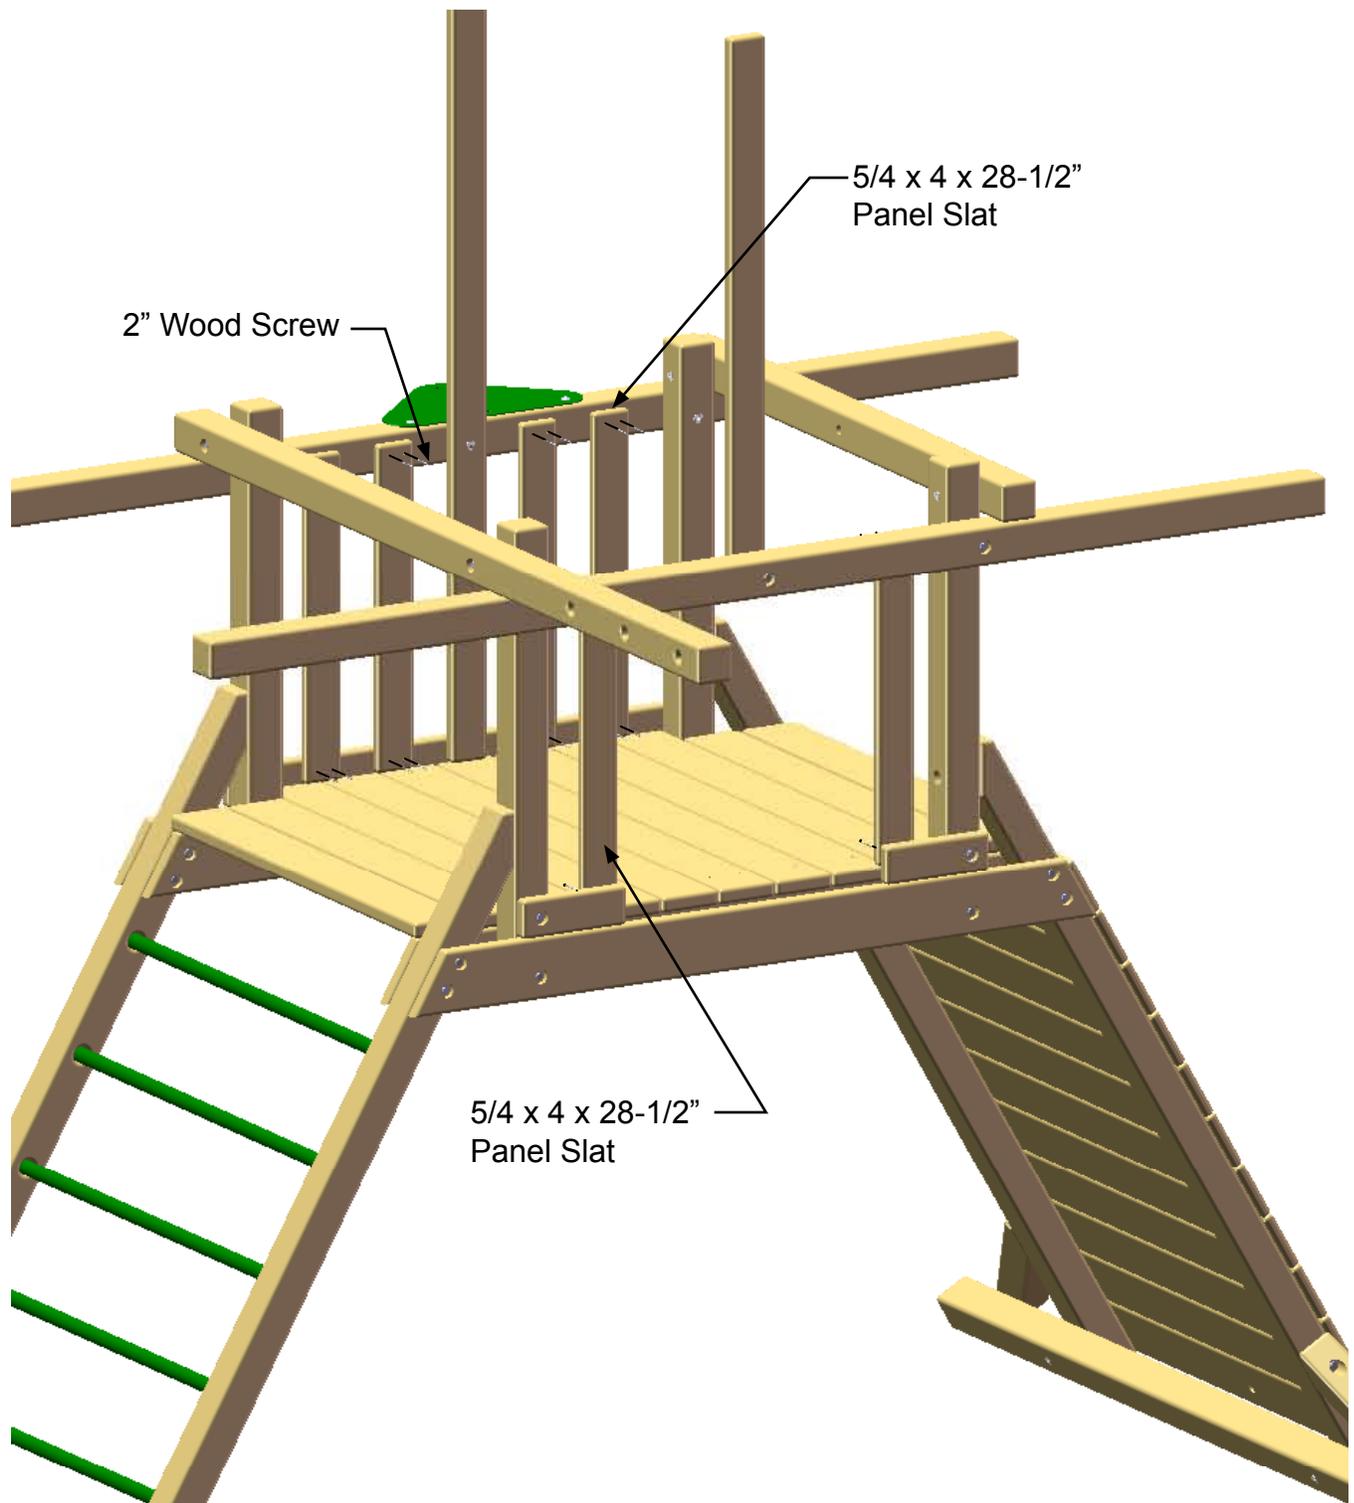


### Step 30: Center Deck Supports

1: Find two 2 x 4 x 58" Center Deck Supports, and arrange them evenly underneath the deck.

2: Attach the Center Deck Supports with two 2-1/2" wood screws per end from underneath, and an additional 2-1/2" wood screw in the middle of the Center Deck Supports at each deck board. From the top, add two 2-1/2" wood screws through the deck boards, into each of the Center Deck Supports.


3: Find the remaining 2 x 4 x 58" Center Deck Support, and center it on the back of the rock wall. Make sure that the hole in the bottom rock wall board is not obstructed by the Center Deck Support.

4: The Center Deck Support will attach to the rock wall with two 2" wood screws per end, and an additional 2" wood screw in the middle of the Center Deck Support at each rock wall board. From the front of the rock wall, add two 2" wood screws through the rock wall boards, into the Center Deck Support.

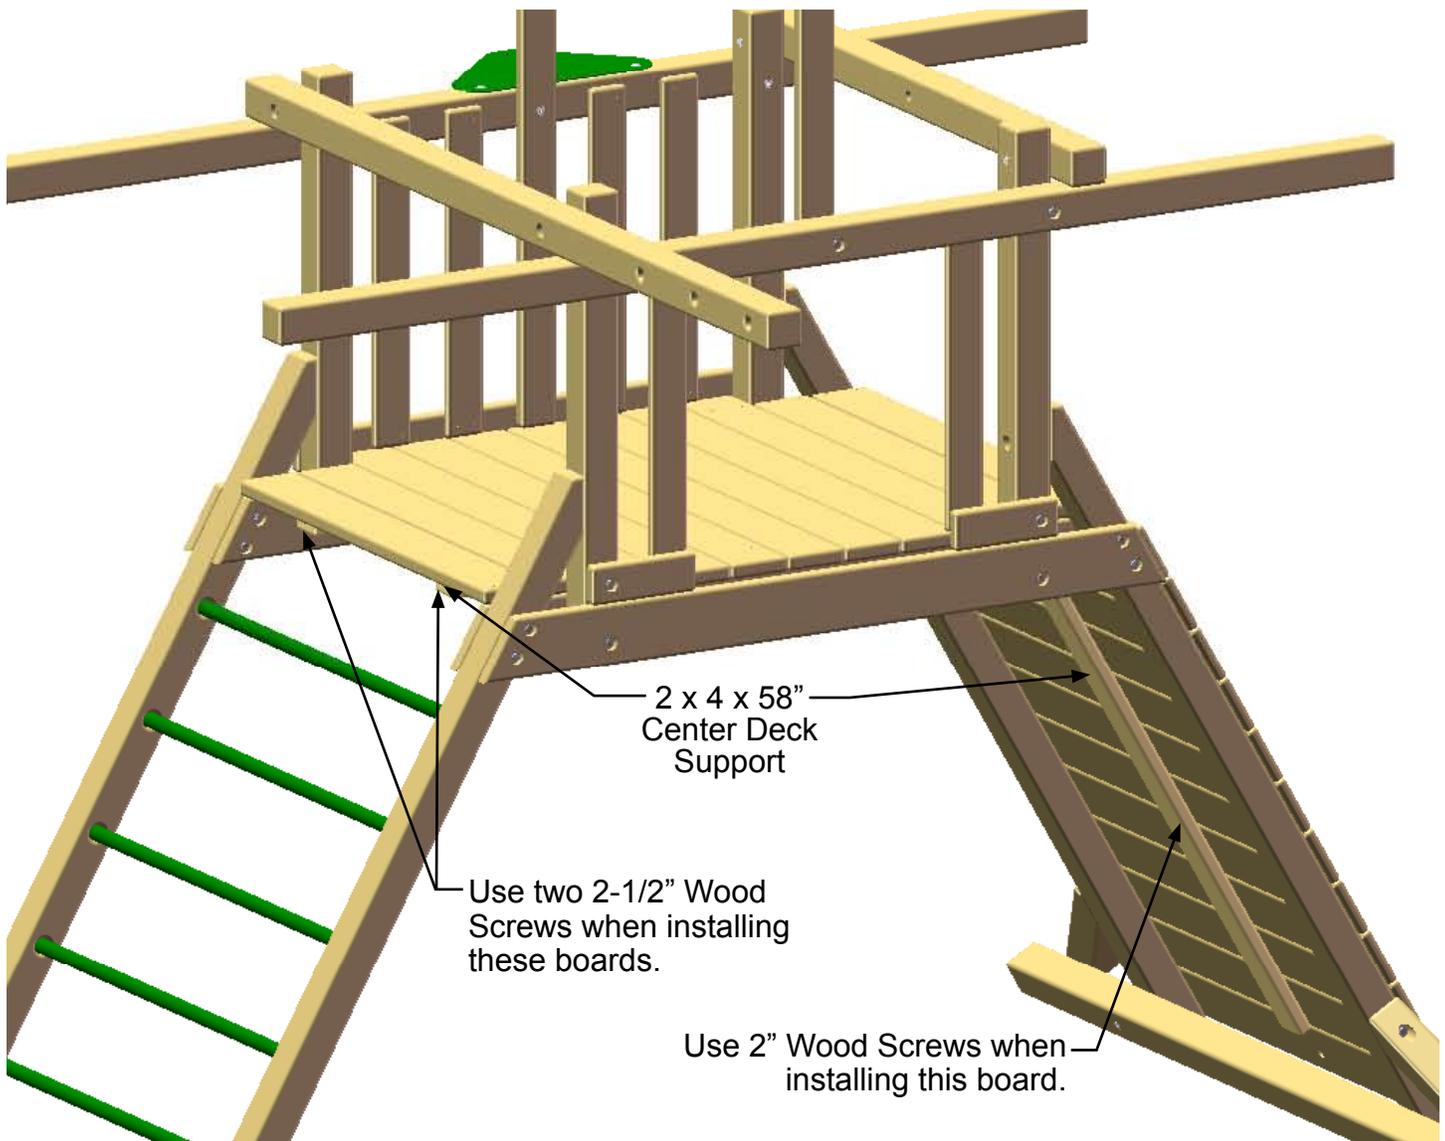


## Step 31: Iron Ductiles

- 1: Line up the holes of the Iron Ductiles with the holes in the 4 x 6 x 108" Swing Beam.
- 2: Fasten the Iron Ductiles to the Swing Beam using 6-1/2" carriage bolts with torque washers on top of the Swing Beam, and 3/8" lock nuts and washers on the bottom. Place green bolt caps over exposed threads after securing

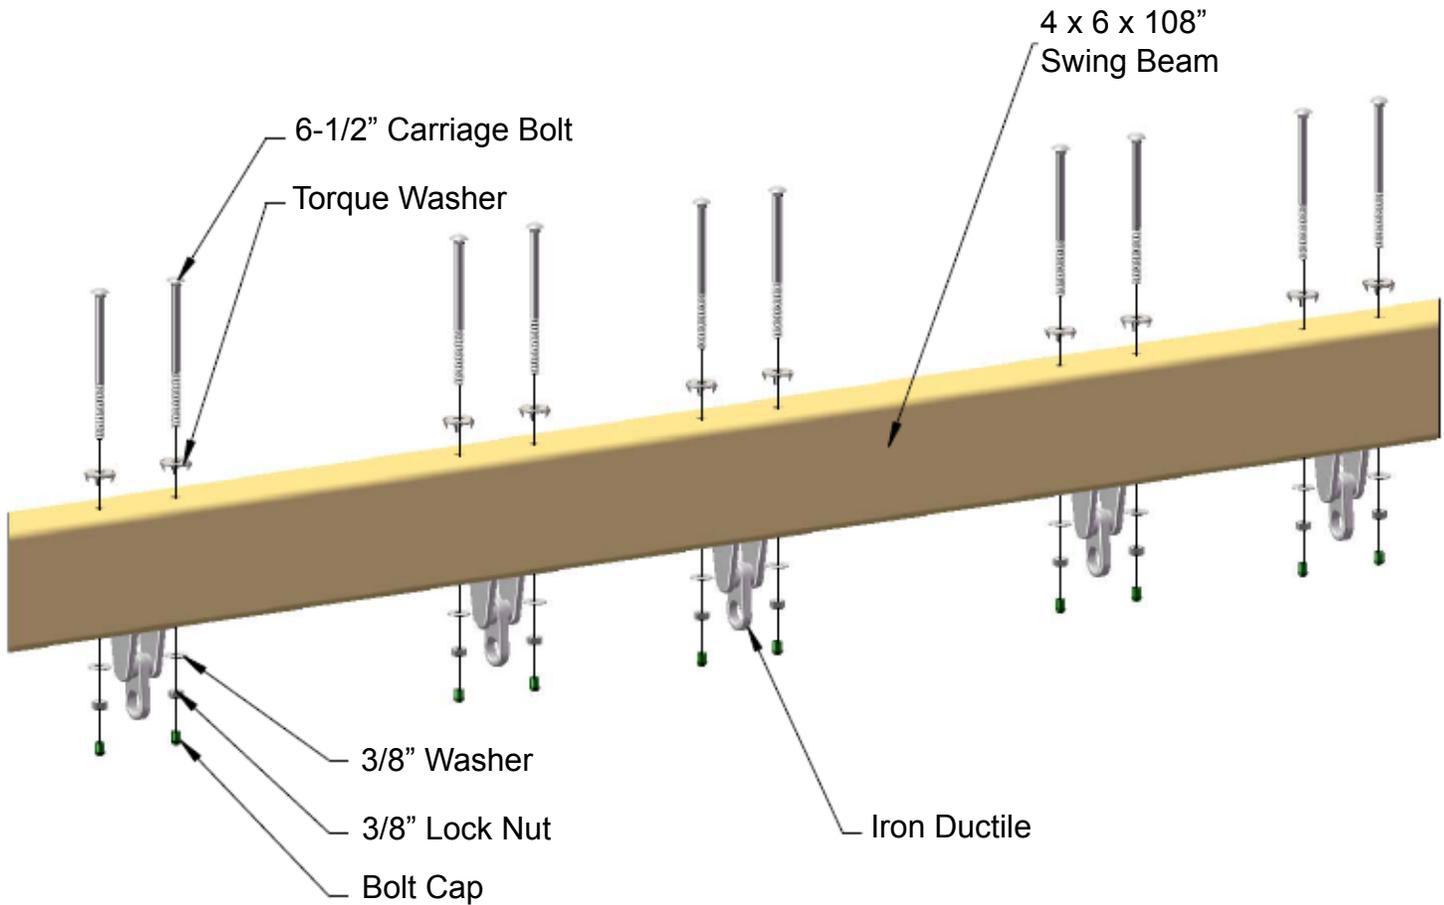

## Step 32: Attach Swing Legs To Bracket

- 1: Place the 4 x 4 x 108" Swing Legs flush to the top of the Swing Leg Bracket.
- 2: Fasten the Swing Legs to the Swing Leg Bracket with 3/8 x 3-1/2" lag screws and 3/8" washers.

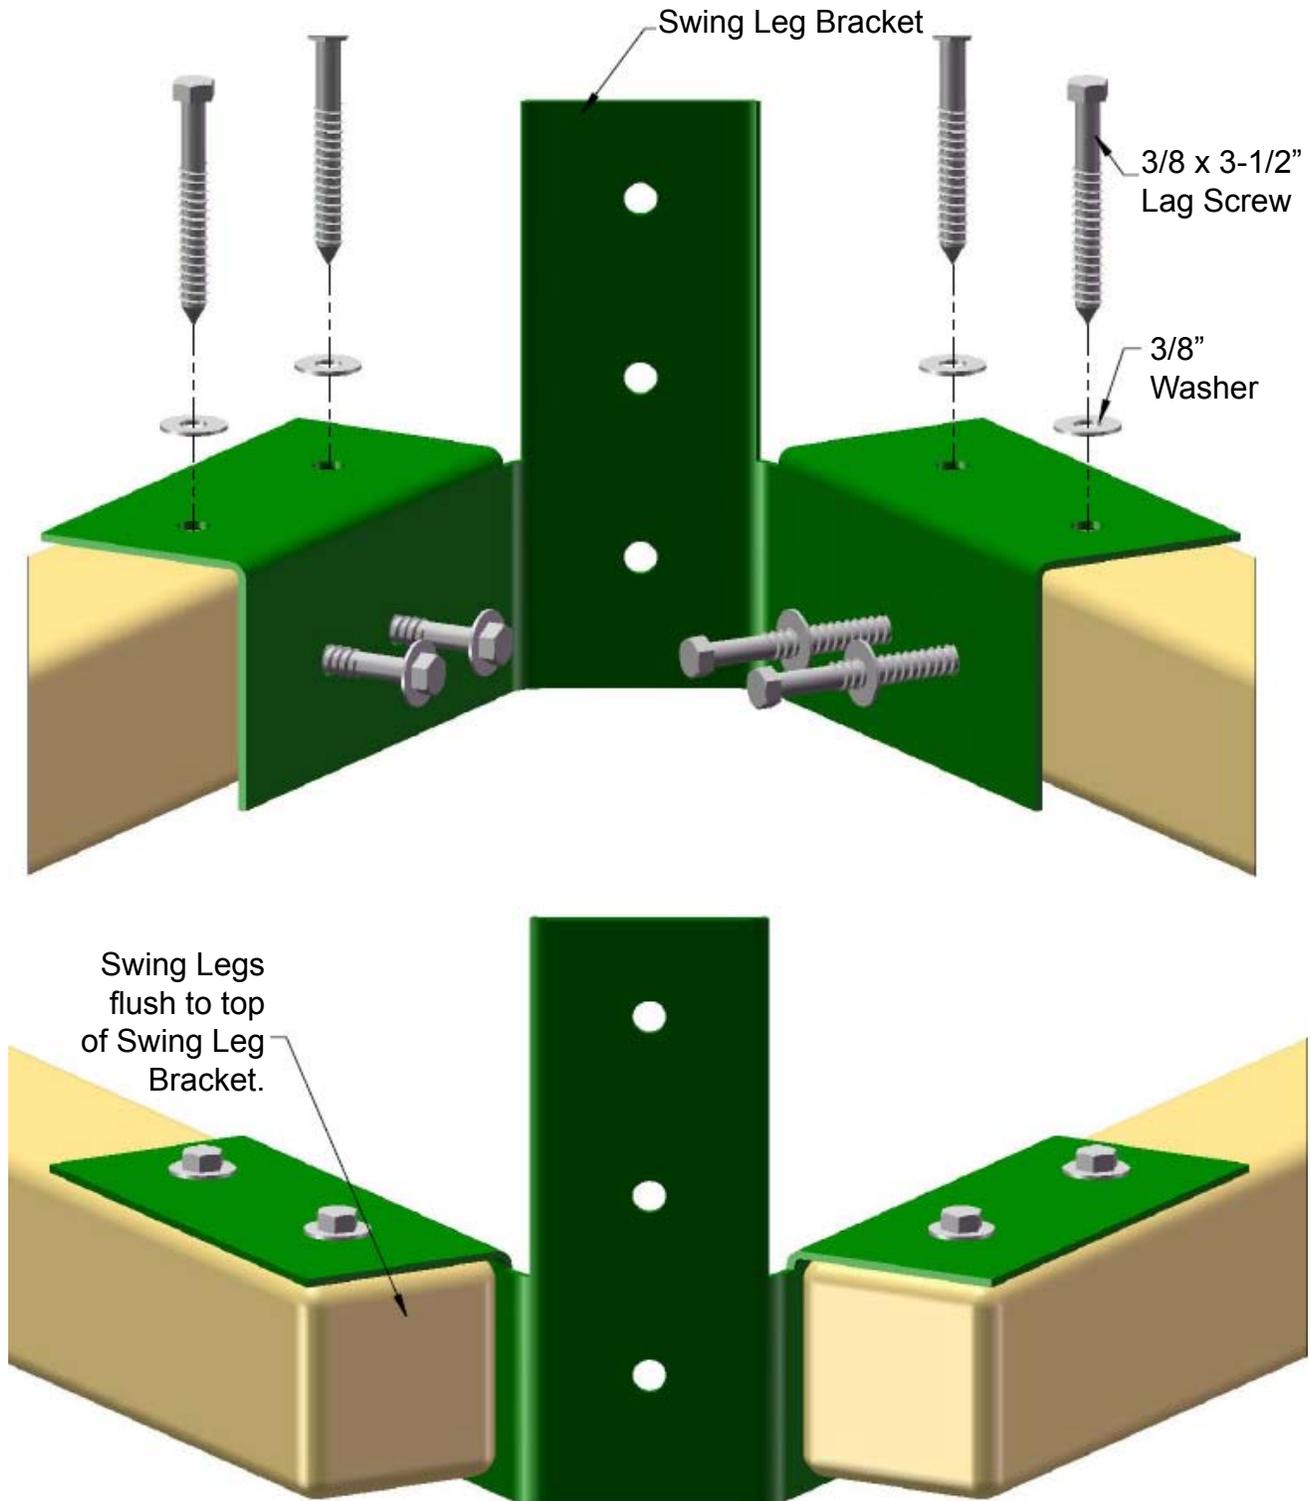

### Step 33: Rest Swing Beam On Fort

**\*Two people are required for this step.**


1: Lay the Swing Beam across the fort and position the legs underneath the end of the beam.

2: Line up the pre-drilled holes and rest the Swing Beam on top of the Swing Beam Support Plate and Swing Legs. Make sure the iron ductiles are facing down.



### Step 34: Attaching Swing Beam To Swing Beam Legs

- 1: Fasten the Swing Beam to the Swing Leg Bracket using 6-1/2" carriage bolts with torque washers on top of the Swing Beam, and 3/8" lock nuts with 3/8" washers underneath.
- 2: Use a 3/8 x 3-1/2" lag screw and 3/8" washer in the middle hole of the Swing Leg Bracket.
- 3: Place green bolt caps over exposed threads after securing.

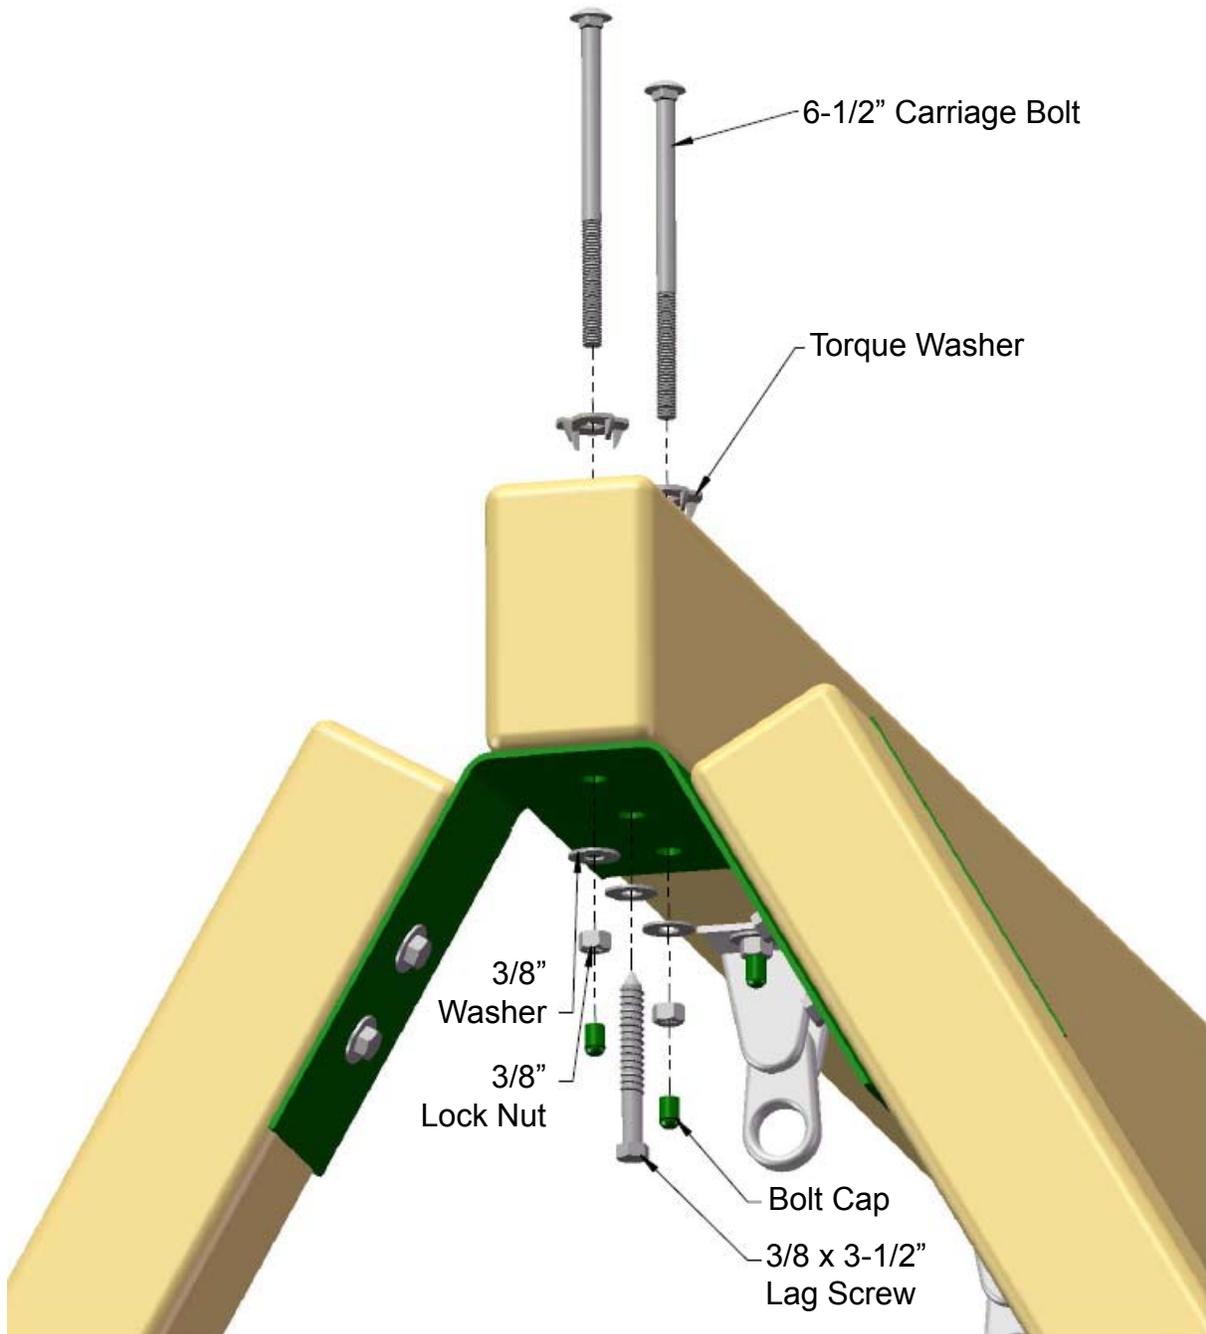

## Step 35: Attaching The Swing Beam To The Fort


**\*Two people are required for this step.**

1: After the legs are attached, have one person on the ground pick up the Swing Beam by the legs, and another person pick up the Swing Beam from inside the fort and walk out the Swing Beam.

2: Line up the pilot hole on the end of the Swing Beam with the middle hole on the Swing Beam Plate.

3: Fasten the Swing Beam to the Swing Beam Plate and Swing Beam Support using a 9" carriage bolt with a torque washer on top and a 3/8" lock nut and washer on the bottom. Place green bolt caps over exposed threads after securing.

4: Fasten the Swing Beam to the Swing Beam Plate from underneath with a 3/8 x 3-1/2" lag screw and a 3/8" washer.

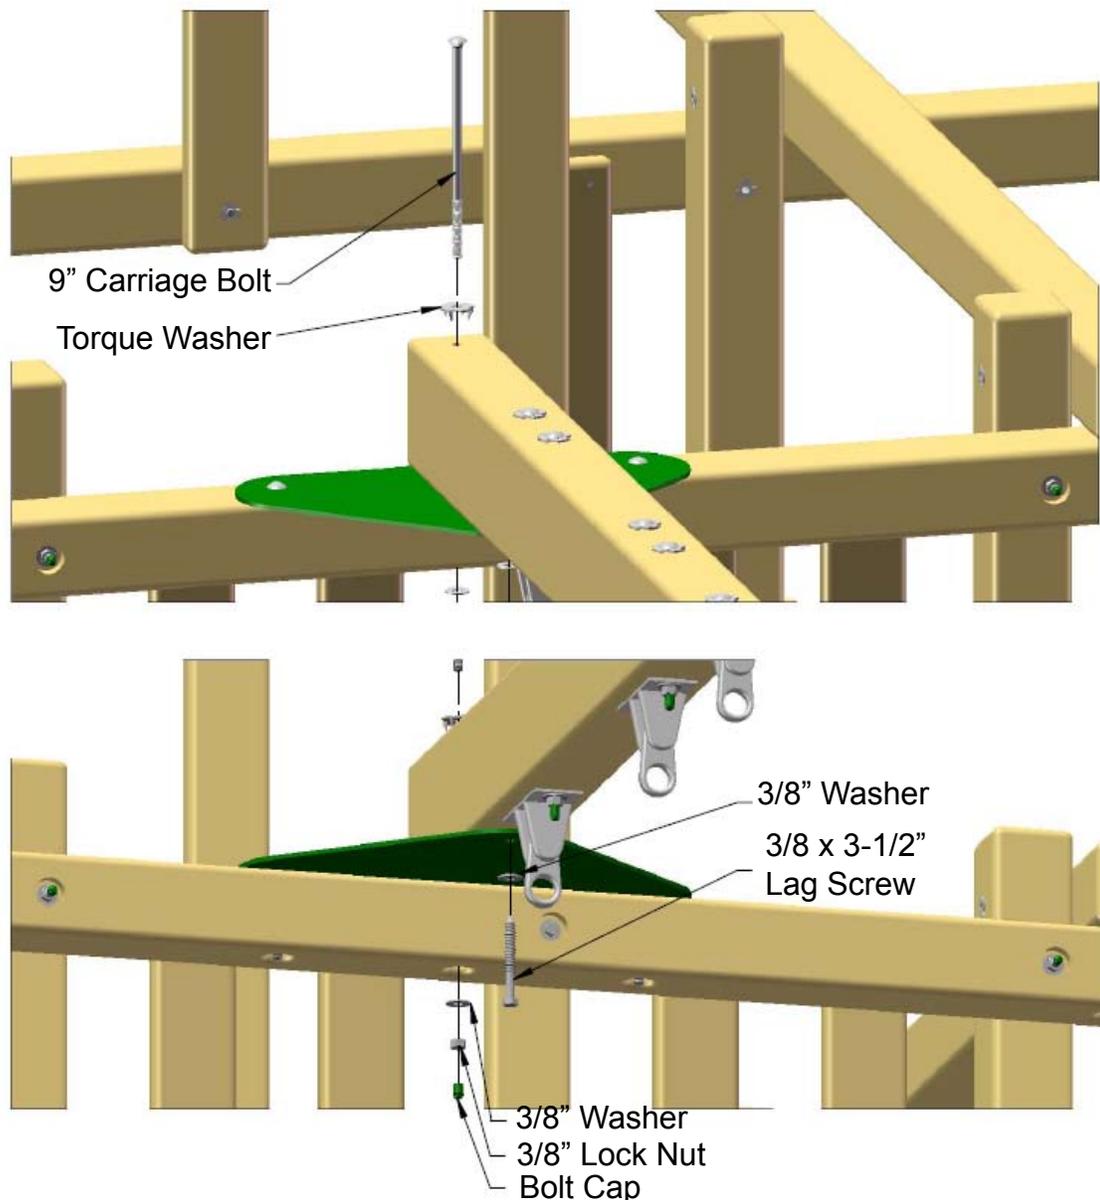

## Step 36: Level The Swing Beam


1: Place a level on top of the Swing Beam and adjust the legs in or out as needed to make the Swing Beam level.



### Step 37: Swing Leg Cross-Member



1: Position the 2 x 4 x 70" Swing Leg Cross-Member against the Swing Beam Legs.

2: Level the cross-member, and fasten it to the Swing Legs with 3/8 x 3-1/2" lag screws and 3/8" washers.

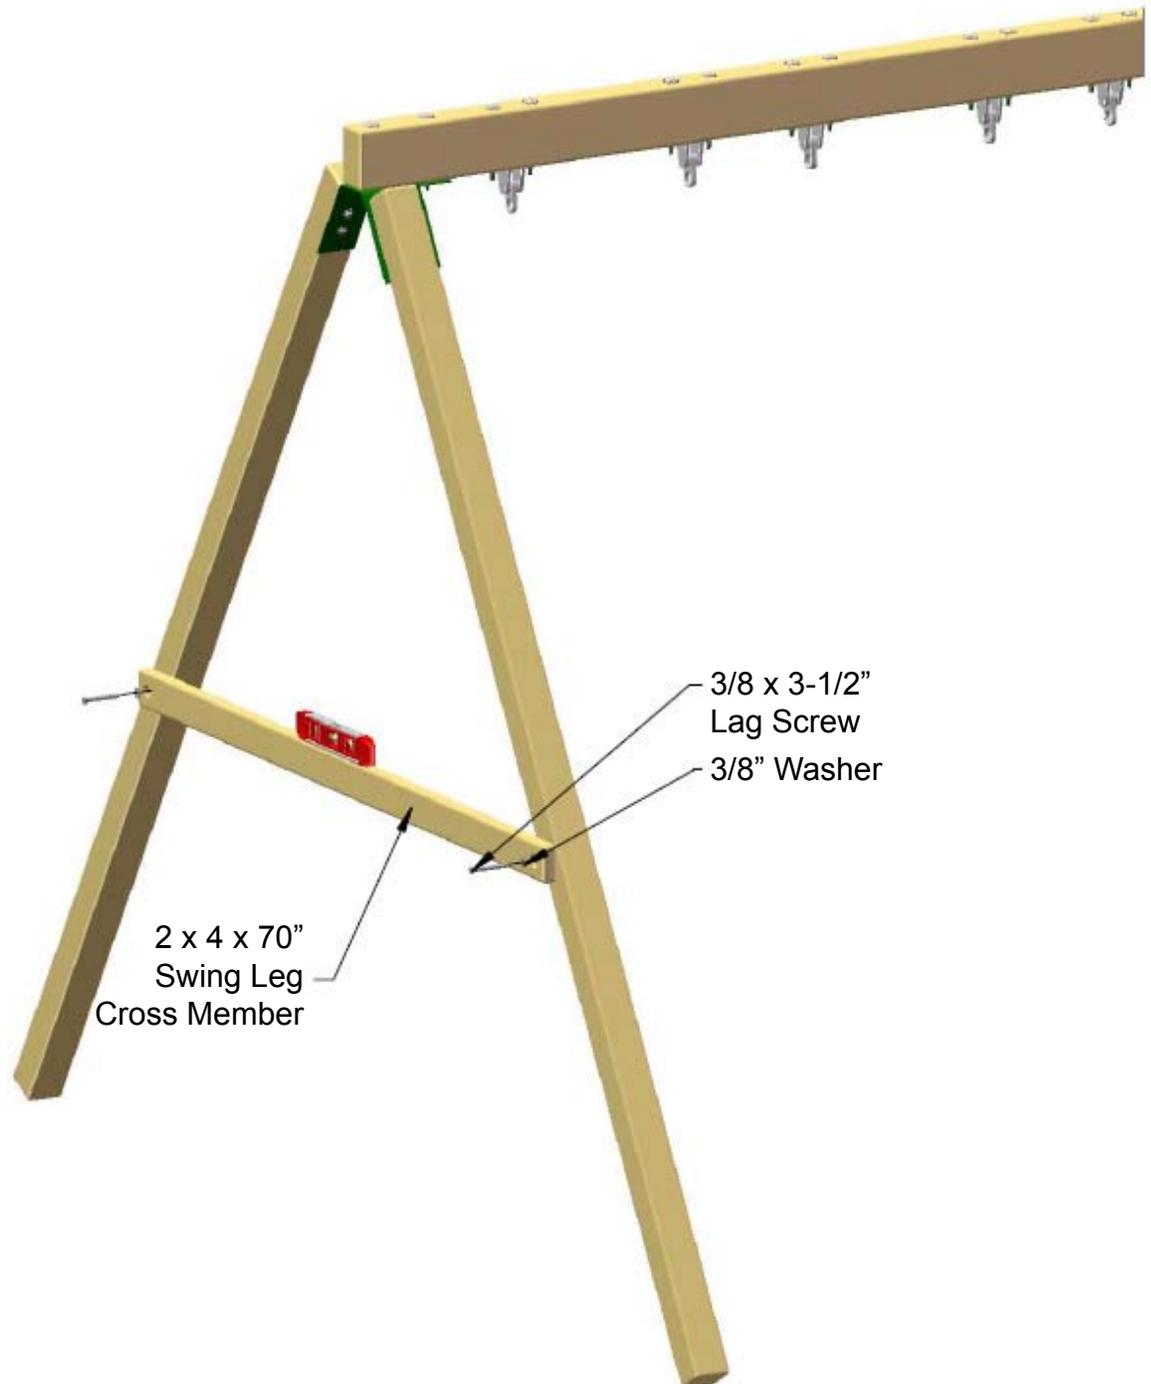

### Step 38: Tire Swing


- 1: Center the Tire Swing Swivel on the Center Deck Support closest to the opening in the front of the fort (slide side).
- 2: Mark the location of the holes in the swivel with a pencil, and with a 3/8" drill bit, drill holes through the Center Deck Support and Deck Board.
- 3: Use a 4" carriage bolt to clear out any debris left over from drilling, mate with a torque washer and set the torque washer on top of the deck with a hammer.
- 4: Place the Tire Swivel on the two carriage bolts, and fasten with 3/8" lock nuts with 3/8" washers. Cover any exposed threads with green bolt caps.

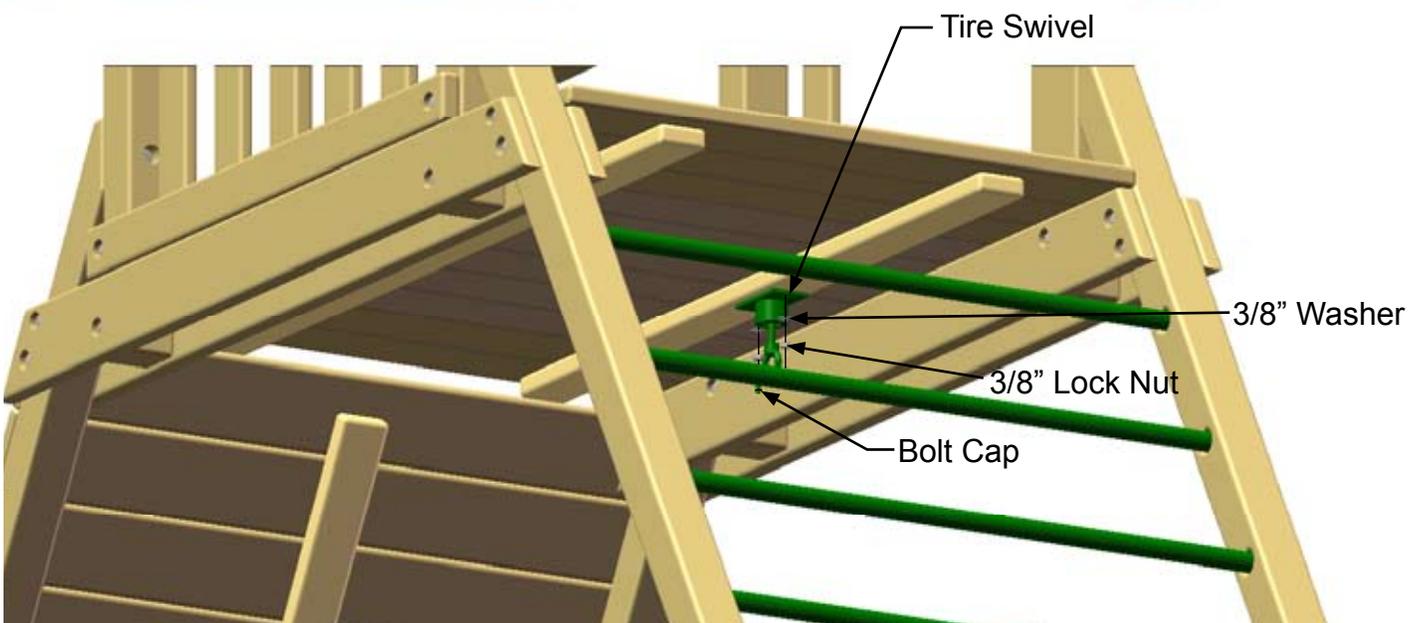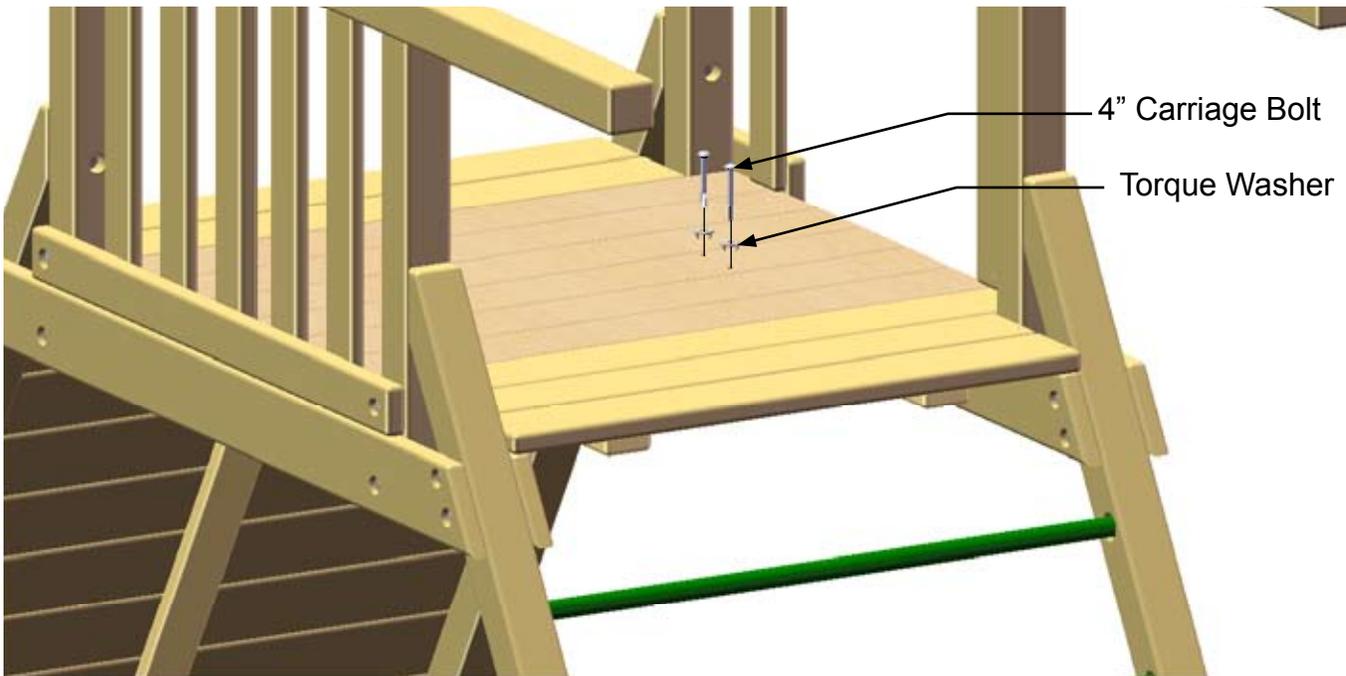

## Step 39: Installing The Rocks

1: The Rocks should follow the general staggered layout shown below. However, a different configuration can be used.


2: The Rocks included in your playset may vary, in any case, the 1-1/4" pan head screws with washers will be used to attach the Rocks.

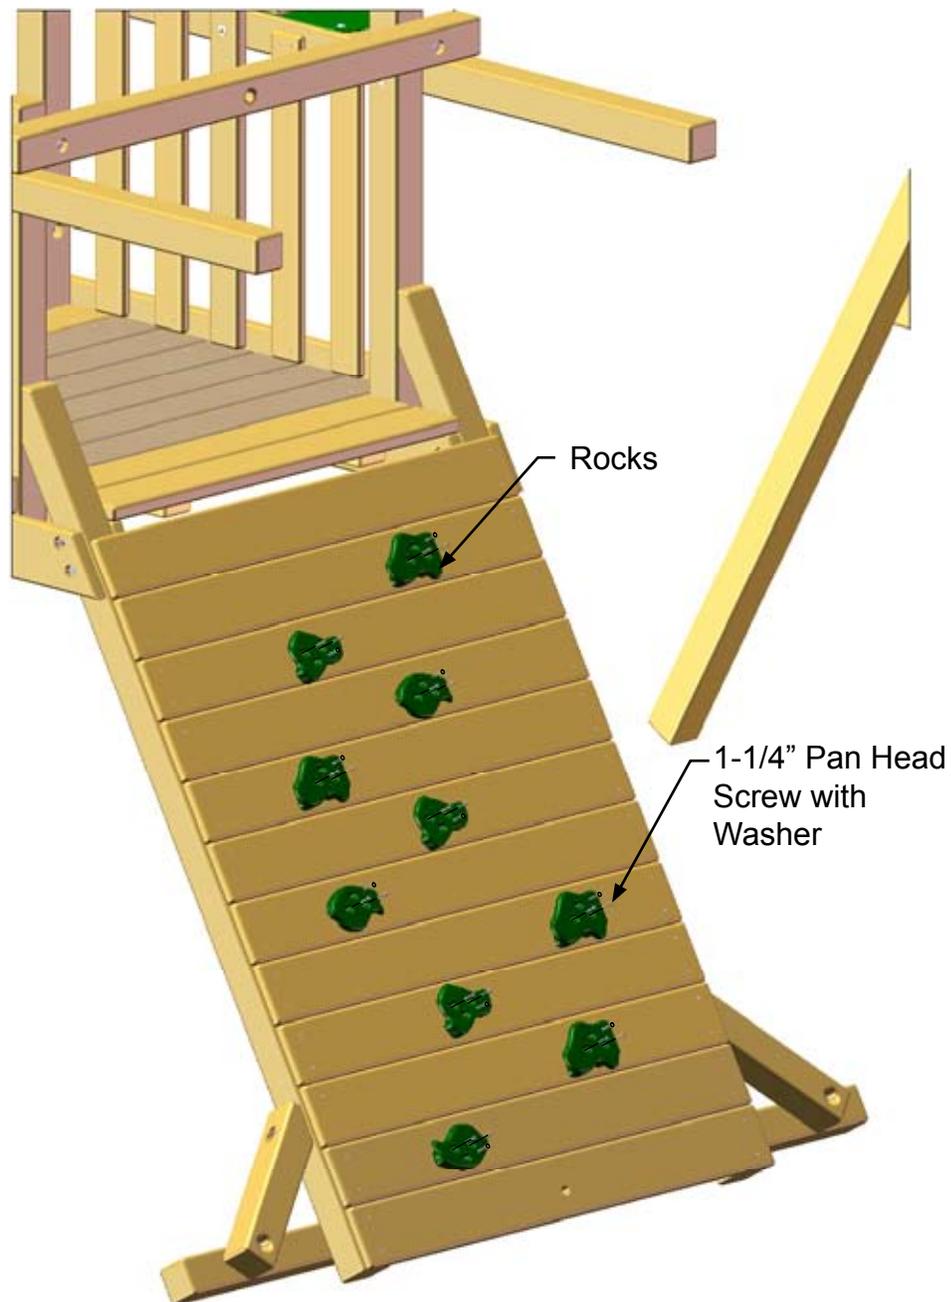

## Step 40: Climbing Rope


1: Thread one end of the Rope through the hole in the Rock Wall Rope Support above the rock wall. Tie a secure knot on the inside of the Rock Wall Rope Support. Add knots in the Rope to aid in climbing. Set knots according to your Child's needs. 2-3 knots should be sufficient.

2: Thread the other end of the Rope through the hole in the Bottom Rock Wall Board. Pull the Rope tight and tie a secure knot behind the Bottom Rock Wall Board. Test the Rope by attempting to wrap it around your hand. If the Rope wraps around your hand it is too loose. Untie the Rope and retie it until it no longer wraps around your hand.

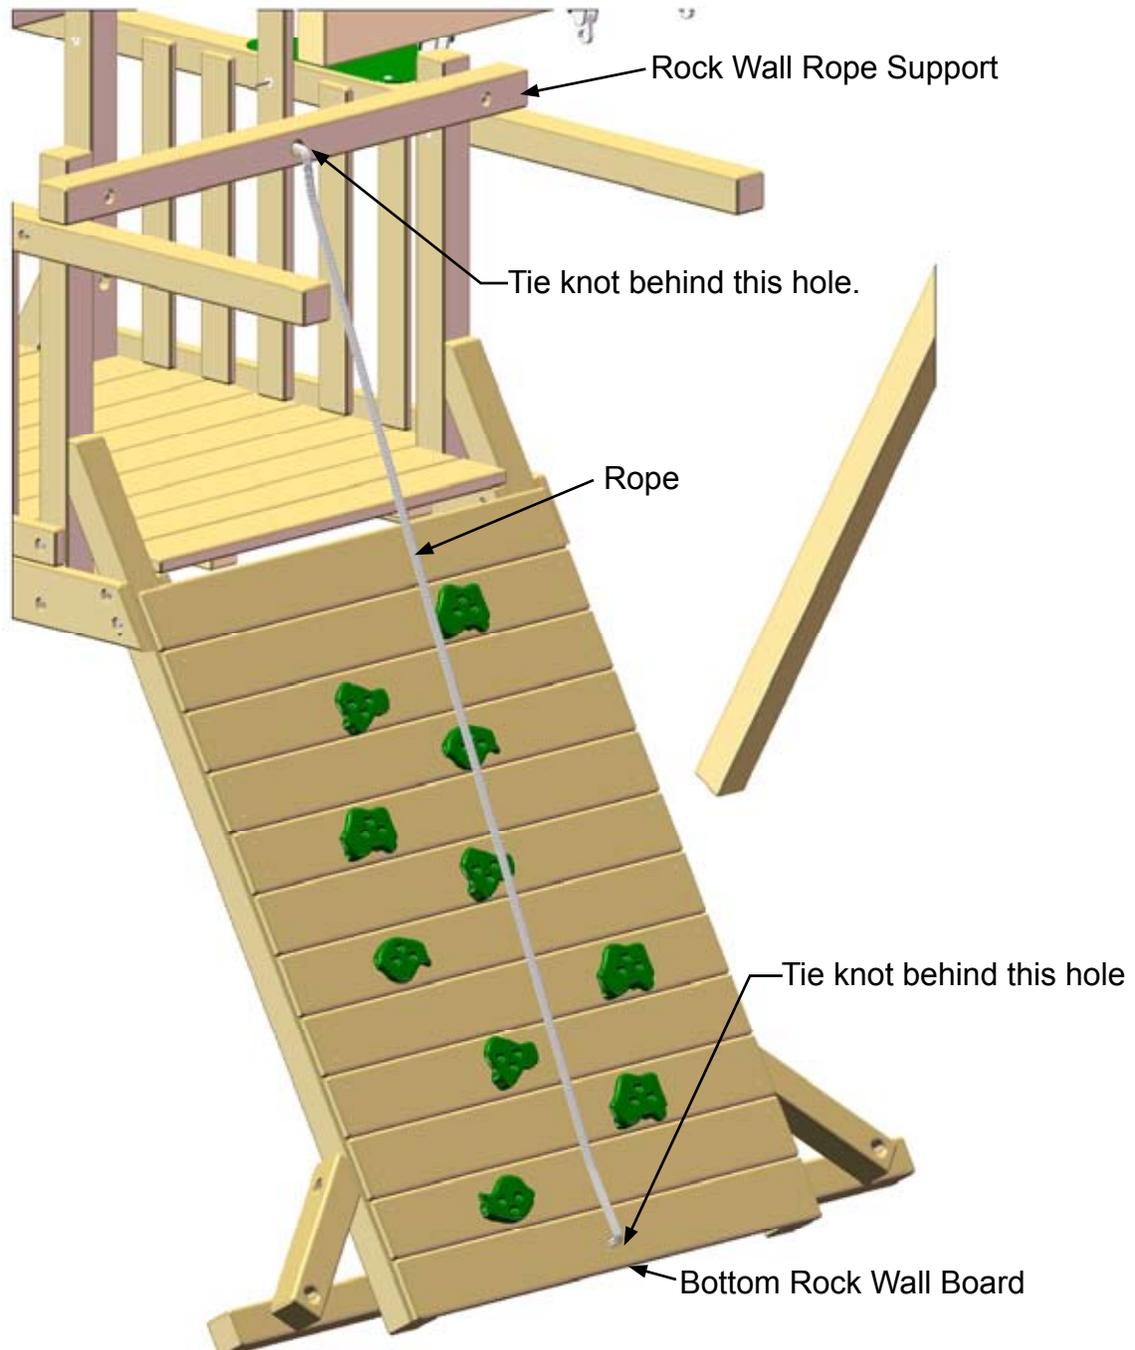


## Step 41: Rope Ladder Assembly

- 1: Find the three 16' lengths of rope. Measure 30" from one side of each piece of Rope and make a mark at this location.
- 2: Tie a knot on the other side of the Rope that is just above the mark that was made on the rope (see below).
- 3: Thread the rope through the holes of the 2 x 4 x 24" Rope Ladder Rung. You may need to twist the rope to get it through.

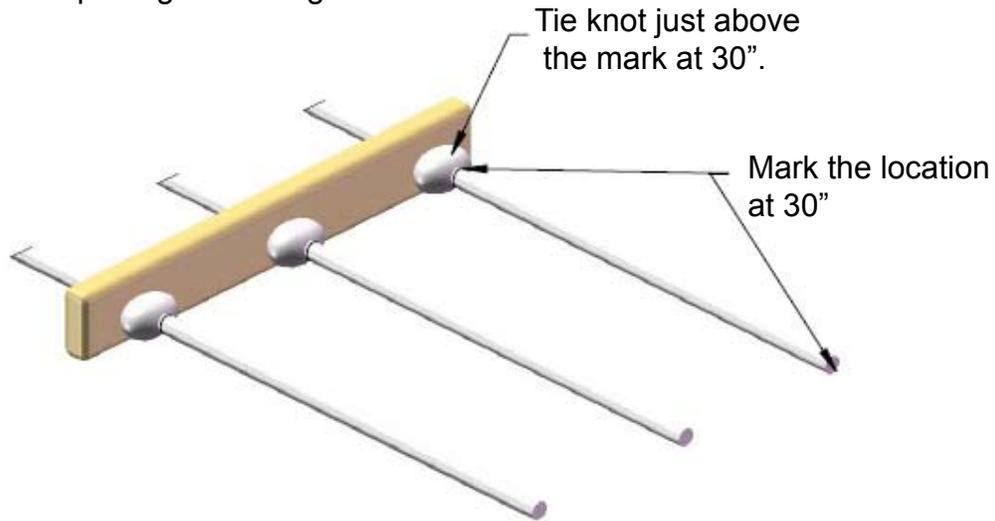


- 4: Measure 19" from the top of the Rope Ladder Rung on the rope and mark this location. Make sure the board is resting against the previous knot that was tied when measuring.
- 5: Tie a knot below the mark that was made and thread the rope through the holes in the next Rope Ladder Rung. There should be approximately a 10" gap between the boards.
- 6: Continue this process up the rope, and when the last board has been placed, tie a knot directly above it. The last board tied will be the top of the rope ladder.

After the last board is placed on the rope ladder assembly, tie a knot directly above the last board.

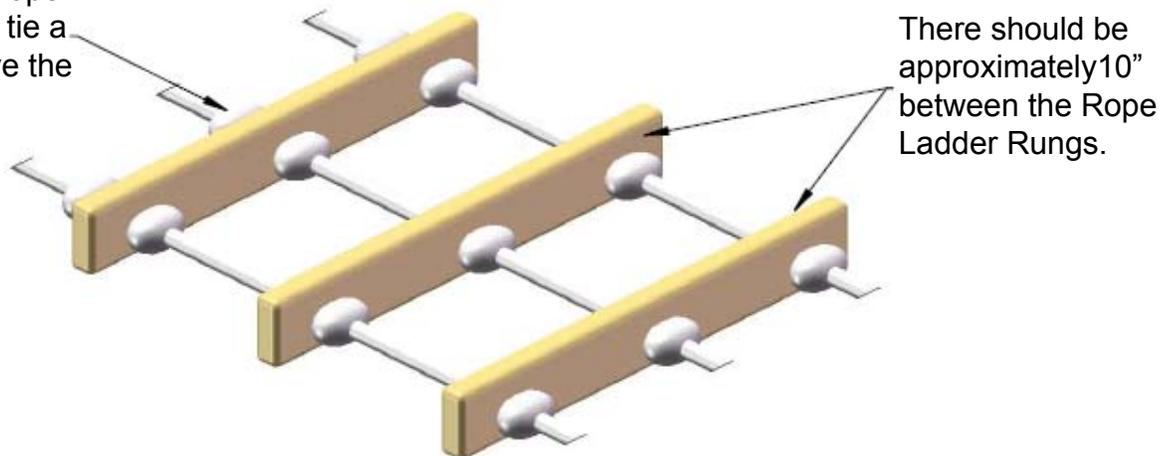


## Step 42: Installing The Rope Ladder

- 1: Unroll the Rope Ladder Assembly. Look for the board that has knots tied above and below the Rope ladder step. This will be the top of the Rope Ladder.
- 2: Thread the top of the Rope Ladder through the holes in the Rope Ladder Support, and tie a secure knot.
- 3: Thread the bottom of the Rope Ladder through the holes in the Rope Ladder Runner, and tie a secure knot.
- 4: Make sure the Rope Ladder ropes will not wrap around your hand; if they do they are too loose and should be un-tied and then re-tied.

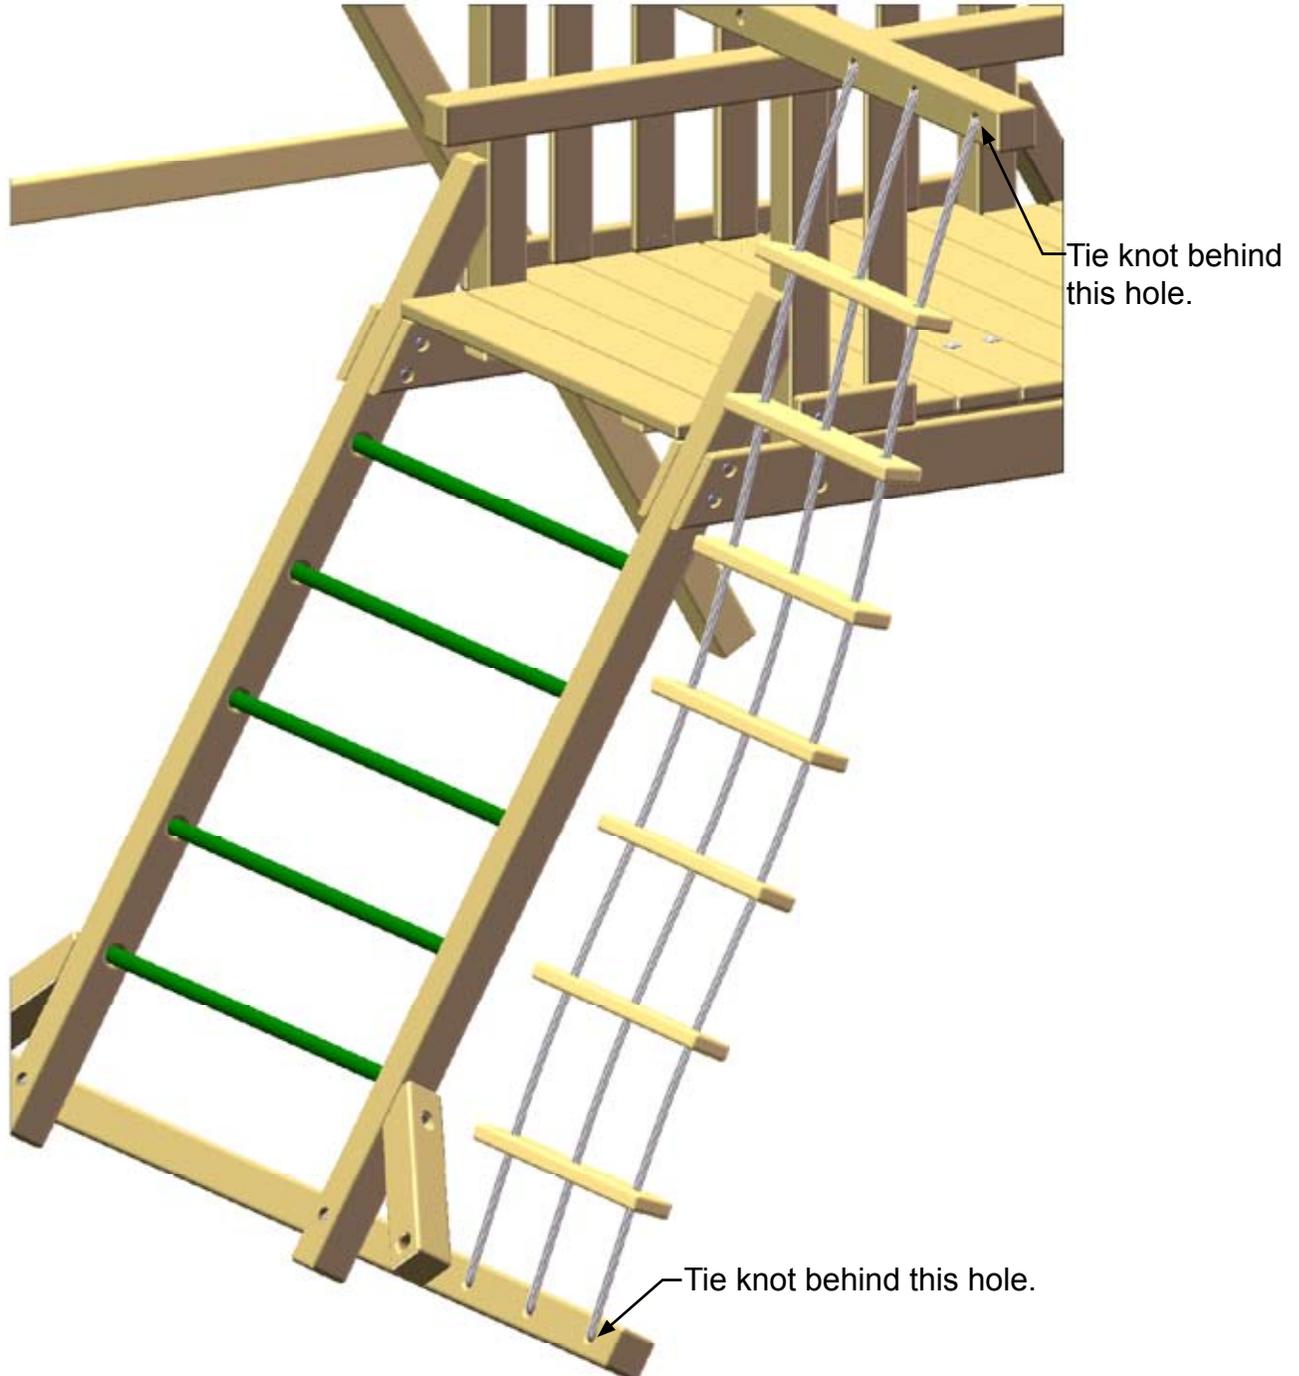


### Step 43: Installing The Slide

- 1: Place the Slide in the opening at the front of the fort. Lay the slide on the deck with the lip extending onto the deck.
- 2: The flared end of the Slide will rest against the Bottom Panel Boards.
- 3: Attach the Slide to the deck with 1-1/4" pan head screws.

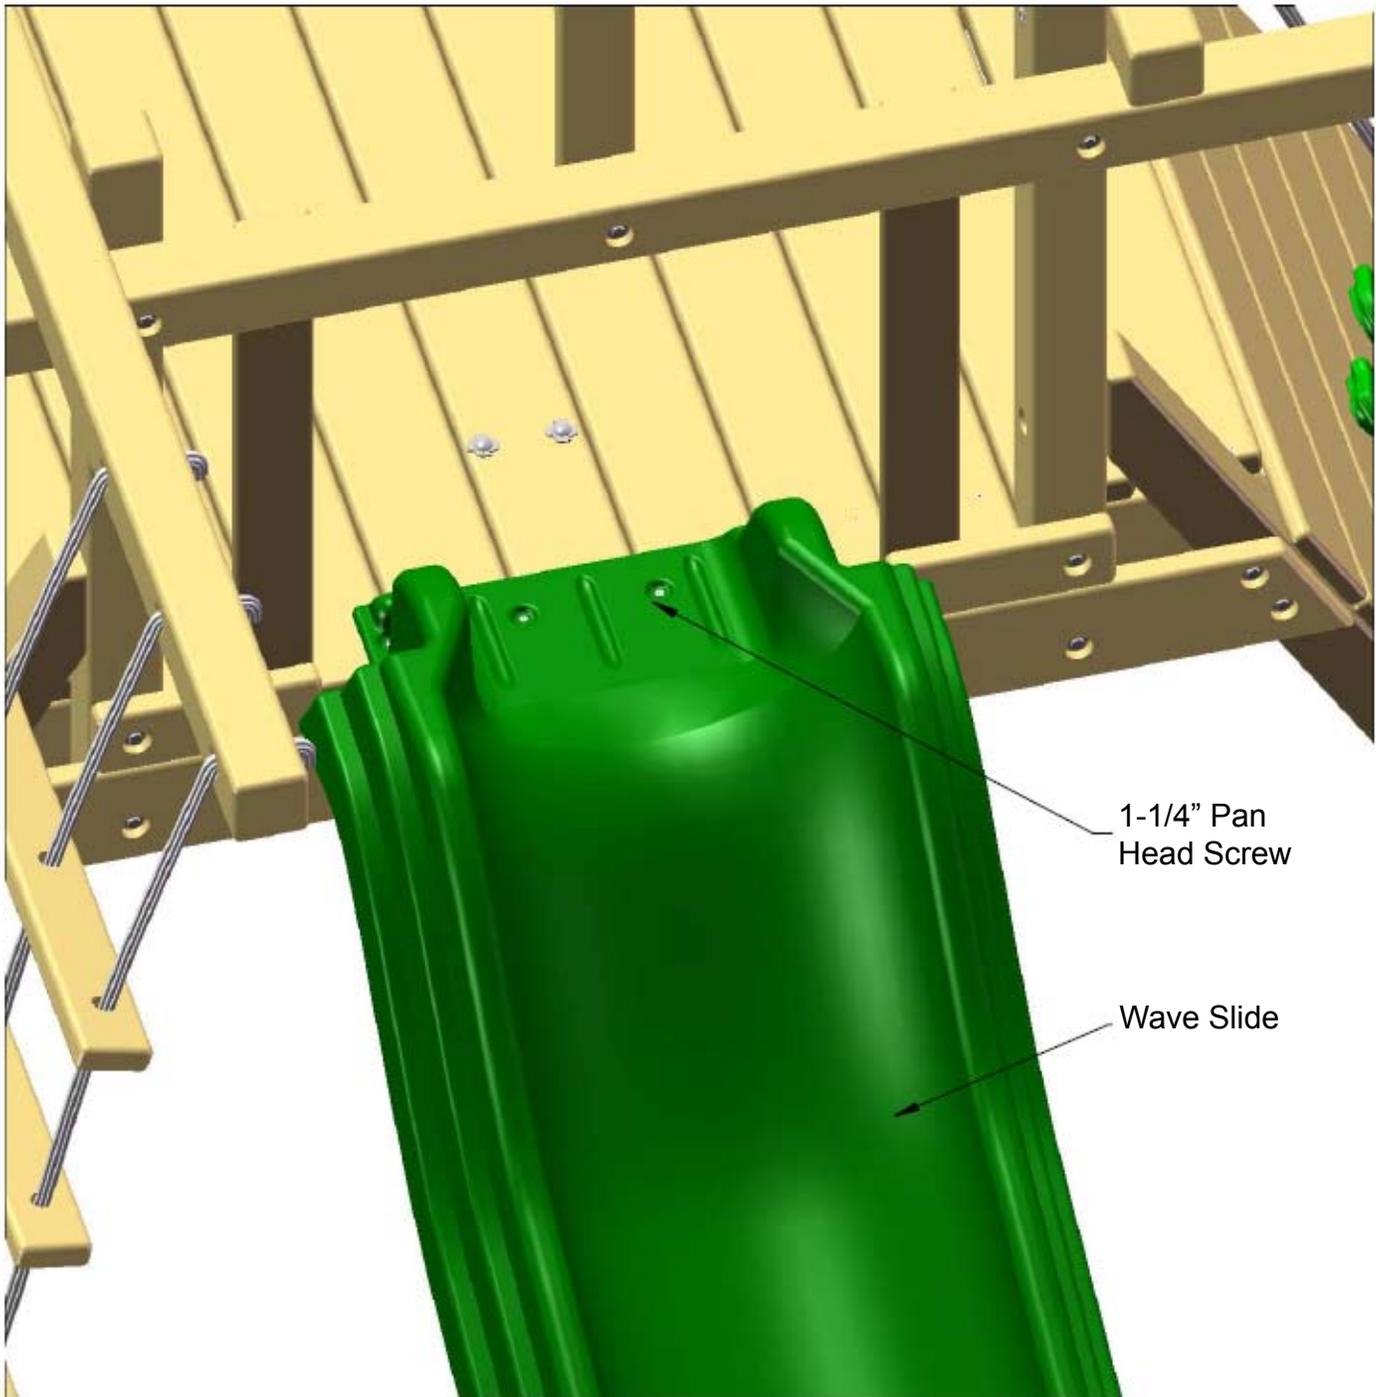


## Step 44: Steering Wheel

- 1: Place the Steering Wheel Insert inside the Steering Wheel.
- 2: Use the hardware included with the Steering Wheel to mount it to the Rear Center Post and Swing Beam Side Rail. Do not over-tighten the lag screw inside the Steering Wheel Insert, or it will not turn.
- 3: Place the Steering Wheel Cap over the center of the Steering Wheel and snap into place.

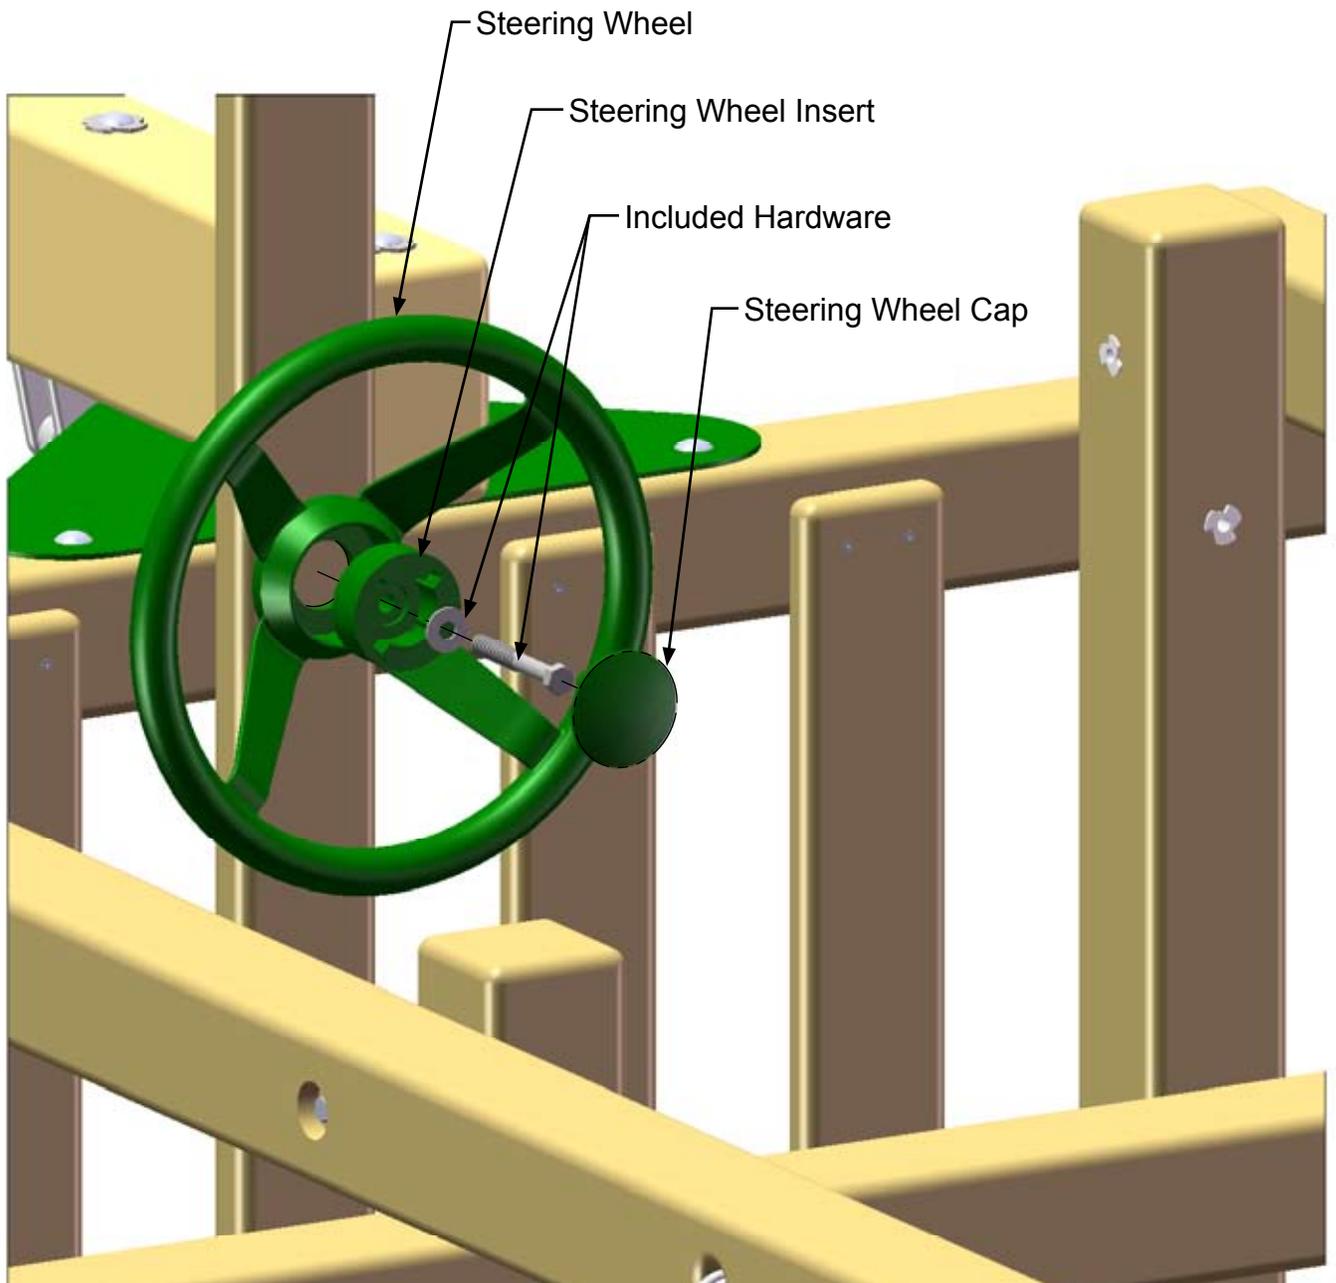



## Step 45: Telescope

- 1: With the 1-1/4" wood screws provided in the Telescope bag, fasten one of the half-circle shaped Telescope Brackets onto the side rail, just above the slide.
- 2: Place the Telescope Stand/Telescope into the slot of the Telescope Bracket.
- 3: Fasten the remaining half-circle shaped Telescope Bracket to the opposite side that the first Telescope Bracket was installed on with 1-1/4" wood screws.

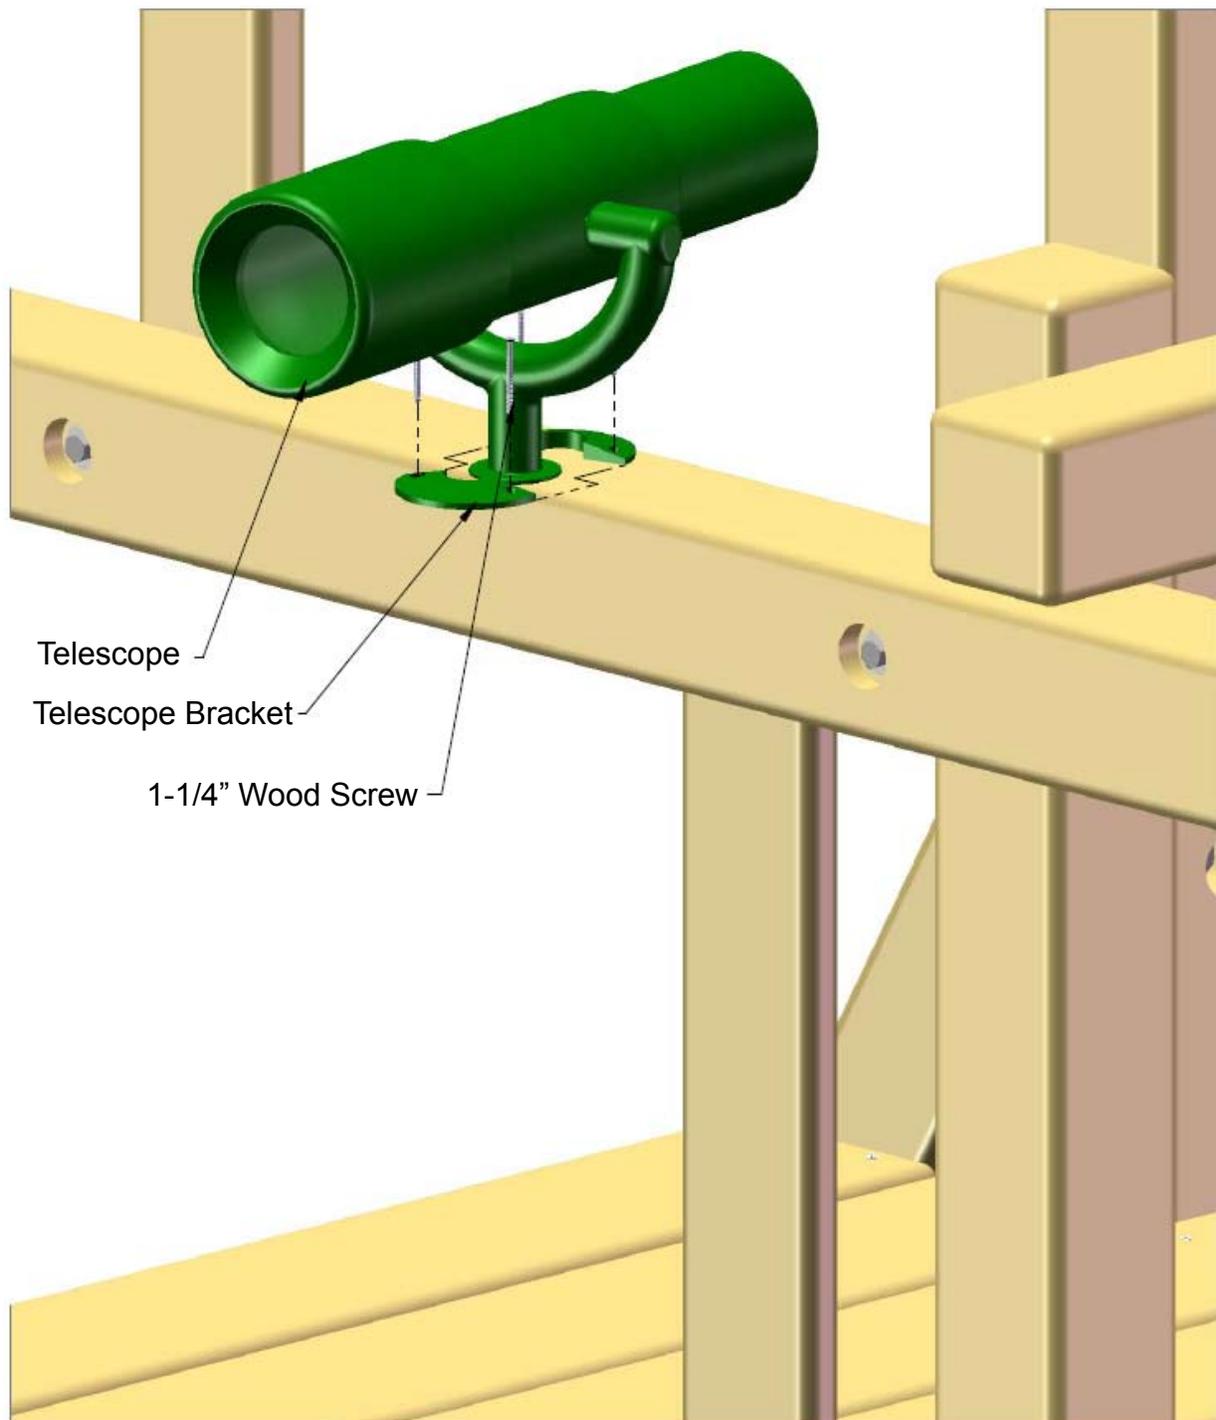

## Step 46: Safety Handles

- 1: Find four Safety Handles.
- 2: Place two Safety Handles just above the rock wall opening, and attach with 1-1/4" panhead screws.
- 3: Repeat this process for the ladder side of the fort.

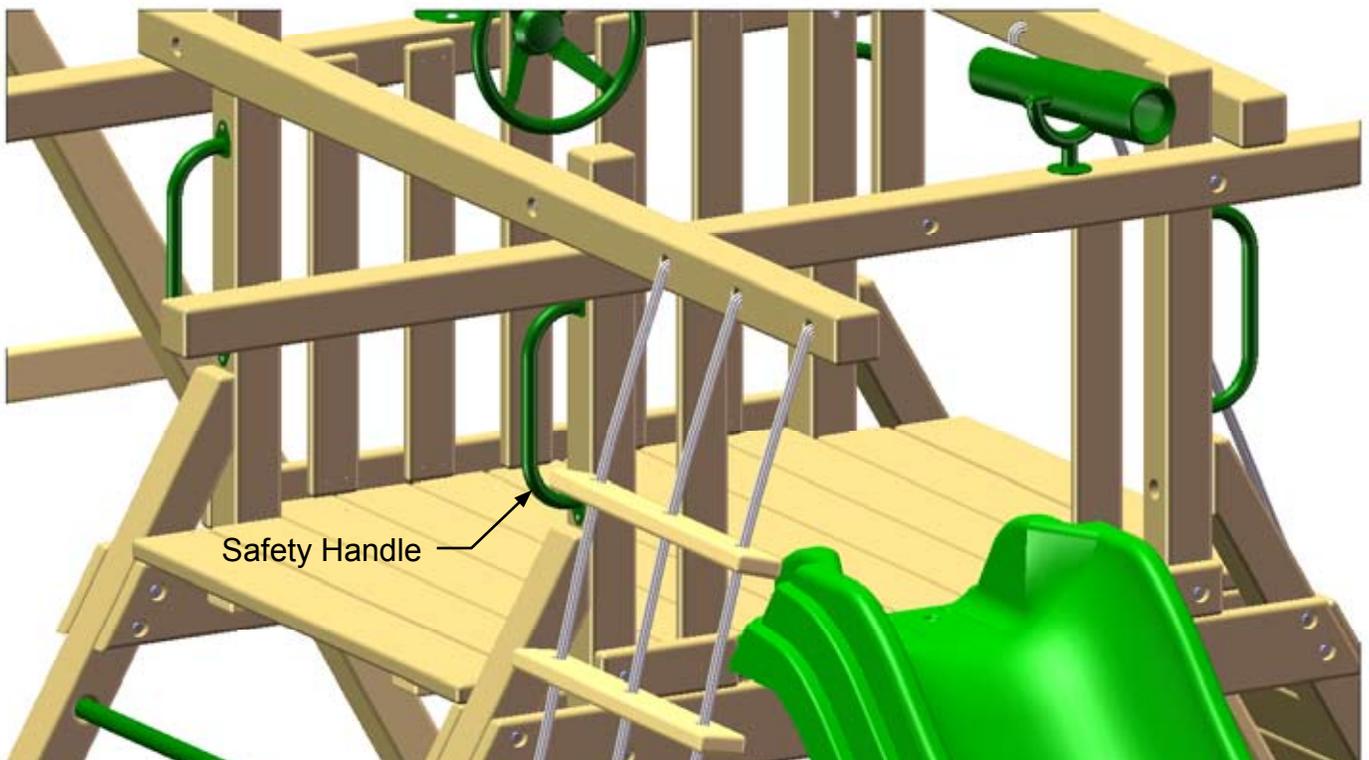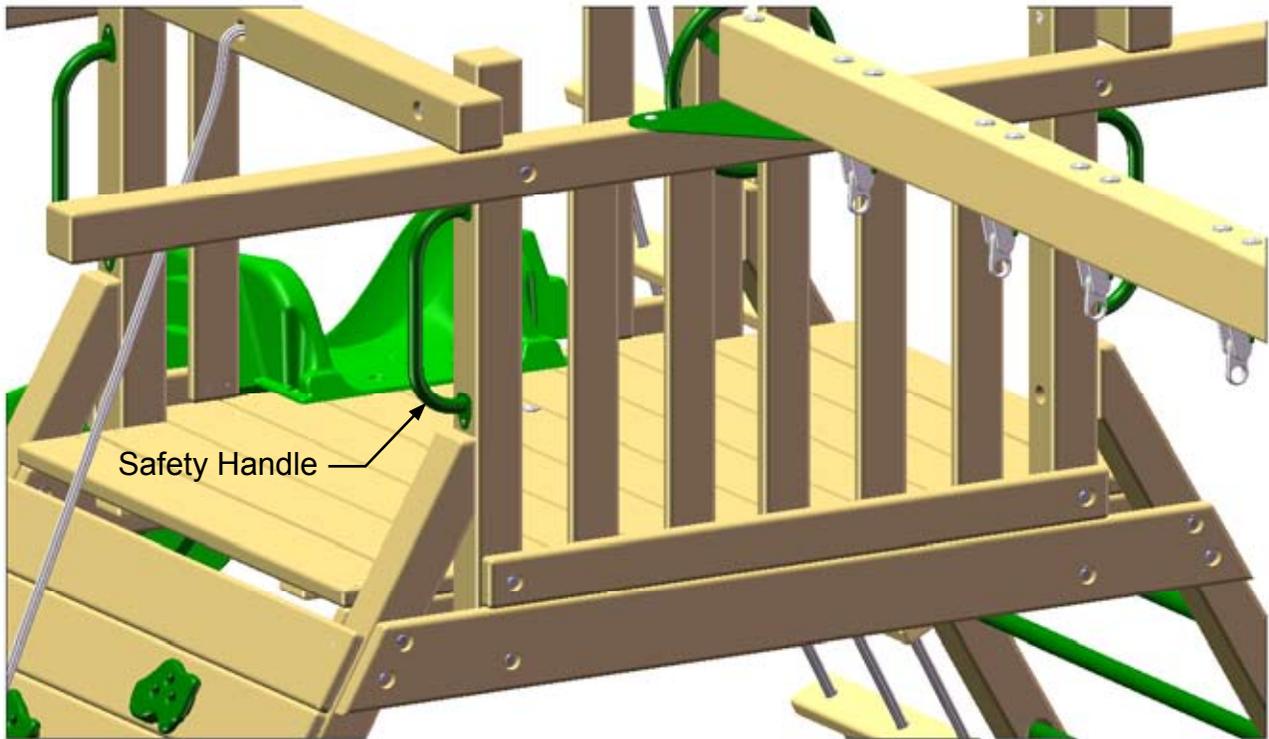

## Step 47: Hanging Swings

- 1: Clip each of the Spring Clips onto the Iron Ductile Swing Hangers, then clip onto the swing chains.
- 2: Use the Spring Clips to adjust the height of the swing by clipping on higher or lower links.
- 3: Count back the same number of links on the opposite side to ensure that the swing is level, and adjust to fit your needs.




## Step 48: Hanging The Tire Swing

- 1: Hang three Spring Clips from the Tire Swivel.
- 2: Hang one chain in one of the Spring Clips at the desired height.
- 3: Continue the process with the remaining chains, making sure that the Tire Swing is level when finished.
- 4: Any excess length of chain can be looped back and hung multiple times to prevent the excess from hanging down and creating a hazard.




## Step 49: Flag Kit

- 1: Place the Flags on the front of the play set centered on the corner posts.
- 2: Attach the plastic base of each Flag to the corner post with the 1/2" phillips head screws provided with the Flags.

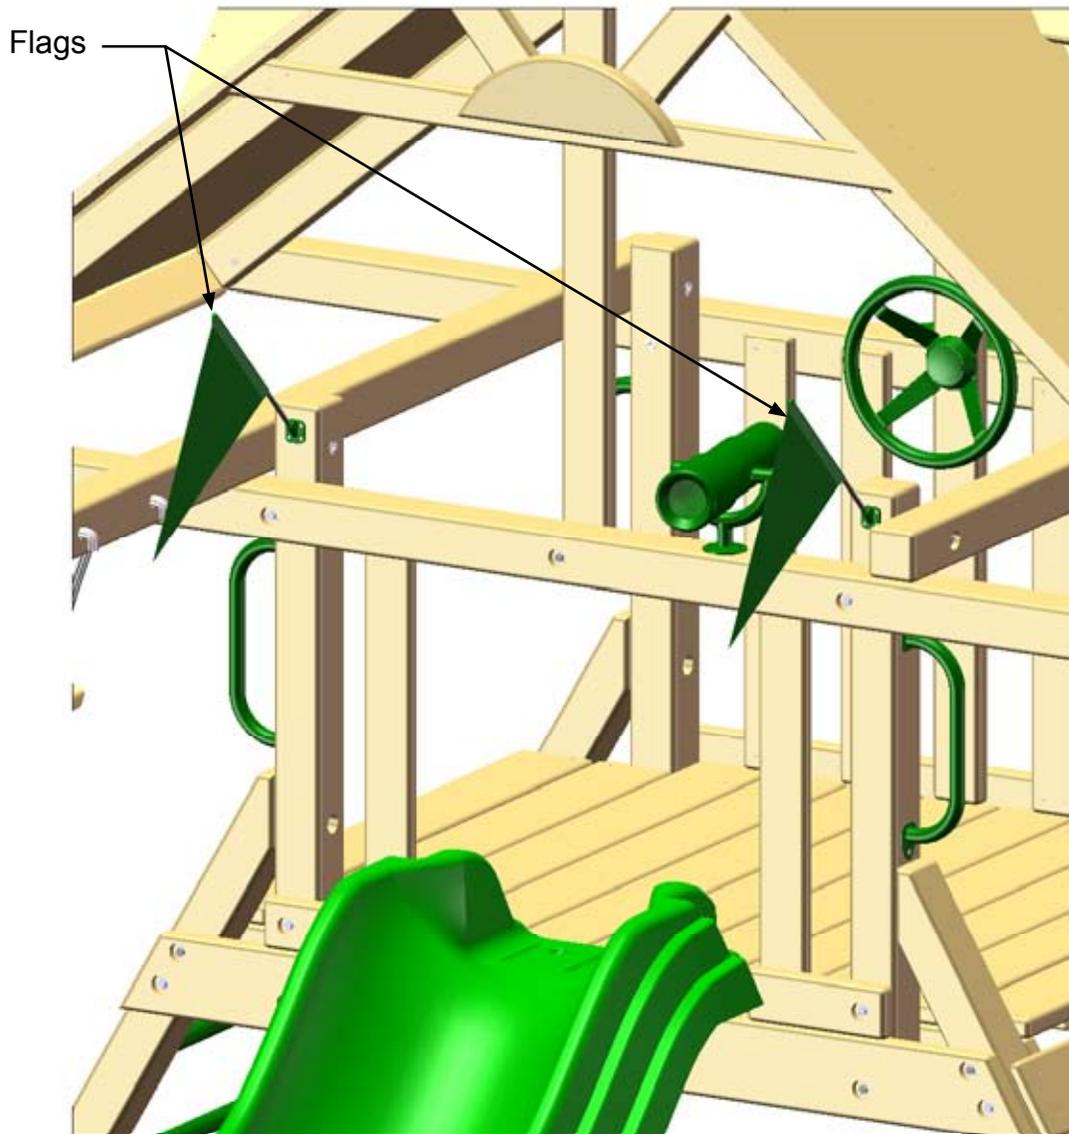

## Step 50: Gorilla Name Plate

- 1: Attach the Gorilla Name Plate to the middle of the Swing Beam with two 2" wood screws.
- 2: Your play set is finished! Enjoy your play set!

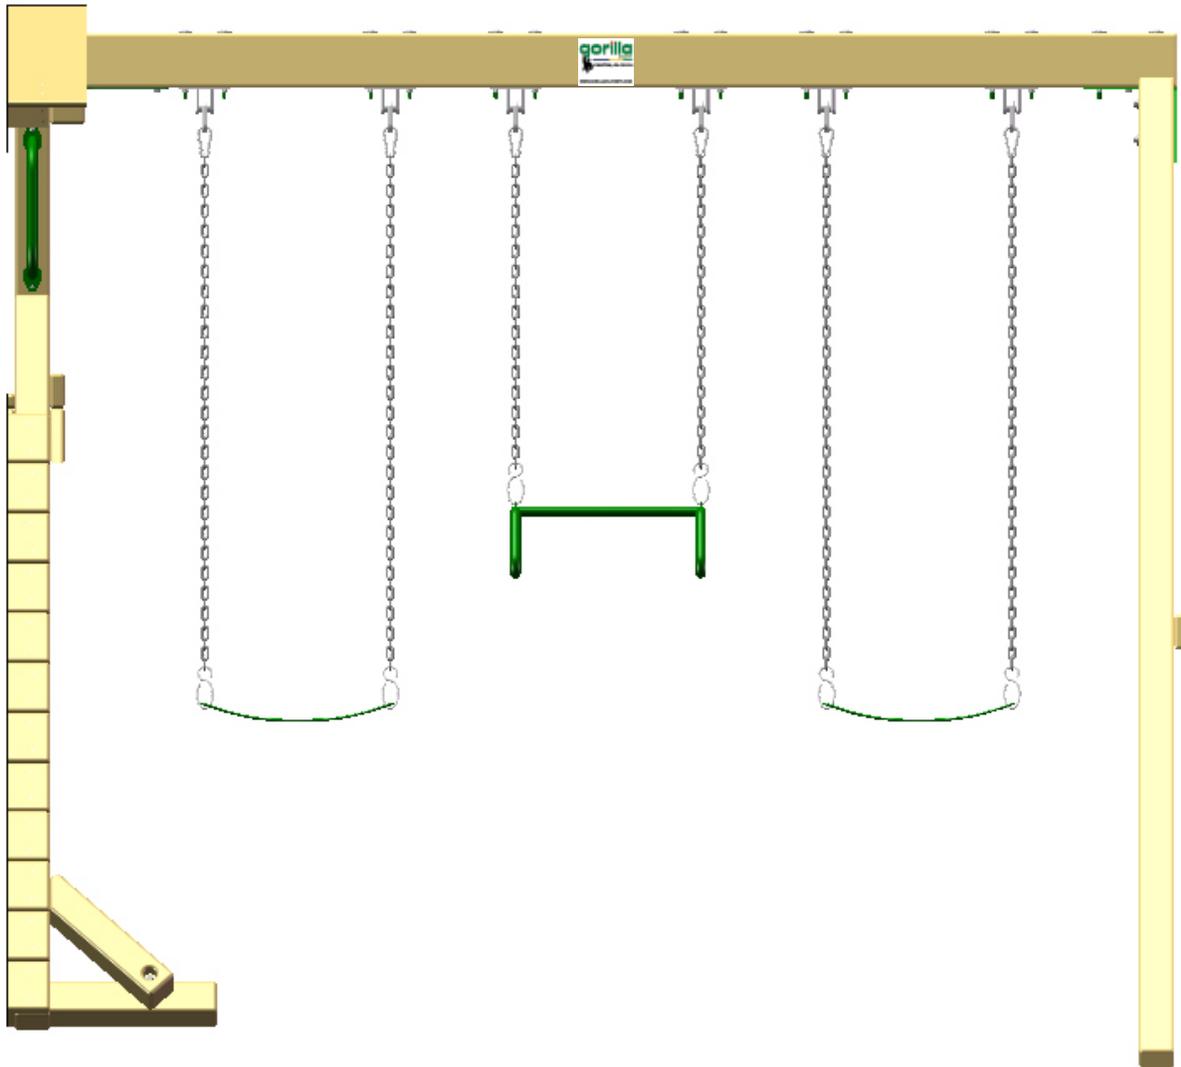

## WARRANTY REGISTRATION CARD -Sunscape

Go to [www.gorillaplaysets.com/category-s/112.htm](http://www.gorillaplaysets.com/category-s/112.htm) to fill out our online registration and save a stamp! If you do not have internet access, fill out this form and return it to us to complete your registration.

Name: \_\_\_\_\_

Address: \_\_\_\_\_

City, State, Zip: \_\_\_\_\_

Email: \_\_\_\_\_

Date of Purchase: \_\_\_\_\_

Place of Purchase: \_\_\_\_\_

City, State, Zip: \_\_\_\_\_

Please, check the boxes below.

Your age?

- 18-25  26-30  31-35  36-40  41-45  46-50  51-55  56-60  
 61-65  66+

How old are your children?

- 2-3  4-5  6-7  8+

How would you rate the quality of our product?

- Excellent  Above average  Average  Below average  Poor

Would you recommend this product?

- Yes  No

Comments:

---

---

---

Thank you for registering with Gorilla Playsets™! The information you provided will be kept confidential and will ONLY be used to better serve our customers. Remove this page from the manual and mail to the address below. Thank you from everyone here at Gorilla Playsets™!

Mail to:

**Gorilla Playsets**  
**190 Etowah Industrial Court**  
**Canton, GA 30114**  
**or fax: (678) 880-3329**

